 


## TECHNICAL PARAMETER

Model No .	Power (W)			Air Speed (m/s)			Air Volume (m <sup>3</sup> /h)	Noise (dB / A)			Net Weight (kg)
	HI	MED	LOW	HI	MED	LOW		HI	MED	LOW	
MU-EMP 09	295	217	175	15	12.5	10	1020	53	52	50	17.2
MU-EMP 12	360	272	235				1360	54	53	51	20.9
MU-EMP 15	455	333	272				1700	56	54	53	28.0

NOTE: Rated voltage and frequency are stated as per rating label.

## WIRING DIAGRAM

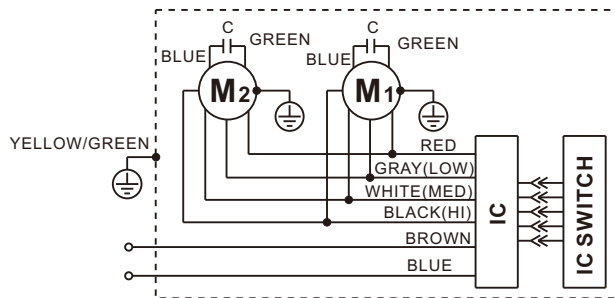

## MAINTENANCE PRECAUTIONS

 
1. First, ensure that the air curtain is switched off.
2. Never use petrol, benzene, thinner or any other such chemicals for cleaning the air curtain.
3. Do not allow water to contact electrical parts such as motor or switch.
4. Do not immerse impeller and other plastic parts in hot water over 60°C.

## WARNING

If the product is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

MUNDOCLIMA®

## IN-CEILING TYPE AIR CURTAIN

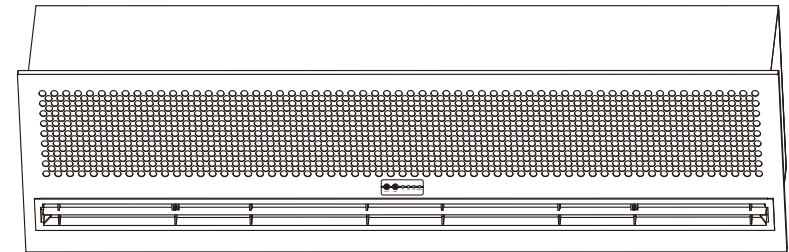

## OPERATING INSTRUCTIONS

Codes EC06467 to EC06469  
English

**Before using this unit, please read these instructions completely.**

## INSTALLATION CAUTIONS

1. Application environment: (a) 1000 meters below sea level; (b) Ambient temperature between  $-10^{\circ}\text{C} \sim 40^{\circ}\text{C}$ ; (C) Relative Humidity  $\leq 90\%$ .
2. Please mounted the air curtain to the solid place, to ensure the safety when there is vibration during operation. If the air curtain is installed indoors, please make sure the installation height should be above 2.3 meters from the ground.
3. Please do not install the air curtain in the environment of high temperature or high humidity or exposure gas or corrosive materials.

## PRODUCT COMPARISON

Recessed Air Curtains are designed for indoor ceiling fitment, supplement the technical defect for the normal air curtains are installed for ceiling fitment as well as energy-saving.

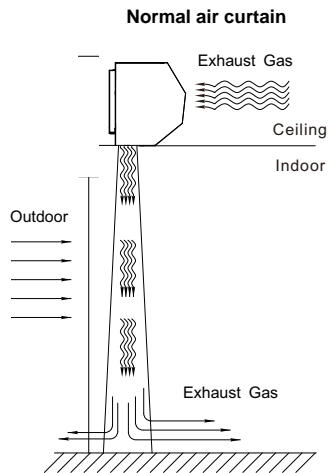 


Fig.1

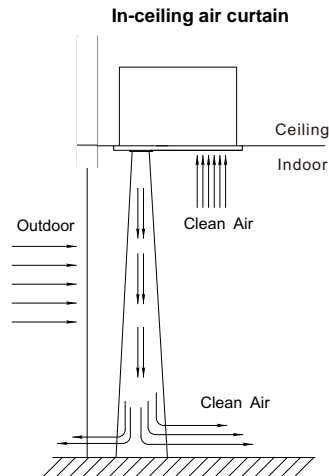 


Fig.2

## INSTALLATION

There are 2pcs hooks (totally 4pcs) on the side board, installation information as below (Attention: outlet should near the door direction):

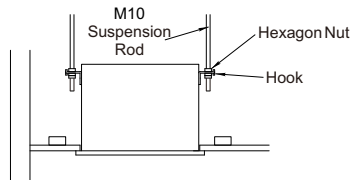 


Fig.3


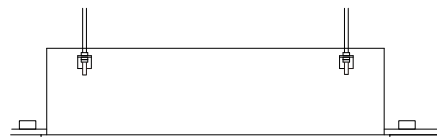 


Fig.4

## EXTERNAL DIMENSION

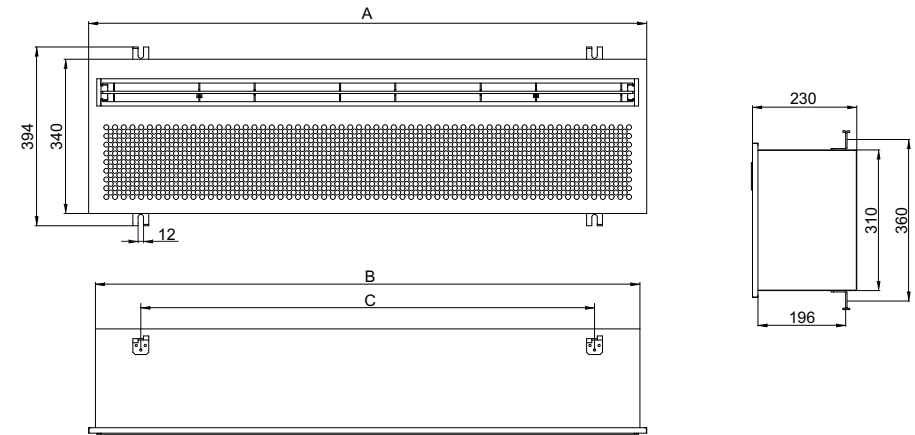 

Units: mm

Model No .	A	B	C
MU-EMP 09	930	900	700
MU-EMP 12	1230	1200	1000

Units: mm

Model No .	A	B	C
MU-EMP 15	1530	1500	1300

## OPERATION

Below instructions could be carried out when electric power supply and proper installation are ensured.

Operation of with remote controller:

1. Working with remote controller: (Fig. 5)

Operate the remote controller towards the receiver box. When it is 6 meter (within 60 angle) away from the air curtain, press the "on/off" button for high setting (default); Press "high/mid/low" for options of high/mid/low air speed. Now the indicator light of high/mid/low flashes. Press "on/off" to turn the unit off.

2. Working with receiver box: (Fig. 6)

Press "on/off" and "high/mid/low" for options of on, off and air speed.

 


Fig.5

 


Fig.6