

AIR CURTAIN


User and installation manual

MU-ALU



This unit must be installed by a professional according CE 795/2010.


1. IDENTIFICATION & INSTALLATION DIMENSIONS

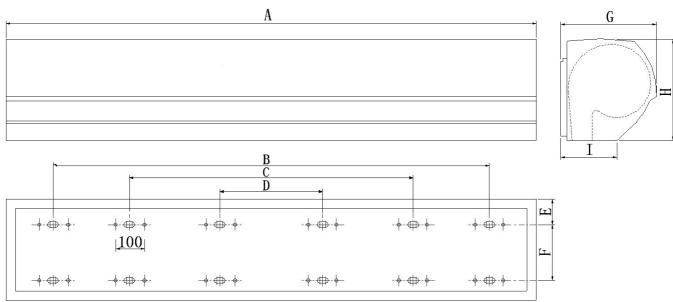


MODEL	Α	В	С	D	Ε	F	G	Н	I
MU-ALU 09	900		695			100			
MU-ALU 12	1200		990	295	74		215	230	123
MU-ALU 15	1500		1285	504					
MU-ALU 18	1800	1580	885	210					
MU-ALU 20	2000	1580	885	210					

2. INSTALLATION CAUTION


Must follow the following asking when installing air curtain :

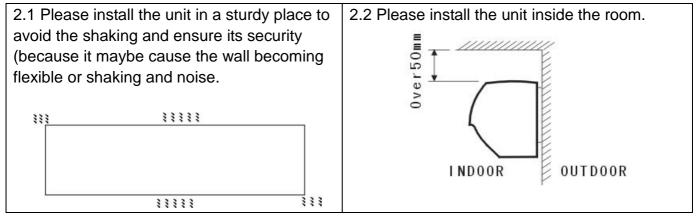

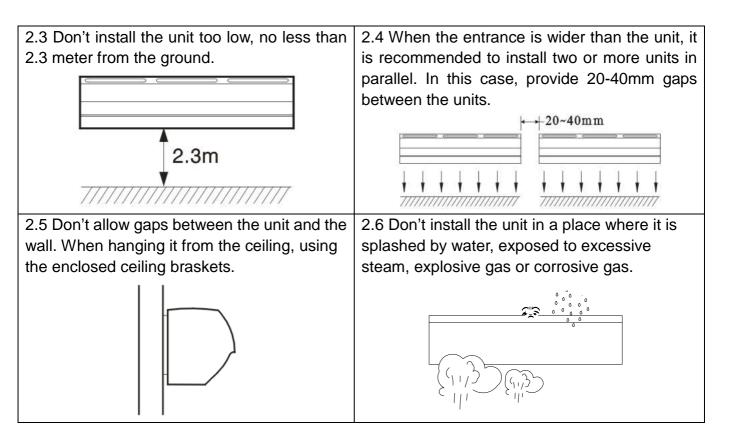


3. INSTALLATION


A. Installing on the concrete wall:

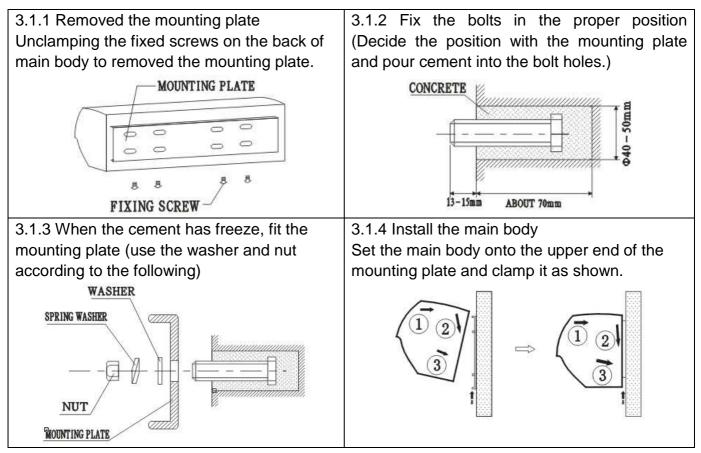


B. Installing on the wooden wall

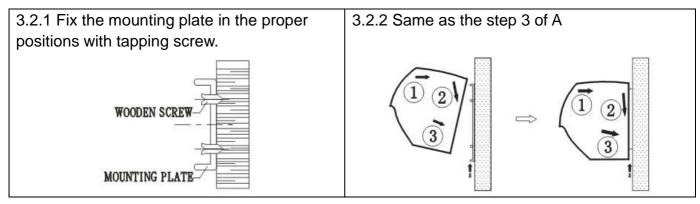

C. Hanging from the ceiling

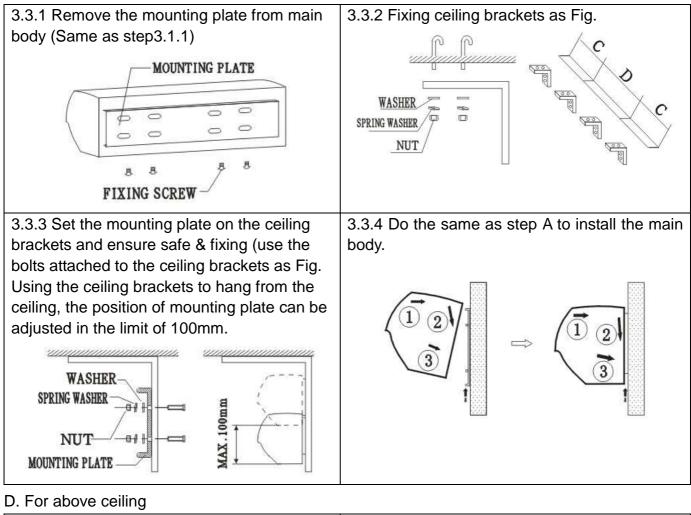


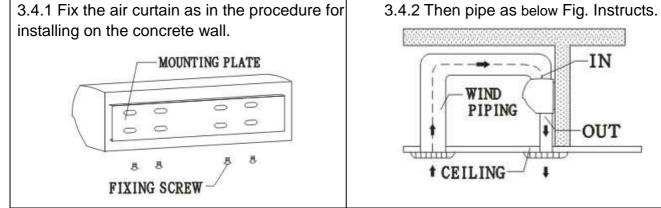

4. TECHNICAL PARAMETER

Model	Volt. (V~)	Freq (Hz)	Max input power (W)		Max air speed (m/s)		Air volume (m ³ /h)		Noise (dB)		Net weight (Kg)
			Н	L	н	L	Н	L	н	L	
MU-ALU 09			230	200			1100	900	52	49	13
MU-ALU 12			290	260			1500	1200	53	50	15.5
MU-ALU 15	220	50	380	350	16	13	1900	1500	55	52	20
MU-ALU 18			450	420			2280	1800	57	55	23.5
MU-ALU 20			470	440			2520	2100	58	56	27

5. ELECTRIC WORK

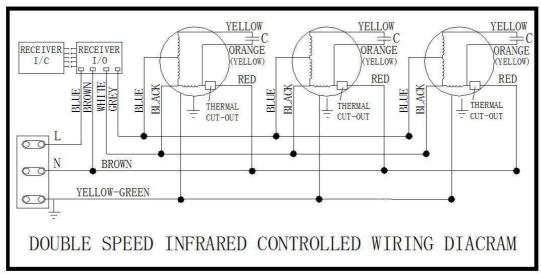

6. OPERATION

- 6.1 Turn on the power switch
- 6.2 Select the best speed: High[H], Low[L]
- 6.3 According to the installation place to adjust the wind direction parts to obtain the best effect.

7. CAUTIONS

- a) Use the unit at the rated voltage and frequency indicated on the nameplate.
- b) Disconnect power source before unit operation.
- c) Routing maintenance must be done every year.
- d) Never use petrol, benzene, thinner or any other such chemical for clearing the unit.

e) Don't allow water or anything enter the motor.

f) When power supply comes from socket, the plug must accord with IEC335-1. When the power cord is connected with charging line directly, all polarity switches that the contact gap is 3mm at least must be installed in the charging line.

MUND CLIMA®

ASK FOR MORE INFORMATION:

Phone: +34 93 446 27 80 - Fax: +34 93 456 90 32 eMail: mundoclima@salvadorescoda.com

TECHNICAL ASSISTANCE:

Phone: +34 93 652 53 57 - Fax: +34 93 635 45 08