

INVERTER SERIE HF

Service manual

MUCR-HF
MUCSR-HF
MUECR-HF



Contents

Part 1 General Information	3
Part 2 Indoor Units	5
Part 3 Outdoor Units	33
Part 4 Installation	41
Part 5 Troubleshooting	64

※The specifications, designs, and information in this book are subject to change without notice for product improvement.

Part 1

General Information

1. Model Lists.....	4
2. External Appearance.....	4
2.1 Indoor Units	4
2.2 Outdoor Units	4

1. Model Lists

R410A		Model	
Type	Function	48	60
Super-slim Four-way cassette	Cooling and heating	●	●
Duct	Cooling and heating	●	●

2. External Appearance

2.1 Indoor Units

Duct



Super-slim Four-way Cassette



2.2 Outdoor Units

Centrifugal outdoor unit



Part 2

Indoor Units

Super Slim Cassette Type.....	6
Duct Type.....	20


Super Slim Cassette Type

1. Features	7
2. Dimensions.....	11
3. Service Space	12
4. Wiring Diagrams.....	13
5. Air Velocity and Temperature Distributions(Reference Data).....	14
6. Electric Characteristics	15
7. Sound Levels.....	16
8. Accessories	17
9. The Specification of Power	18
10.Field Wiring.....	19

1. Features

1.1 Overview


- Compact design, super slim body size, less space requiring in installation
- Each louver can be separately controlled, more comfort air blowing is possible.
- Auto-lifting panel design, more convenient to clean and maintain the filter. (optional)

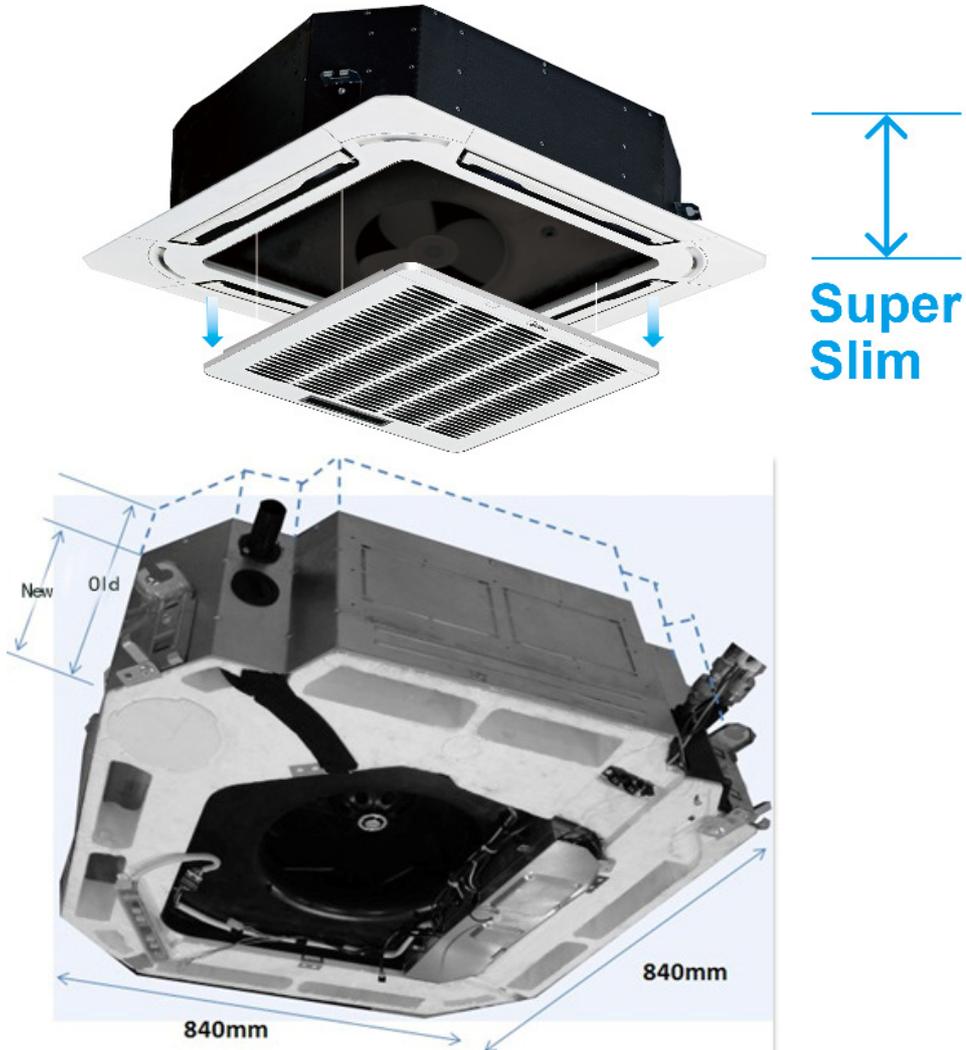

	Old Cassette	New slim cassette	Volume change
Dimension	48 / 60 → 840*300*840	48 / 60 → 840*245*840	18%↓


1.2 Fresh air intake function

- Fresh air fulfills air quality more healthy and comfortable.
- Ventilation motor is optional to increase the effect of fresh air.

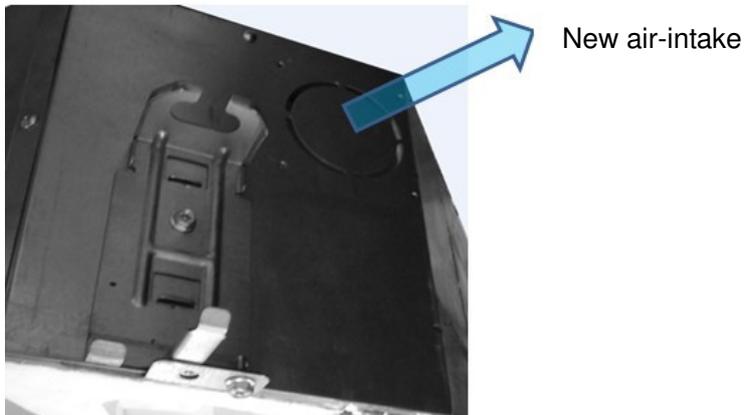

1.3 Optional ionizer generator

- Ionizer generator is optional to get refreshing air to your room.

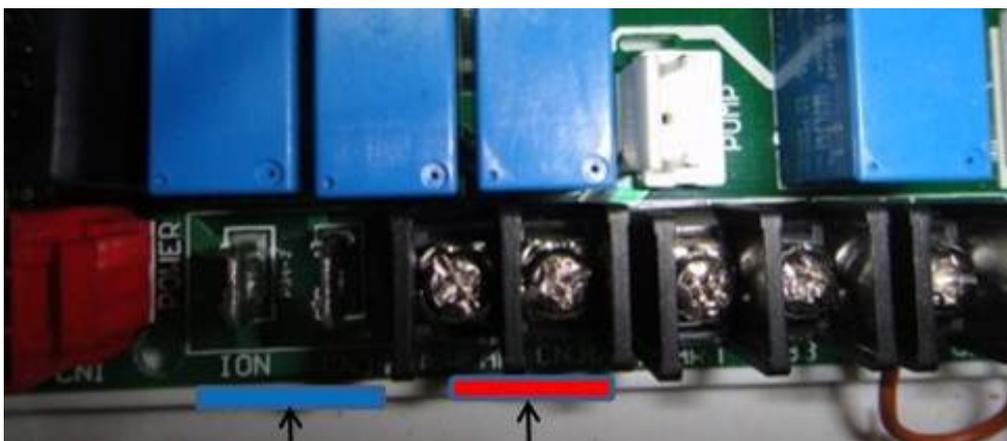

Ionizer generator
connector


Ventilation motor
connector

- Ionizer can be switched on or off by remote controller. When pressing the Clean Air button on the remote controller, ionizer will work and the indicator light on display board will shine.




1.4 External air duct design

- Reserve external air duct, more flexible for the air supply.

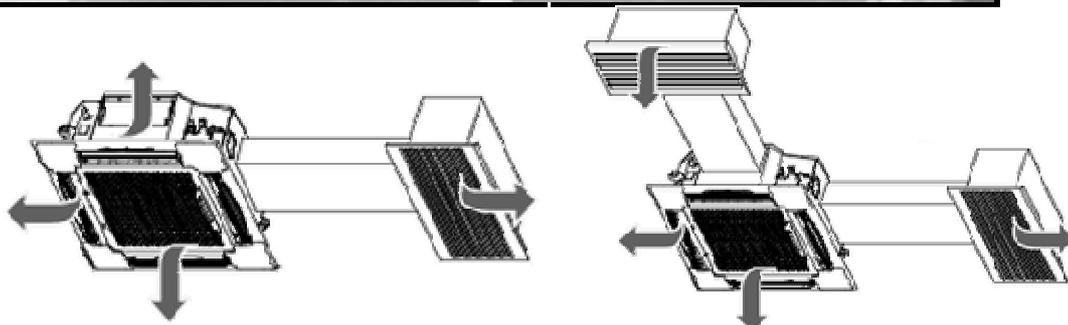


1.5 Built-in draining pump

- Due to the improvement of structure, more convenient to repair or replace the draining pump.

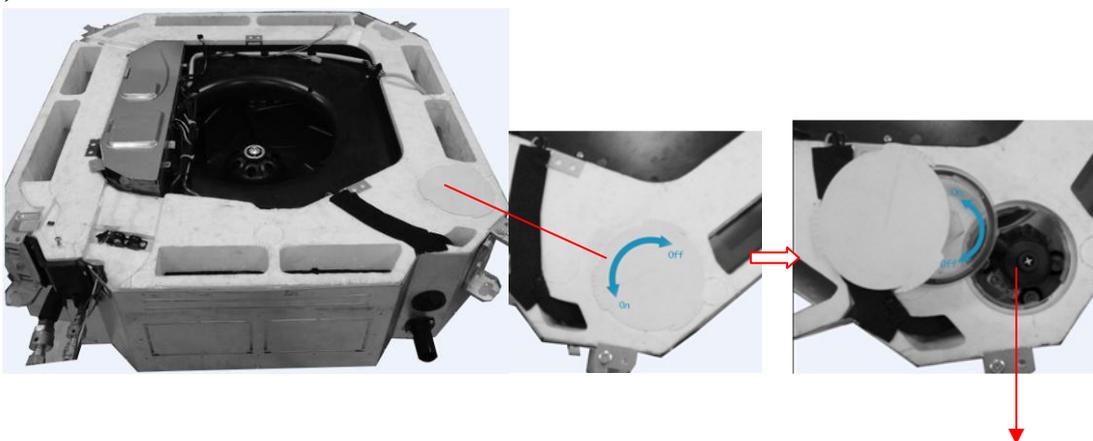


Draining Pump

- Built-in draining pump to make sure condensed water drain out reliably.

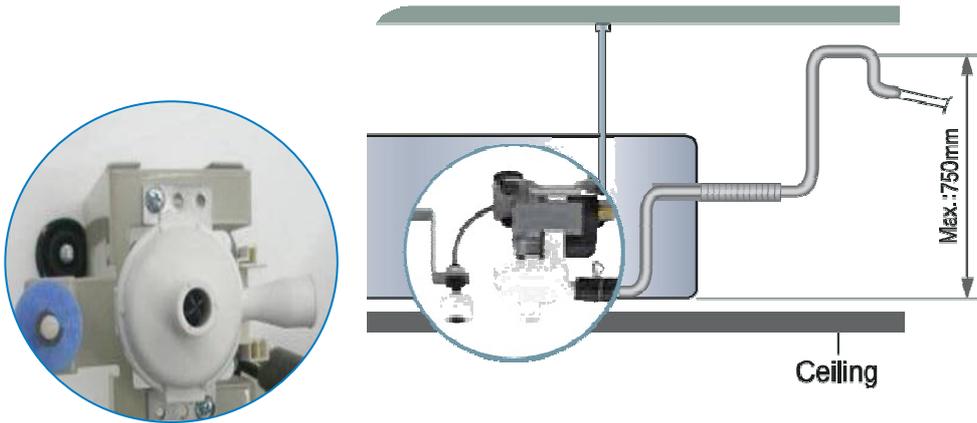

1.6 Terminals for alarm lamp and long-distance on-off controller connection are standard

- Reserve terminals for the connection of alarm lamp and long-distance on-off controller, more human control.


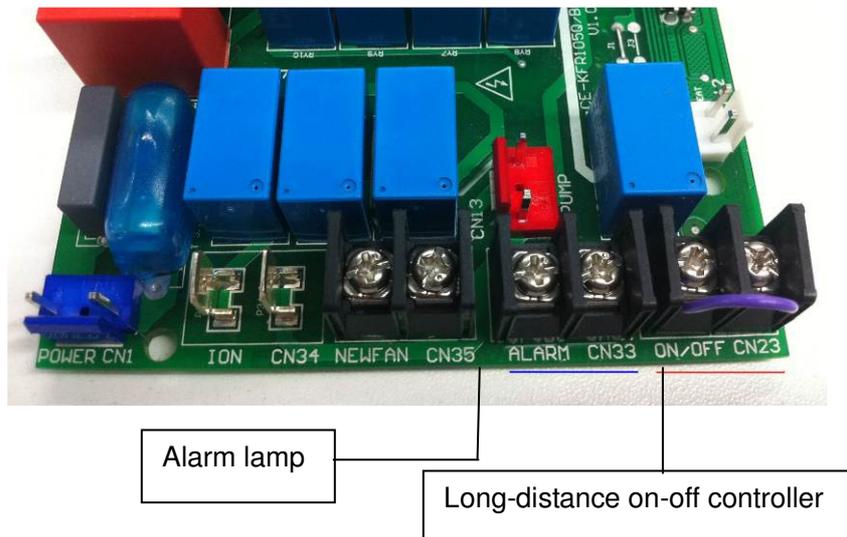


1.7 Optional touch screen wired controller

- Touch screen wired controller is optional, with error code indication function. Better man-machine conversation interface.
- Undated structure design, 4-way wire layout design, no raised part at backside, more convenient to place the wires and install the device.




2. Dimensions

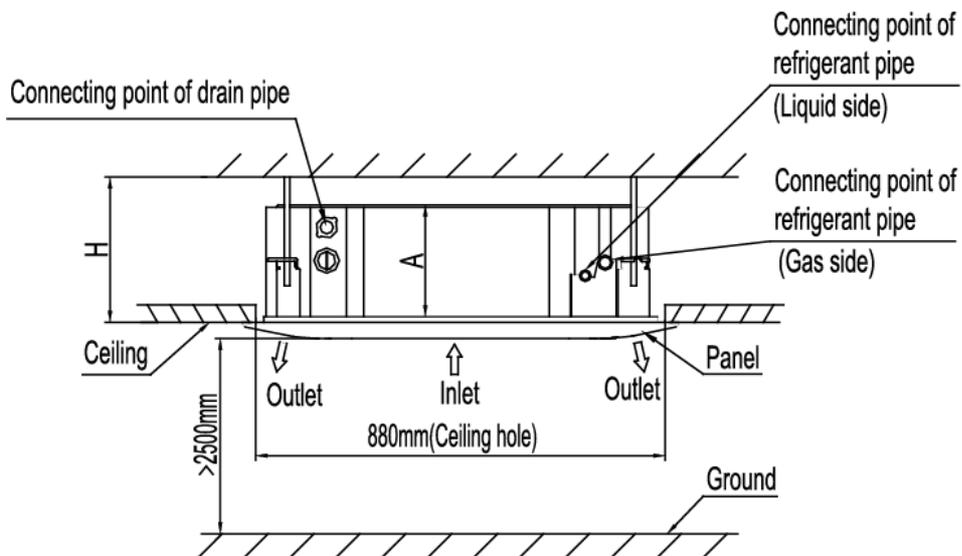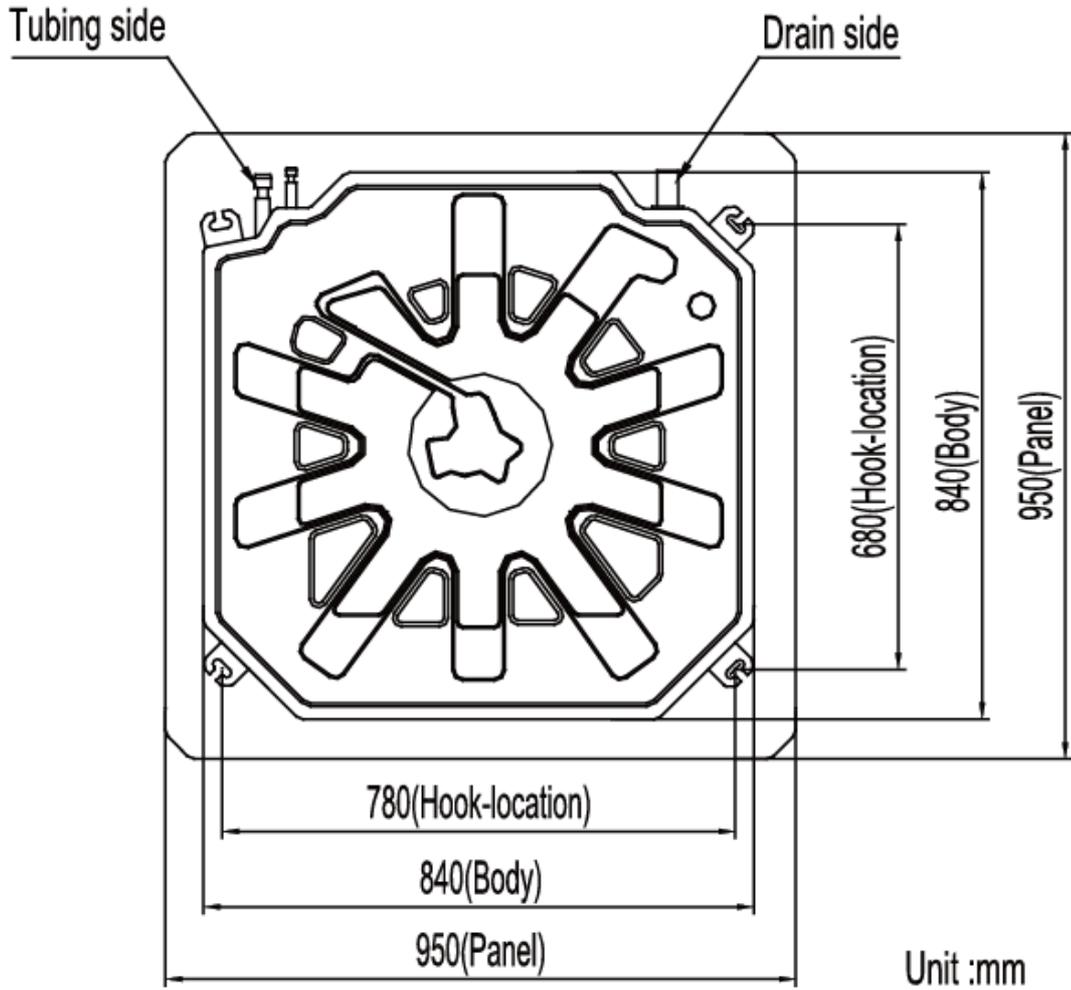

Model	A	H
MUCSR- 48-HF	287	>317
MUCSR- 60-HF	287	>317


3. Service Space

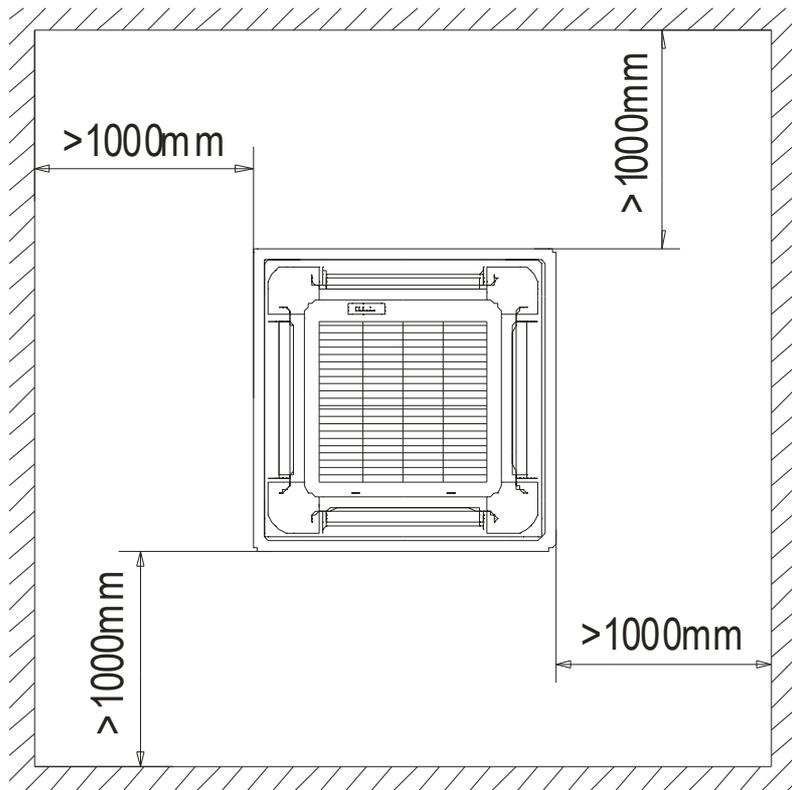


4. Wiring Diagrams

MUCSR-48-HF (UI20605)

MUCSR-60-HF (UI20606)

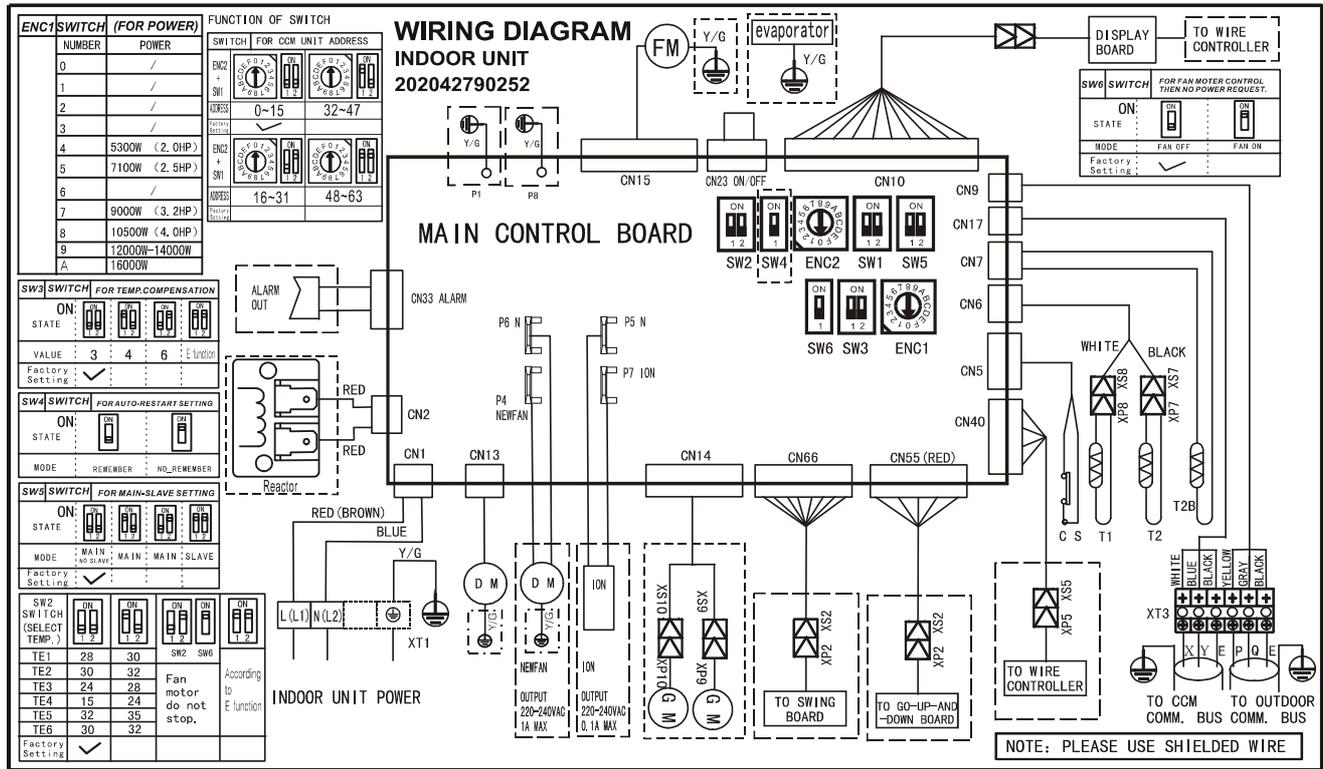

5. Air Velocity and Temperature Distributions(Reference Data)

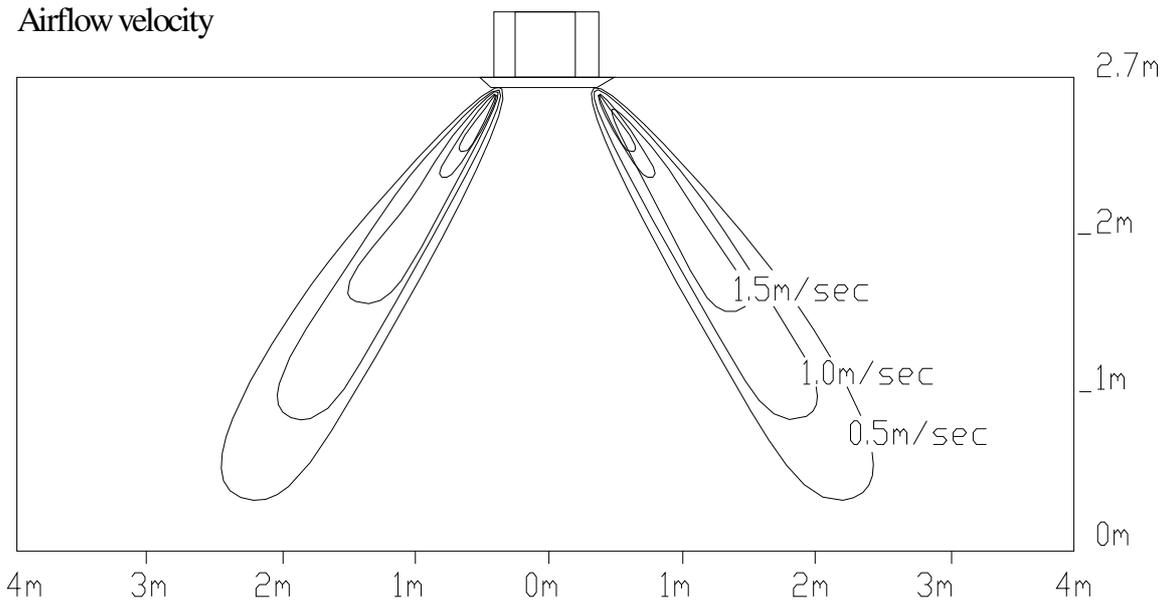


6. Electric Characteristics

Model	Indoor Unit				Power Supply
	Hz	Voltage	Min	Max	MFA
MUCSR- 48-HF	50	220-240	198	254	15
MUCSR- 60-HF	50	220-240	198	254	15

Notes:

MFA: Max. Fuse Amps. (A)

7. Sound Levels

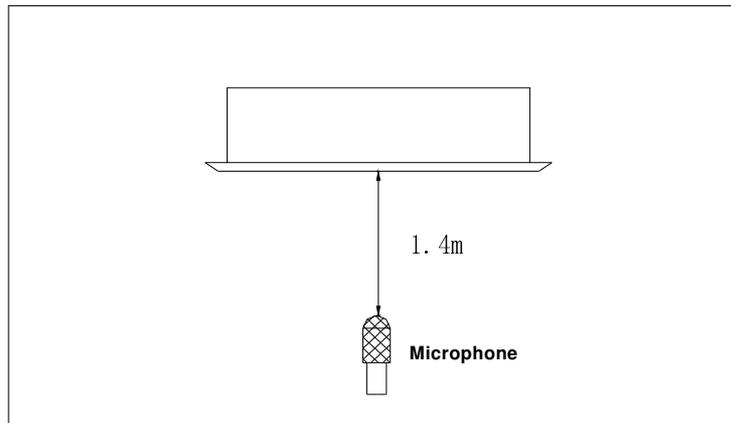

Model	Noise level dB(A)		
	H	M	L
MUCSR- 48-HF	58	54	51
MUCSR- 60-HF	58	54	51

8. Accessories


	Name	Shape	Quantity
INSTALLATION FITTINGS	Installation paper board		1
	Bolt M5		4
Tubing & Fittings	Soundproof / insulation sheath		2
Drainpipe Fittings	Out-let pipe		1
	Out-let pipe sheath		1
	Out-let pipe clasp		1
Remote controller & Its Frame	Remote controller & Its Frame		1
	Remote controller holder		1
	Mounting screw(ST2.9×10-C-H)		2
	Remote controller manual		1
	Alkaline dry batteries (AM4)		2
Others	Owner's manual		1
	Installation manual		1
	Network wires		1
Installation accessory (The product you have might not be provided the following accessories)	Expansible hook		4
	Installation hook		4
	Orifice		1

9. The Specification of Power

Model(Btu/h)		48 / 60
INDOOR UNIT POWER	Phase	1-phase
	Frequency and Voltage	220-240V, 50Hz
	POWER WIRING (mm ²)	3×1.0
	CIRCUIT BREAKER (A)	15
OUTDOOR UNIT POWER (Centrifugal Outdoor Unit) (MUECR-48/60-HF)	Phase	3-phase
	Frequency and Voltage	380-415V, 50Hz
	POWER WIRING (mm ²)	5×2.5
	CIRCUIT BREAKER (A)	40
Indoor/Outdoor Connecting Wiring (Weak Electric Signal) (mm ²)		3×0.5
Indoor/Outdoor Connecting Wiring (Strong Electric Signal) (mm ²)		—————

10. Field Wiring

MUCSR-48-HF (UI20605)
 MUCSR-60-HF (UI20606)

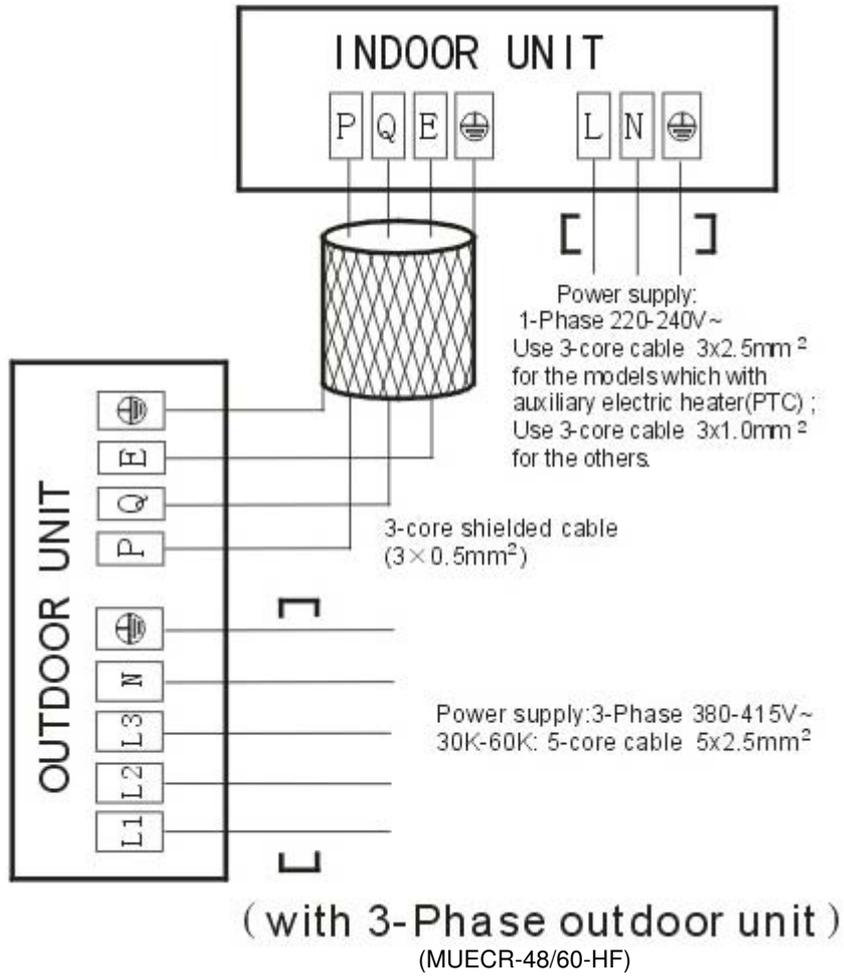


Duct Type

1. Features.....	21
2. Dimensions	24
3. Service Space.....	25
4. Wiring Diagrams	26
5. Static Pressure.....	27
6. Electric Characteristics	28
7. Sound Levels.....	29
8. Accessories.....	30
9. The Specification of Power	31
10. Field Wiring	32

1. Features


1.1 Installation accessories: (Optional)

- Front Board, Canvas Air Passage, Filter, Panel, for easy installation

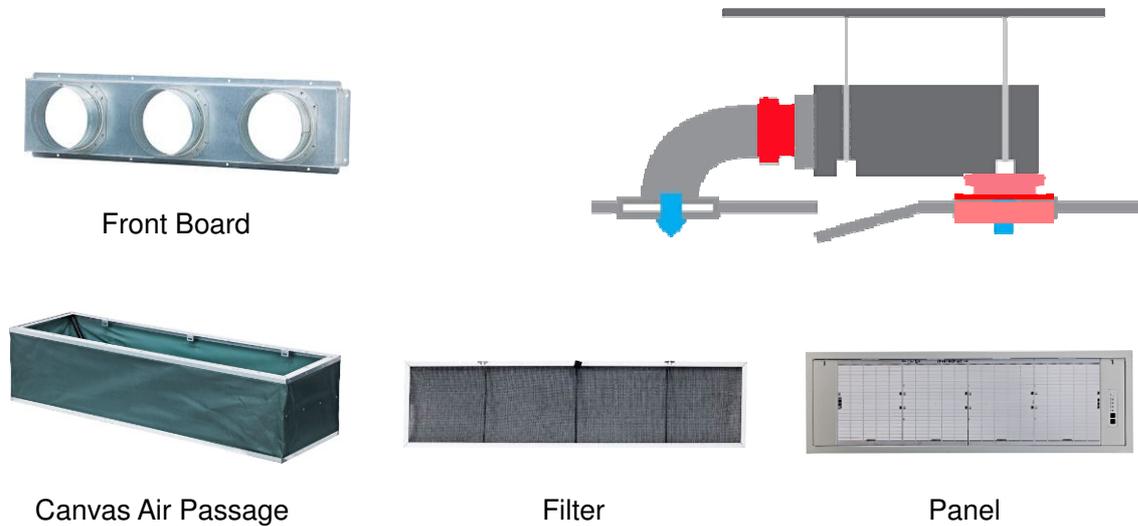


1.2 Easy Installation: Two air inlet styles (Bottom side or Rear side)

- Air inlet from rear is standard for all capacity; air inlet from bottom is optional.
- The size of air inlet frame from rear and bottom is same, it's very easy to move the cover from bottom to rear side, or from rear to the bottom, in order to matching the installation condition.

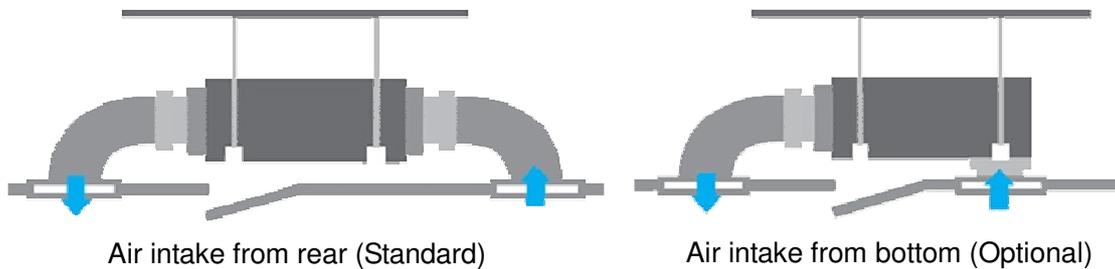


1.3 Fresh air intake function (Optional for 48~60)

- Install one duct from the reserved fresh-air intake to outdoor. Continually inhale the fresh air to improve the quality of the indoor air, fulfills air quality more healthy and comfortable.

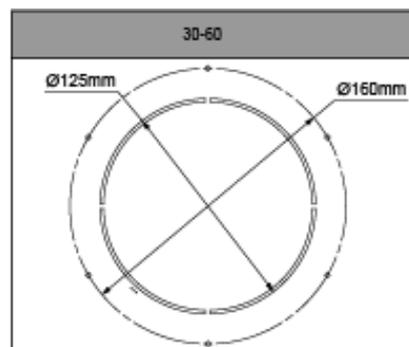


1.4 Easy maintenance

- Clean the filter (Optional, standard product without filter)
It is easy to draw out the filter from the indoor unit for cleaning, even the filter is installed in rear side or bottom side.

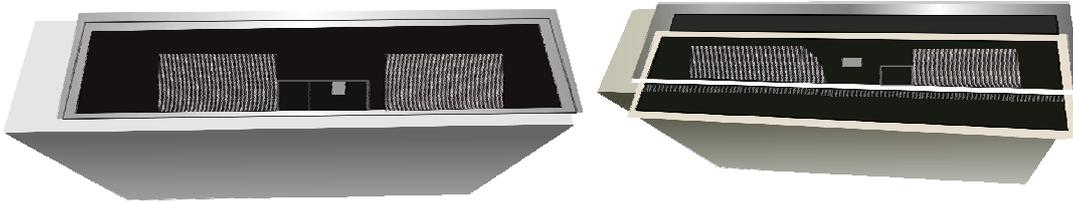


- Replace the motor or centrifugal fan
Remove the ventilated panel firstly. Remove a half of blower housing and take out the motor with centrifugal fan. Directly remove two bolts, and then replace the motor or centrifugal fan easily.

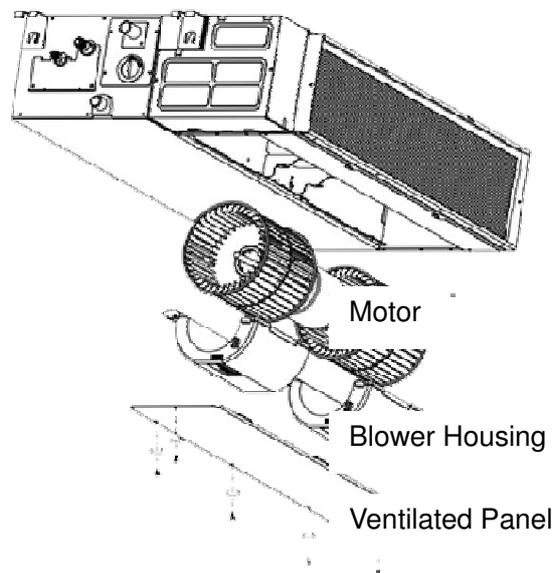

1.5 Reserved remote on-off and central control ports



- Reserved remote on-off ports and central control ports, can connect the cable of an on-off controller or a central controller to realize remote on-off control function or group control function.

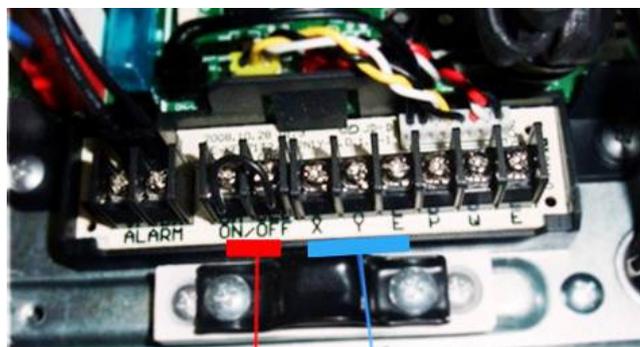

Remote on-off ports Central control ports

1.6 Built-in drain pump (Optional):


- Built-in drain pump can lift the water to 750mm upmost. It's convenient to install drainage piping under most space condition.

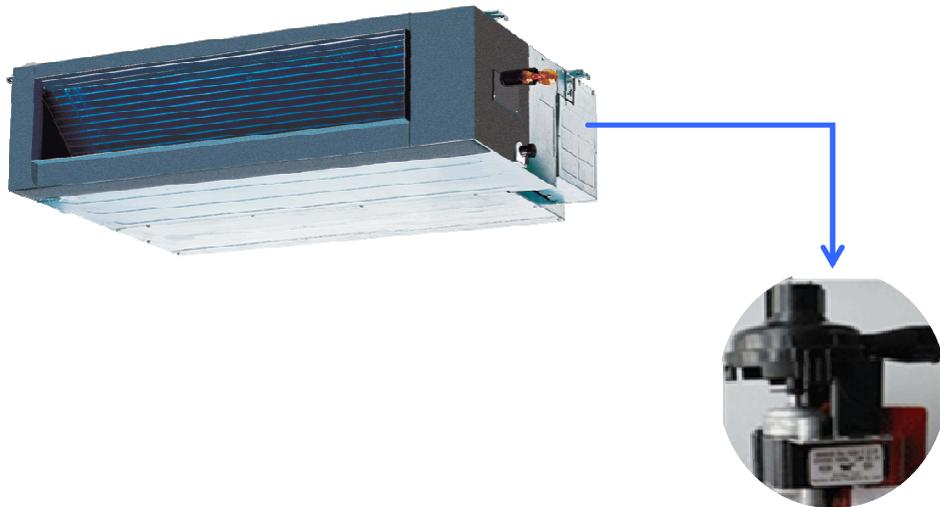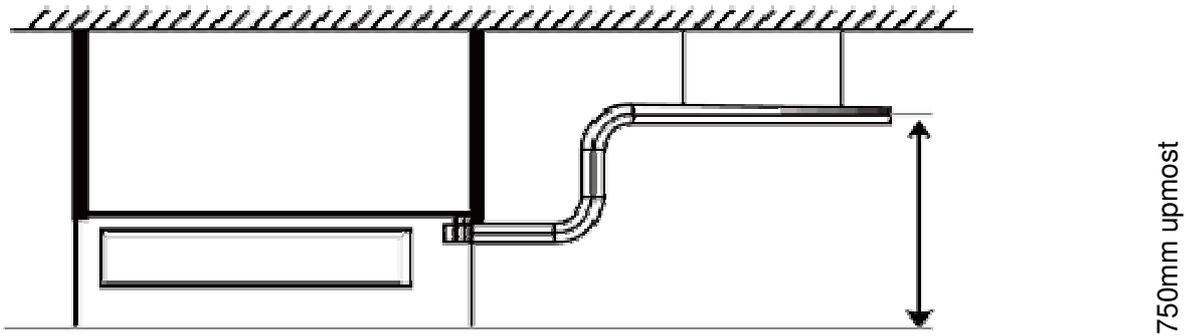


1.7 Built-in display board

- The standard indoor unit can be controlled by wired controller.
- There is a display board with a receiver in the E-box. Move out the display, and fix it in other place, even in the distance of 10m. The unit will realized remoter control.
- The wired controller and the display board can display the error code or production code when the chips detect some failure.




Wired Controller (Standard)

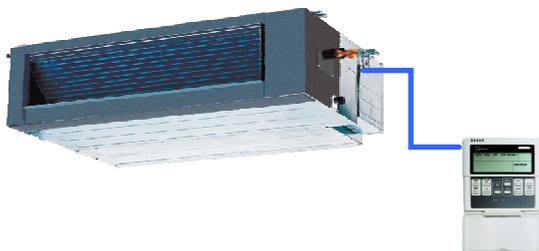

Remote Controller (Optional)

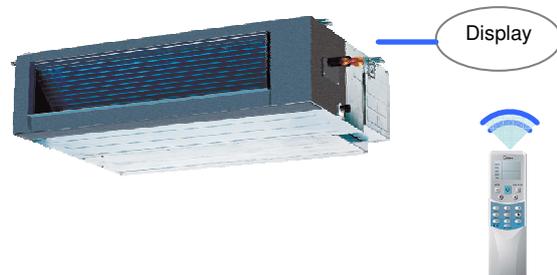


2. Dimensions

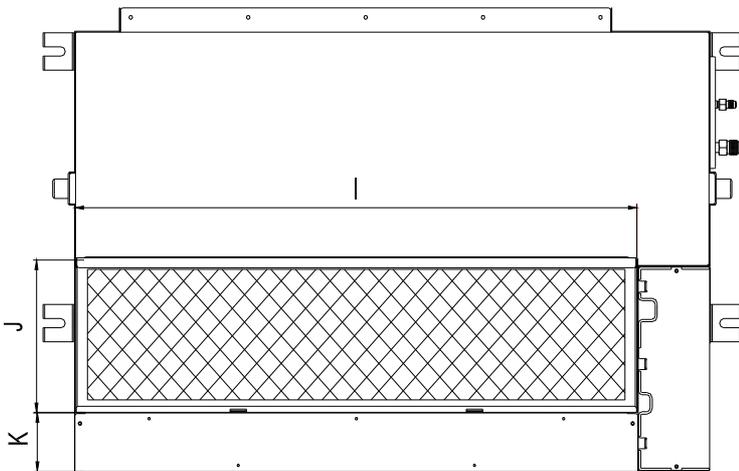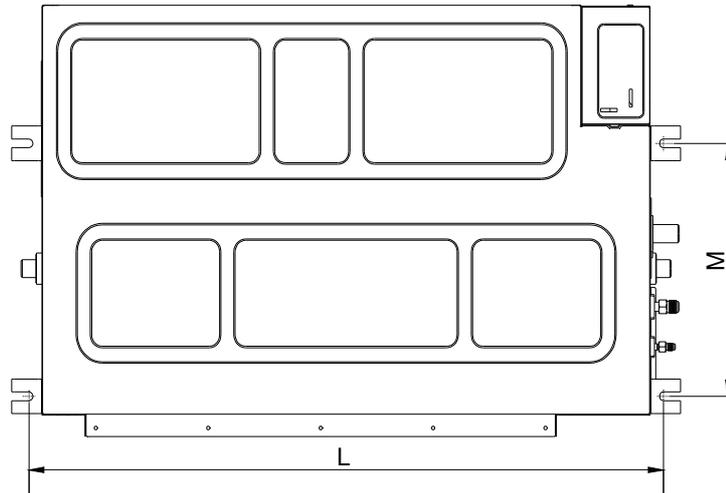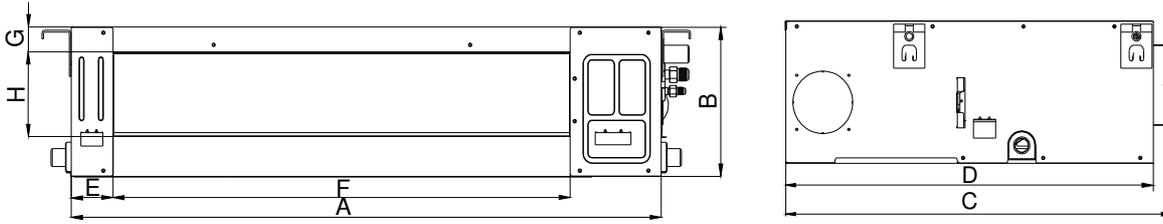



Model	Outline dimension(mm)				Air outlet opening size				Air return opening size			Size of outline dimension mounted plug	
	A	B	C	D	E	F	G	H	I	J	K	L	M
MUCR-48-HF	1200	300	865	800	80	968	40	204	1094	288	45	1240	500
MUCR-60-HF	1200	300	865	800	80	968	40	204	1094	288	45	1240	500

3. Service Space

Ensure enough space required for installation and maintenance.

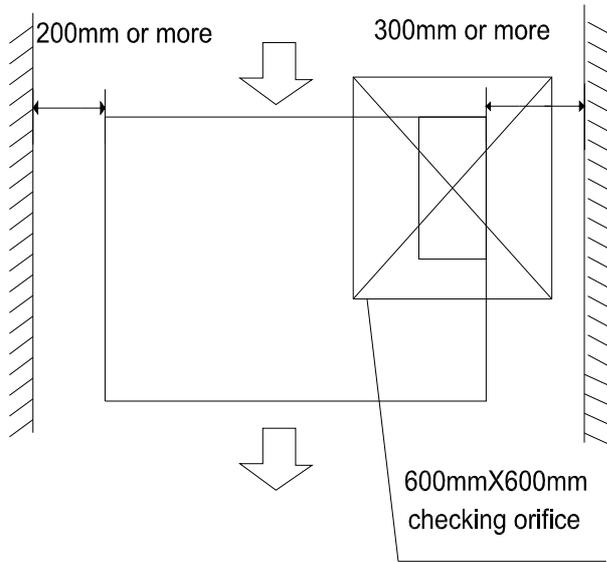


All the indoor units reserve the hole to joint the fresh air pipe. The hole size as following:

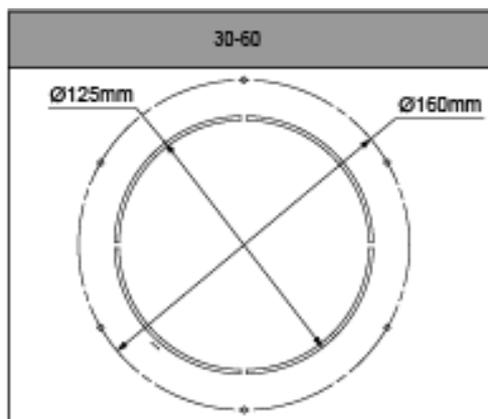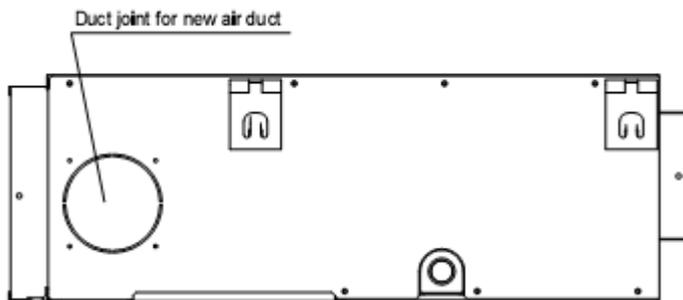

4. Wiring Diagrams

MUCR-48-HF (UI20601)
MUCR-60-HF (UI20602)

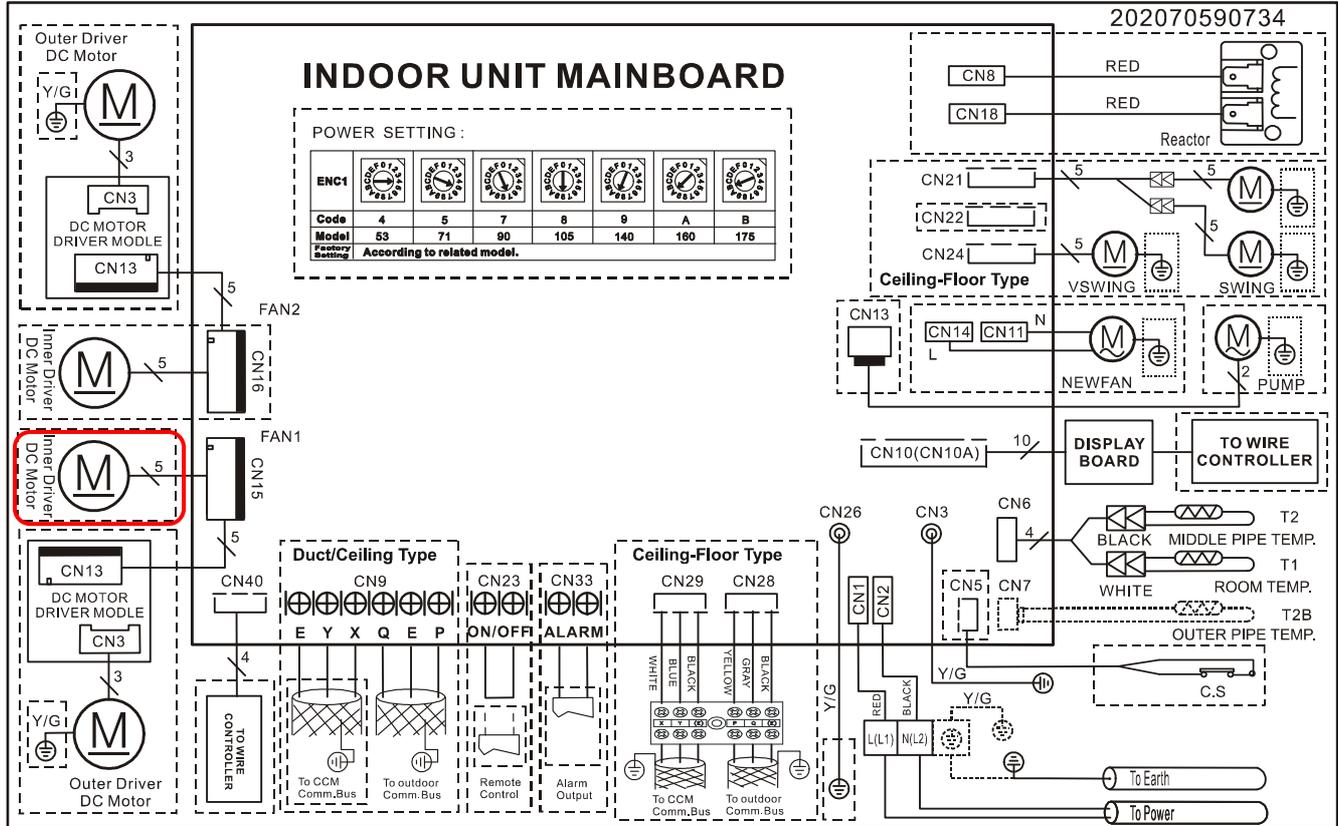

ENC1							
CODE	4	5	7	8	9	A	B
Power	53	71	90	105	140	160	175
FACTORY SETTING	ACCORDING TO RELATED MODEL.						

SW1				
MODE	MAIN NO SLAVE	MAIN	MAIN	SLAVE
FACTORY SETTING	✓			

S1+S2								
CODE	0~F	ON	0~F	ON	0~F	ON	0~F	ON
NETADDRESS	0~15		16~31		32~47		48~63	
FACTORY SETTING	✓							

SW2		
MODE	FAN OFF	FAN ON
FACTORY SETTING	✓	

ENC2					
Code	0	1	2	3	4
HIGH STATIC PRESSURE	0~50	51~80	81~120	121~150	>150
MIDDLE STATIC PRESSURE	0~25	26~37	38~50	51~100	>100
FACTORY SETTING	✓				

SW6				
DUCT TYPE	3°C	4°C	6°C	
CEILING AND FLOOR TYPE	1°C	4°C	6°C	According to E Function
FOR SETTING CEILING TYPE OR FLOOR TYPE	FLOOR TYPE		CEILING TYPE	
FACTORY SETTING	✓			


SW3		
AUTO-RESTART	ACTIVE	INACTIVE
FACTORY SETTING	✓	

SW4		
Mode	Single Fan	Double Fan
FACTORY SETTING		✓


FUNCTION SETTING INDICATION
202070290383

5. Static Pressure

MUCR-48-HF (UI20601)

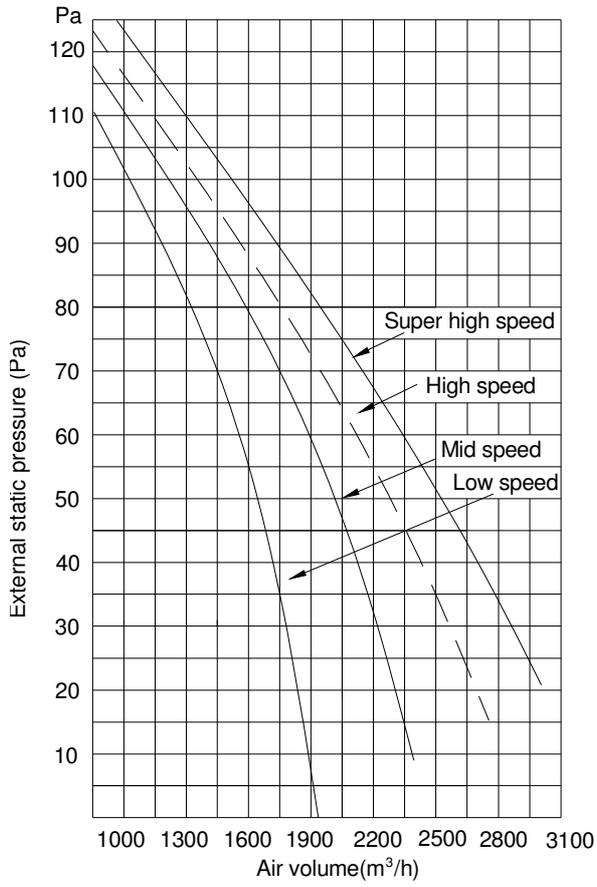

MUCR-60-HF (UI20602)

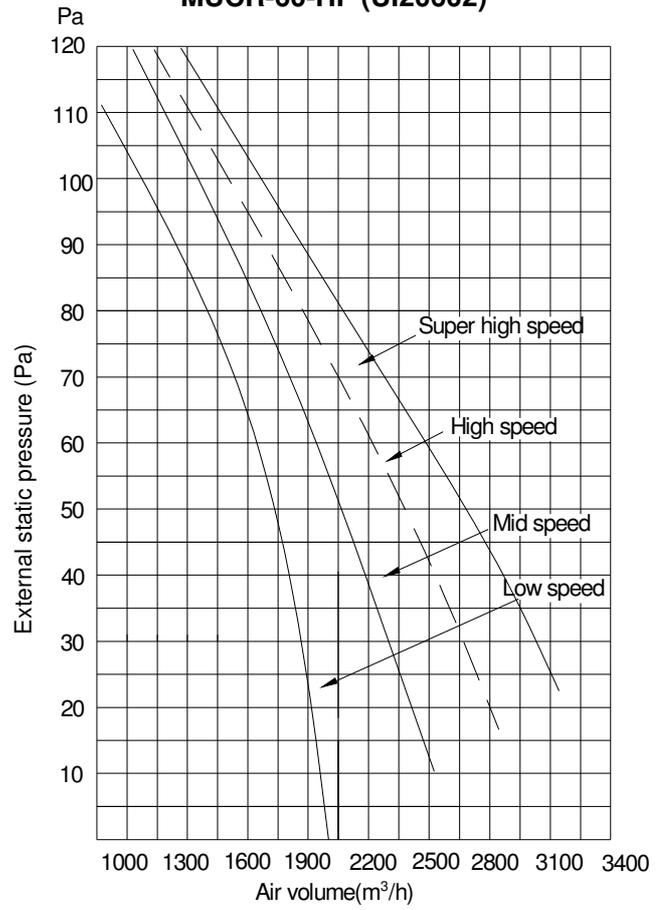


6. Electric Characteristics

Model	Indoor Unit				Power Supply
	Hz	Voltage	Min.	Max.	MFA
MUCR-48-HF	50	220-240	198	254	15
MUCR-60-HF	50	220-240	198	254	15

Notes:


MFA: Max. Fuse Amps. (A)

7. Sound Levels

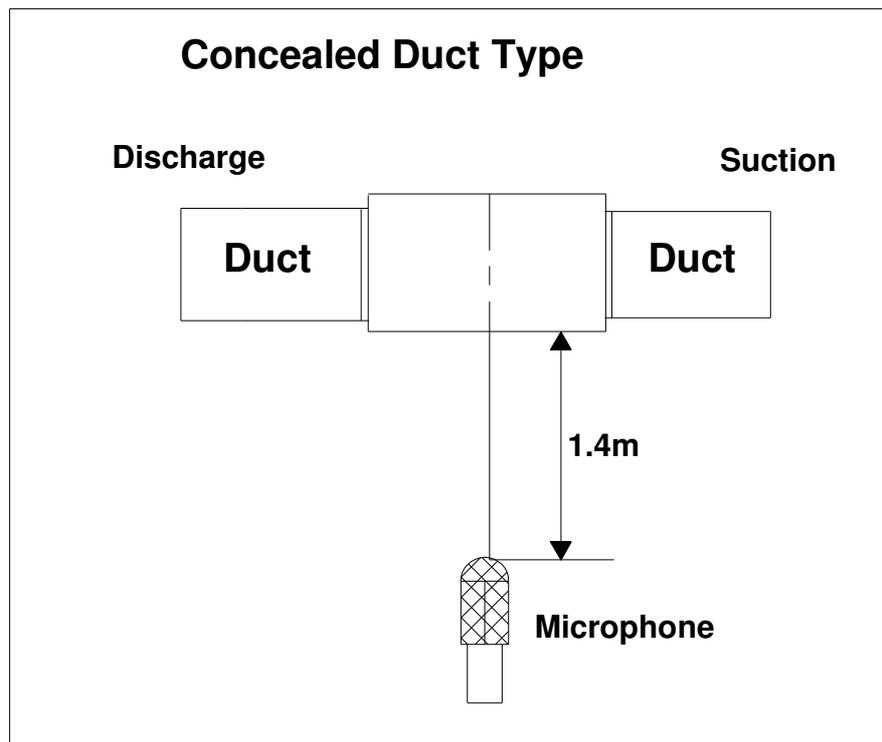

Model	Noise level dB(A)		
	H	M	L
MUCR-48-HF	45	41	37
MUCR-60-HF	45	41	37

8. Accessories


	Name	Shape	Quantity
Tubing & Fittings	Soundproof / insulation sheath		2
	Binding tape		1
	Seal sponge		1
Drainpipe Fittings (for cooling & heating)	Drain joint		1
	Seal ring		1
Wired controller & Its Frame	Wired controller		1
Others	Owner' s manual		1
	Installation manual		1
EMS & It's fitting	Magnetic ring (twist the electric wires L and N around it to five circles)		1

9. The Specification of Power

Model(Btu/h)		48 / 60
INDOOR UNIT POWER	Phase 1-phase	
	Frequency and Voltage	220-240V, 50Hz
	POWER WIRING (mm ²)	3×1.0
	CIRCUIT BREAKER (A)	15
OUTDOOR UNIT POWER (Centrifugal Outdoor Unit) (MUECR-48/60-HF)	Phase	3-phase
	Frequency and Voltage	380-415V, 50Hz
	POWER WIRING (mm ²)	5×2.5
	CIRCUIT BREAKER (A)	40
Indoor/Outdoor Connecting Wiring (Weak Electric Signal) (mm ²)		3×0.5
Indoor/Outdoor Connecting Wiring (Strong Electric Signal) (mm ²)		—————

10. Field Wiring

MUCR-48-HF (UI20601)
 MUCR-60-HF (UI20602)

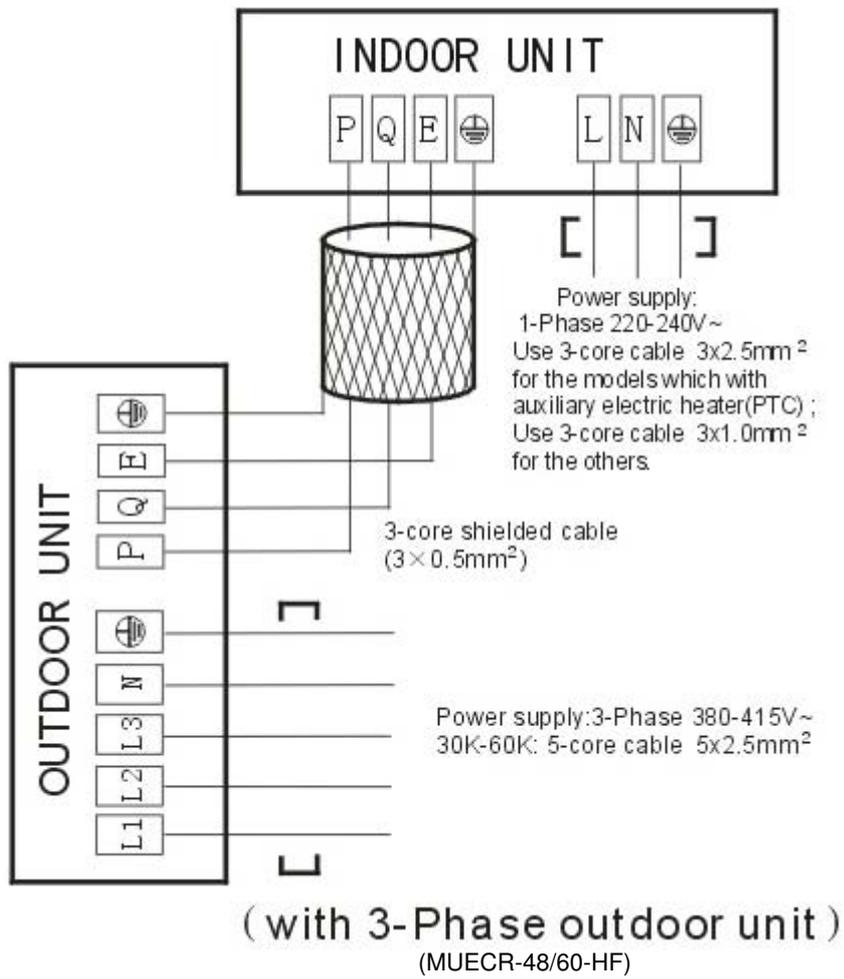


Part 3

Outdoor Units

1. Dimensions	34
2. Service Space	35
3. Piping Diagrams	36
4. Wiring Diagrams	37
5. Electric Characteristics.....	38
6. Operation Limits	39
7. Sound Levels	40

1. Dimensions

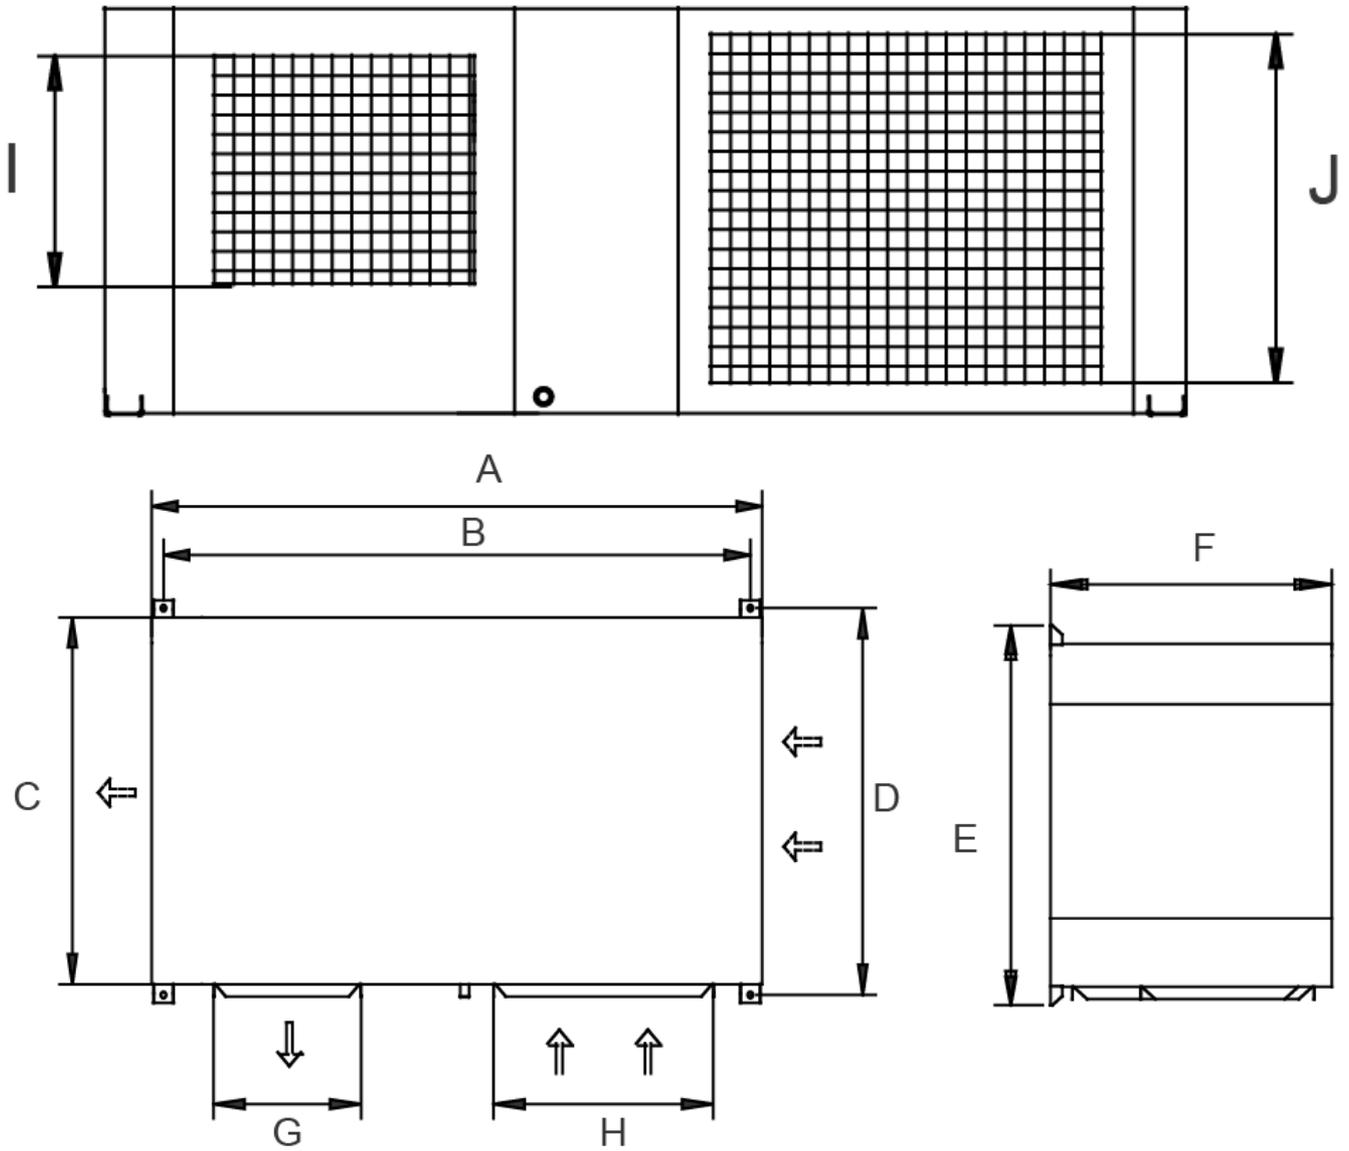


Unit: mm


MODEL	A	B	C	D	E	F	G	H	I	J
MUECR-48HF	1394	1338	783	820	850	568	398	574	342	463
MUECR-60HF	1394	1338	783	820	850	568	398	574	342	463

2. Service Space

2.1 In case that suspending in the ceiling

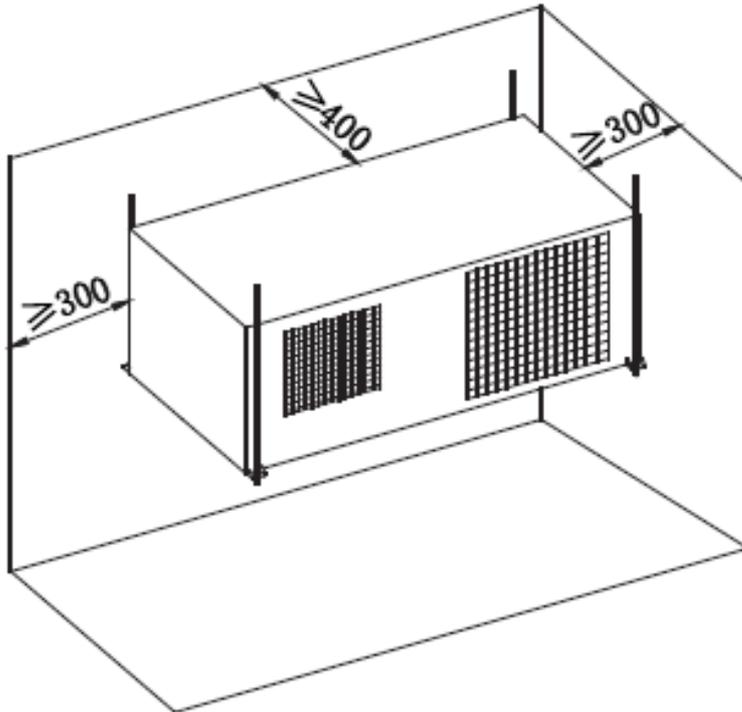


2.2 In case that installing on the floor

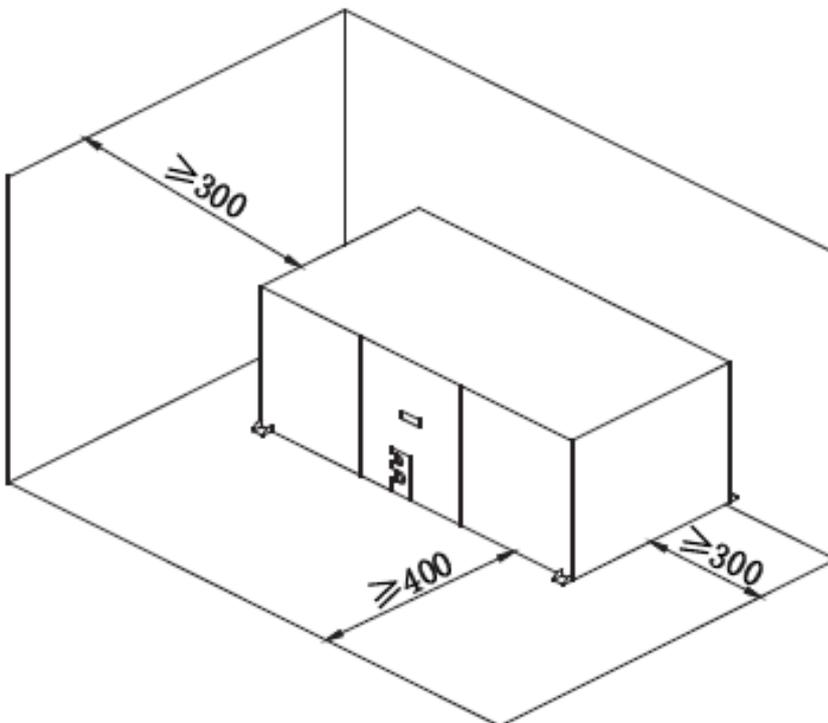

3. Piping Diagrams

MUECR-48-HF (UE20608)


MUECR-60-HF (UE20609)

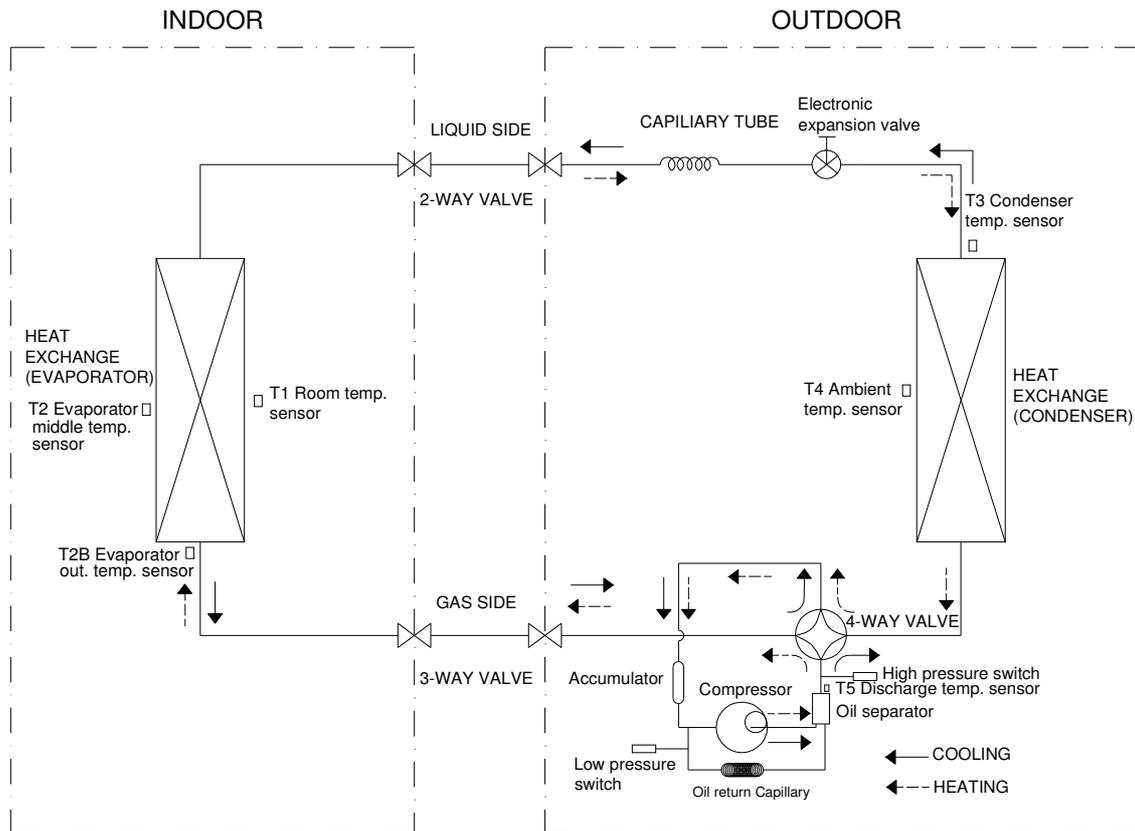

4. Wiring Diagrams

MUECR-48-HF (UE20608)

MUECR-60-HF (UE20609)

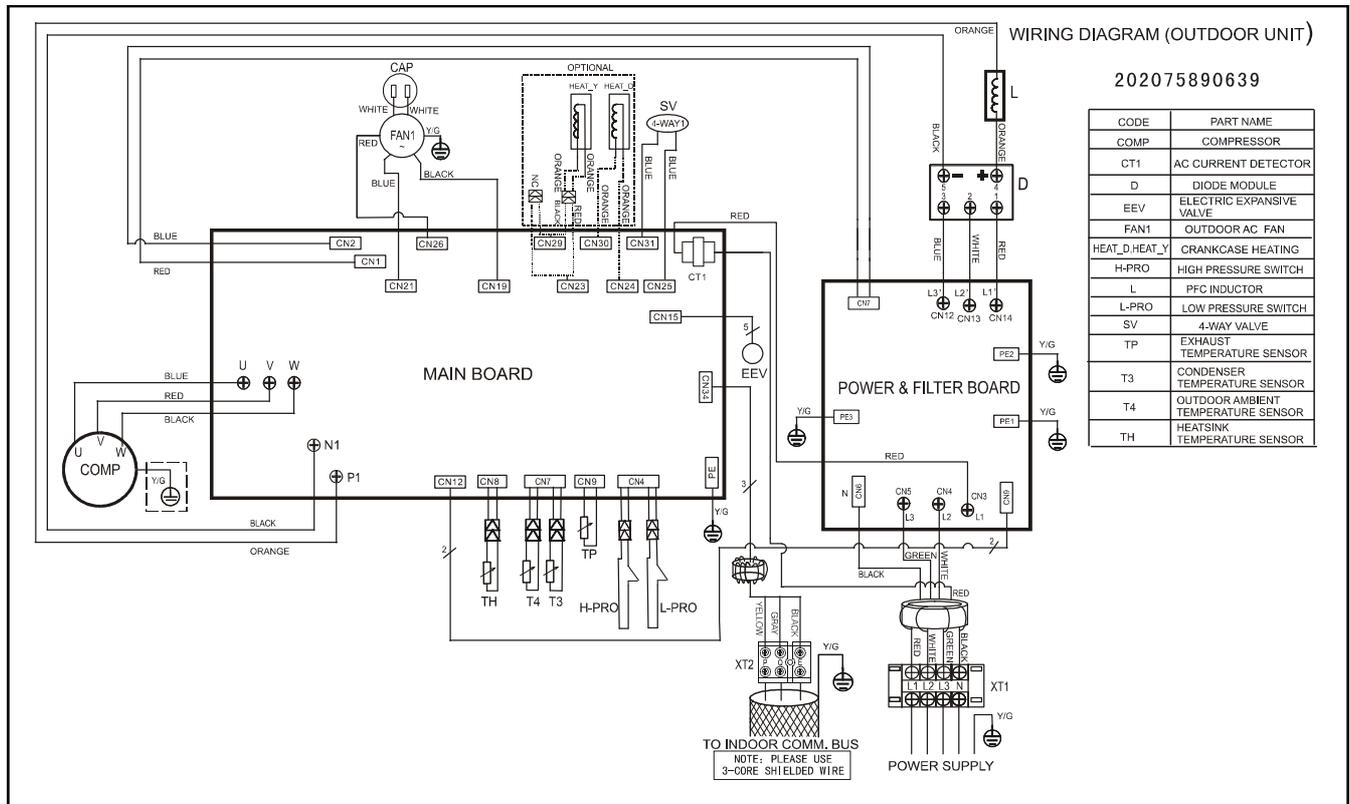

Nota: TP → Sonda de Descarga T3 → Sonda Bateria (parte baja)
 TH → Sonda Disipador Inverter T4 → Sonda Ambiente

5. Electric Characteristics

Model	Outdoor Unit			
	Hz	Voltage	Min.	Max.
MUECR-48-HF	50	380-420	342	440
MUECR-60-HF	50	380-420	342	440


6. Operation Limits

Mode \ Temperature	Cooling operation	Heating operation
Room temperature	$\geq 17^{\circ}\text{C}$	$\leq 30^{\circ}\text{C}$
Outdoor temperature	$0^{\circ}\text{C} \sim 50^{\circ}\text{C}$	$-15^{\circ}\text{C} \sim 24^{\circ}\text{C}$
	($-15^{\circ}\text{C} \sim 50^{\circ}\text{C}$: For the models with low temperature cooling system)	

CAUTION:

1. If the air conditioner is used beyond the above conditions, certain safety protection features may come into operation and cause the unit to operate abnormally.
2. The room relative humidity should be less than 80%. If the air conditioner operates beyond this figure, the surface of the air conditioner may attract condensation. Please set the vertical air flow louver to its maximum angle (vertically to the floor), and set HIGH fan mode.
3. The optimum performance will be achieved during this operating temperature zone.

7. Sound Levels

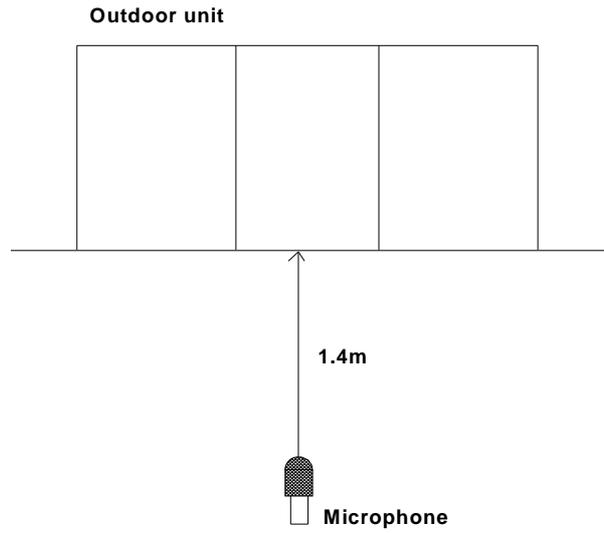


Model	Noise level dB(A)
	H/L
MUECR-48-HF	64
MUECR-60-HF	64

Part 4

Installation

1. Installation Procedure.....	42
2. Location selection.....	43
3. Indoor unit installation.....	44
4. Refrigerant pipe installation.....	53
5. Drainage pipe installation.....	55
6. Vacuum Drying and Leakage Checking	59
7. Additional refrigerant charge	60
8. Engineering of insulation	61
9. Engineering of electrical wiring	62
10. Test operation.....	63

1. Installation Procedure

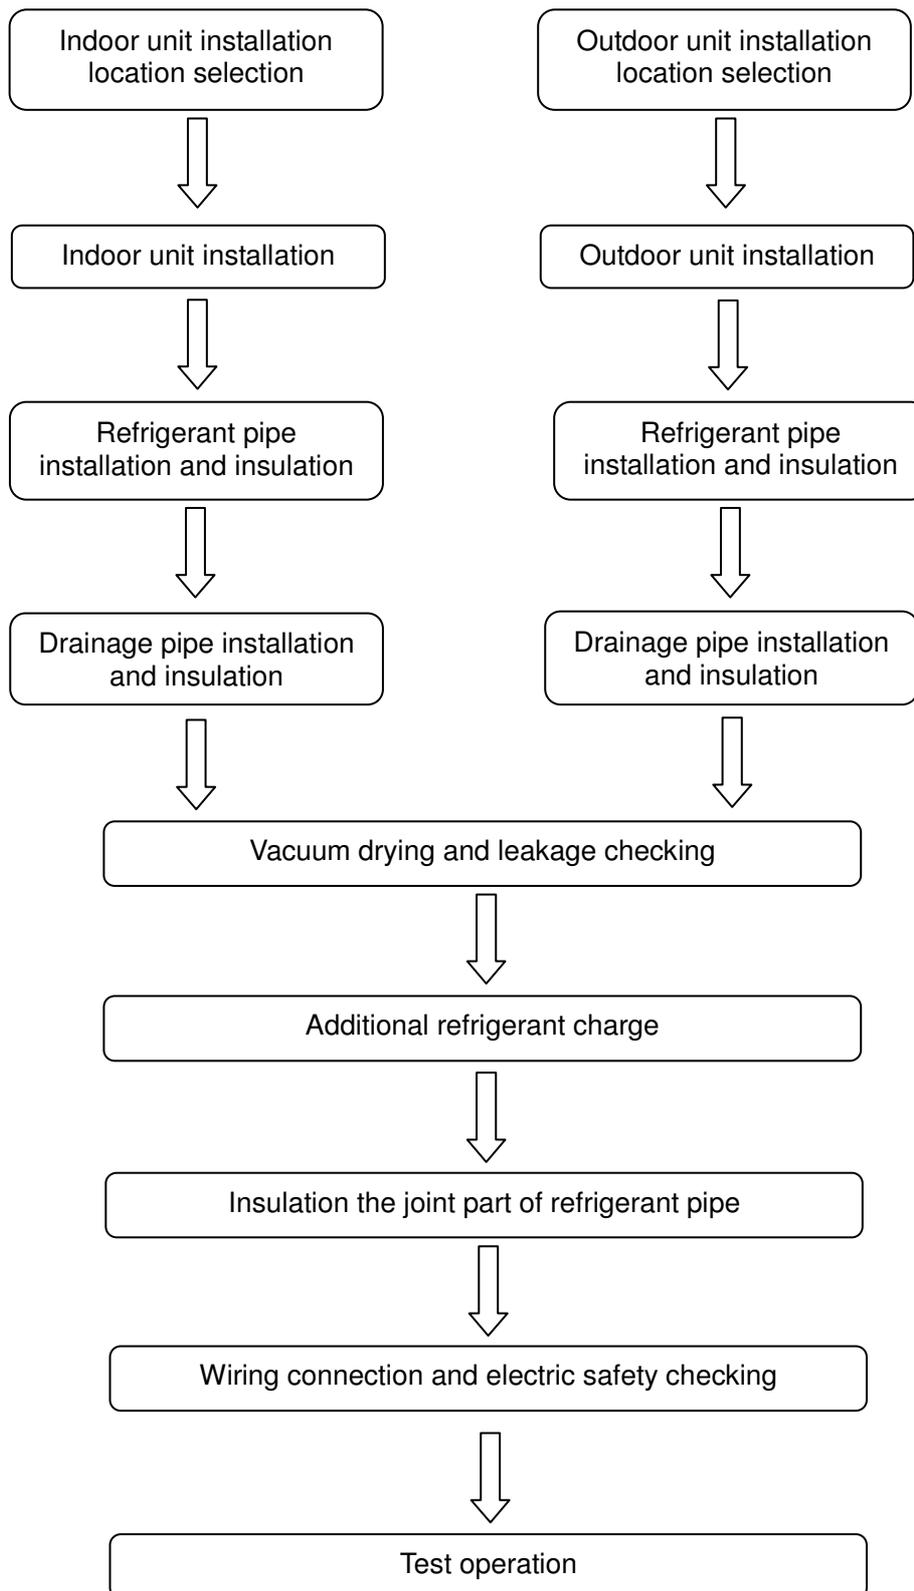


2. Location selection

2.1 Indoor unit location selection

- The place shall easily support the indoor unit's weight.
- The place can ensure the indoor unit installation and inspection.
- The place can ensure the indoor unit horizontally installed.
- The place shall allow easy water drainage.
- The place shall easily connect with the outdoor unit.
- The place where air circulation in the room should be good.
- There should not be any heat source or steam near the unit.
- There should not be any oil gas near the unit
- There should not be any corrosive gas near the unit
- There should not be any salty air near the unit
- There should not be strong electromagnetic wave near the unit
- There should not be inflammable materials or gas near the unit
- There should not be strong voltage vibration.

2.2 Outdoor unit location selection


- The place shall easily support the outdoor unit's weight.
- Locate the outdoor unit as close to indoor unit as possible
- The piping length and height drop can not exceed the allowable value.
- The place where the noise, vibration and outlet air do not disturb the neighbors.
- There is enough room for installation and maintenance.
- The air outlet and the air inlet are not impeded, and not face the strong wind.
- It is easy to install the connecting pipes and cables.
- There is no danger of fire due to leakage of inflammable gas.
- It should be a dry and well ventilation place
- The support should be flat and horizontal
- Do not install the outdoor unit in a dirty or severely polluted place, so as to avoid blockage of the heat exchanger in the outdoor unit.
- If is built over the unit to prevent direct sunlight, rain exposure, direct strong wind, snow and other scraps accumulation, make sure that heat radiation from the condenser is not restricted.

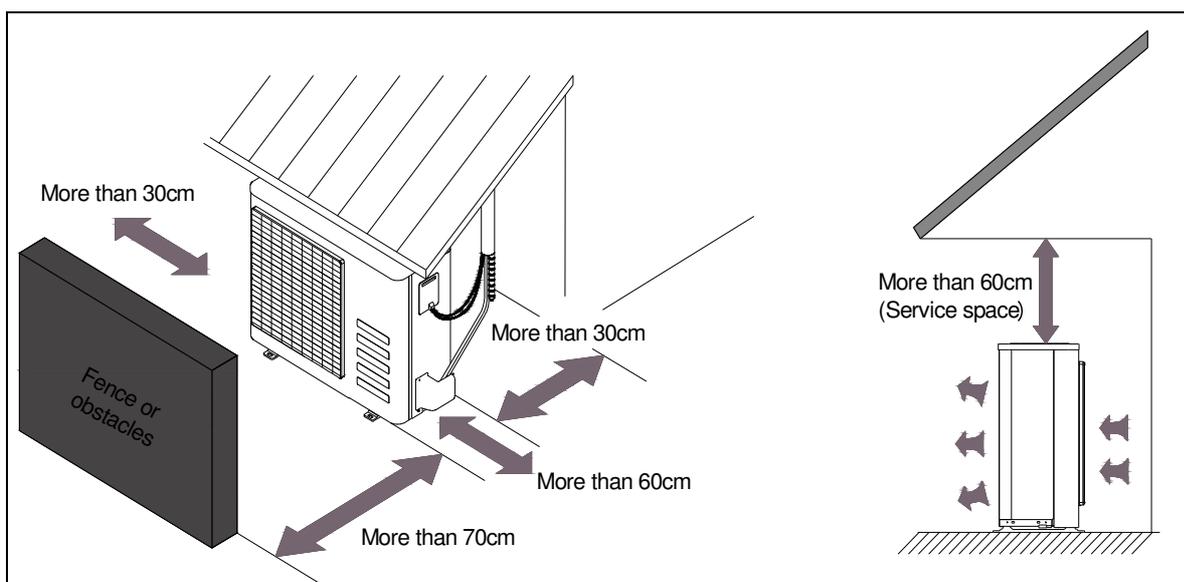


3. Indoor unit installation

3.1 Duct indoor unit installation

3.1.1 Service space for indoor unit

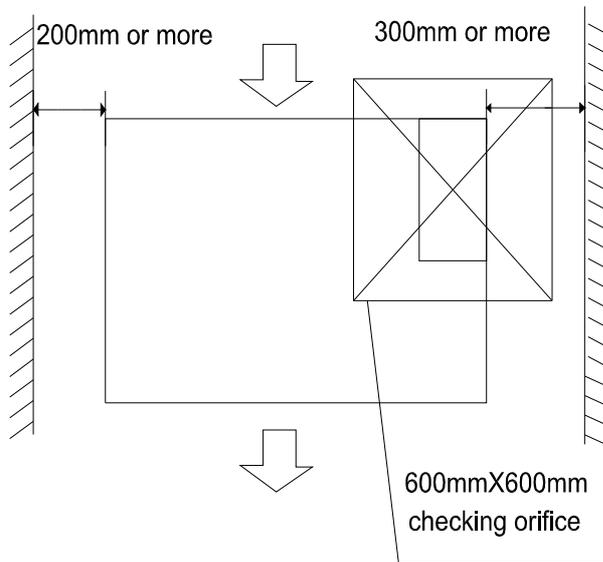

3.1.2 Bolt pitch

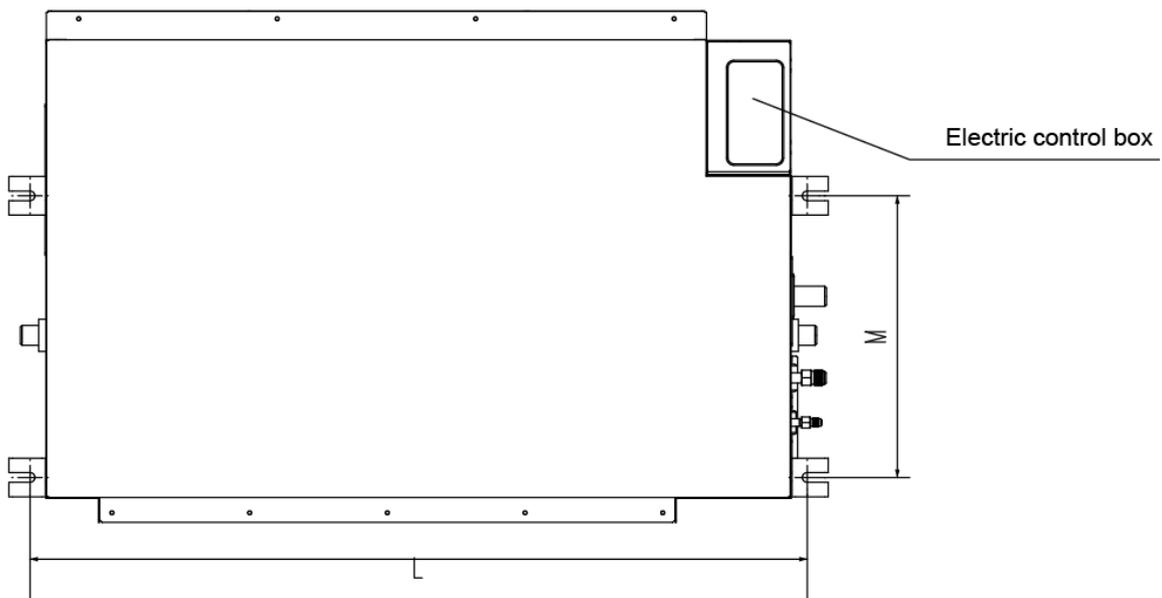

Model	Size of outline dimension mounted plug	
	L	M
48 / 60	1240	500


3.1.3 Install the pendant bolt

Select the position of installation hooks according to the hook holes positions showed in upper picture. Drill four holes of $\varnothing 12\text{mm}$, 45~50mm deep at the selected positions on the ceiling. Then embed the expansible hooks (fittings).




3.1.4 Install the main body

Make the 4 suspender through the 4 hanger of the main body to suspend it. Adjust the hexangular nuts on the four installation hooks evenly, to ensure the balance of the body. Use a leveling instrument to make sure the levelness of the main body is within $\pm 1^\circ$.

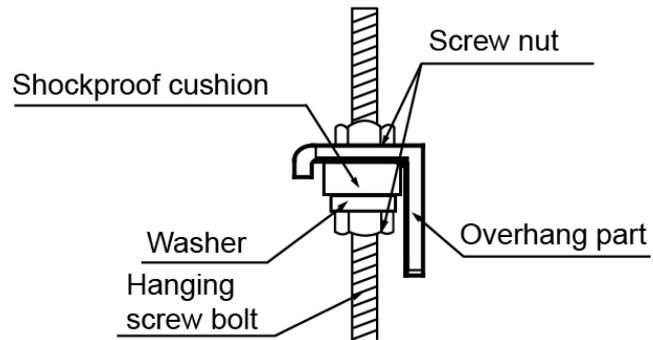


3.1.5 Install the air filter

Insert the air filter through the filter slot and fix it with 2 screws.

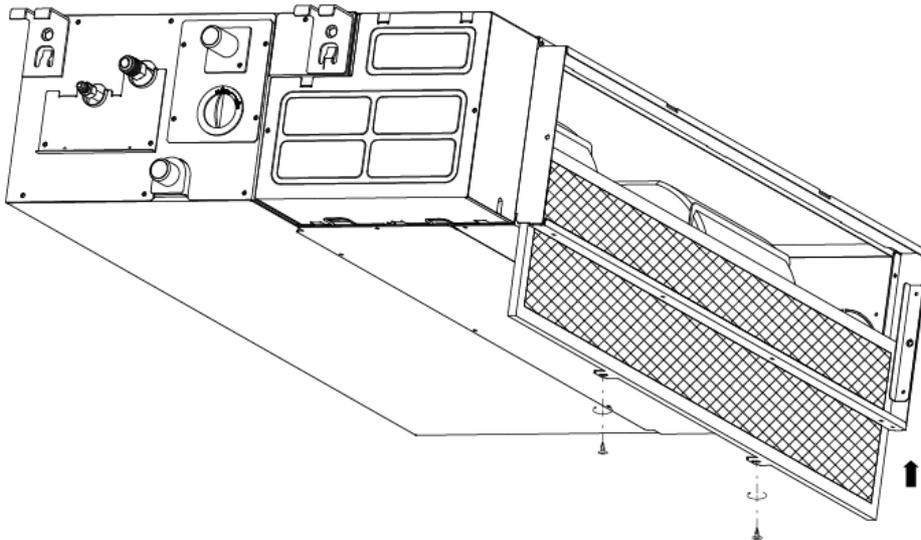


3.1.6 Install the air duct

Please design the air duct as below recommended picture

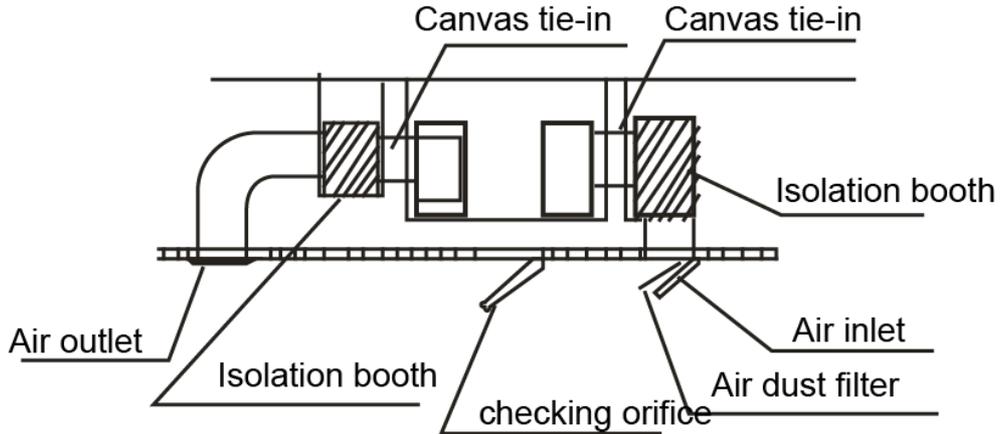


3.1.7 Change the air inlet direction


① Take off ventilation panel and flange, cut off the staples at side rail.

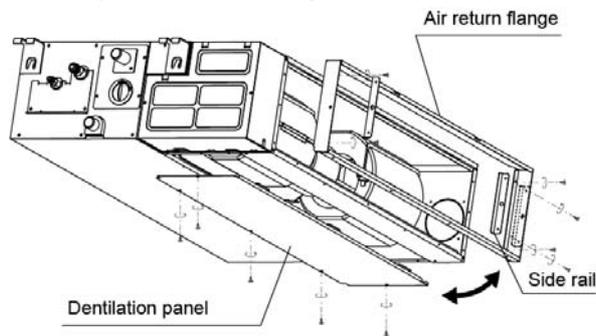


② Stick the attached seal sponge as per the indicating place in the following fig, and then change the mounting positions of air return panel and air return flange .

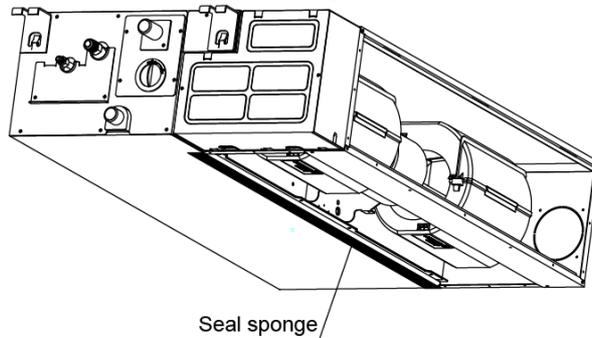

③ When install the filter mesh, please plug it into flange inclined from air return opening, and then push up.

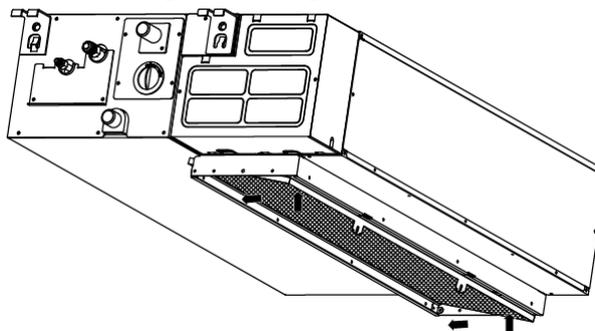


④ The installation has finish, upon filter mesh which fixing blocks have been insert to the flange positional holes.

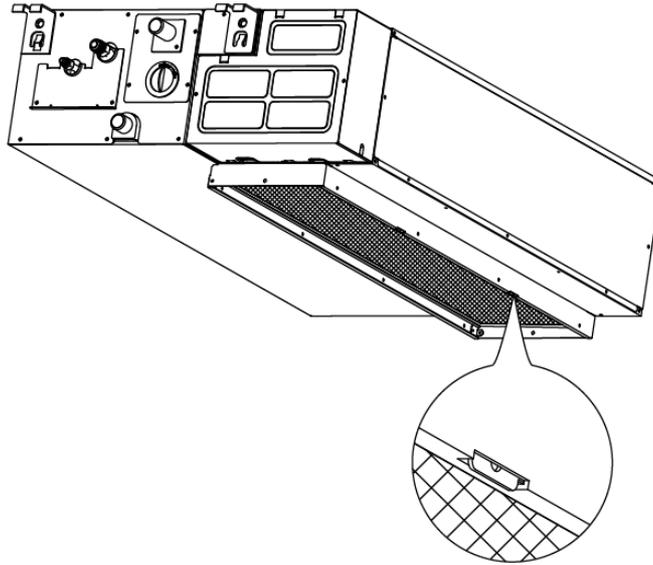


3.2 Super slim cassette indoor unit installation

3.2.1 Service space for indoor unit

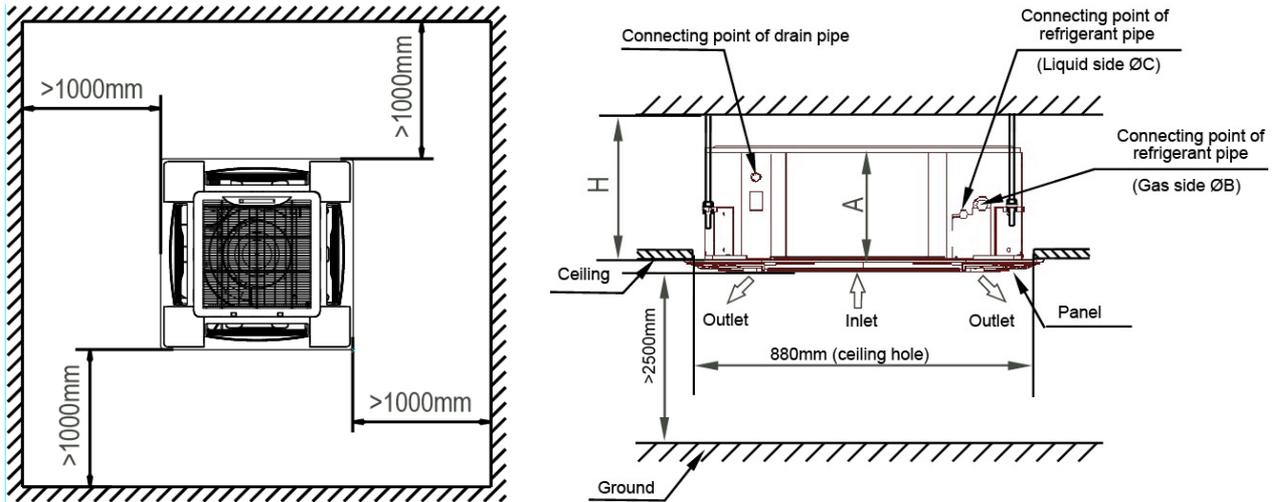

Model	A	H		Remark
48 - 60	287	>317	R410A	Cooling & Heating


3.2.2 Bolt pitch

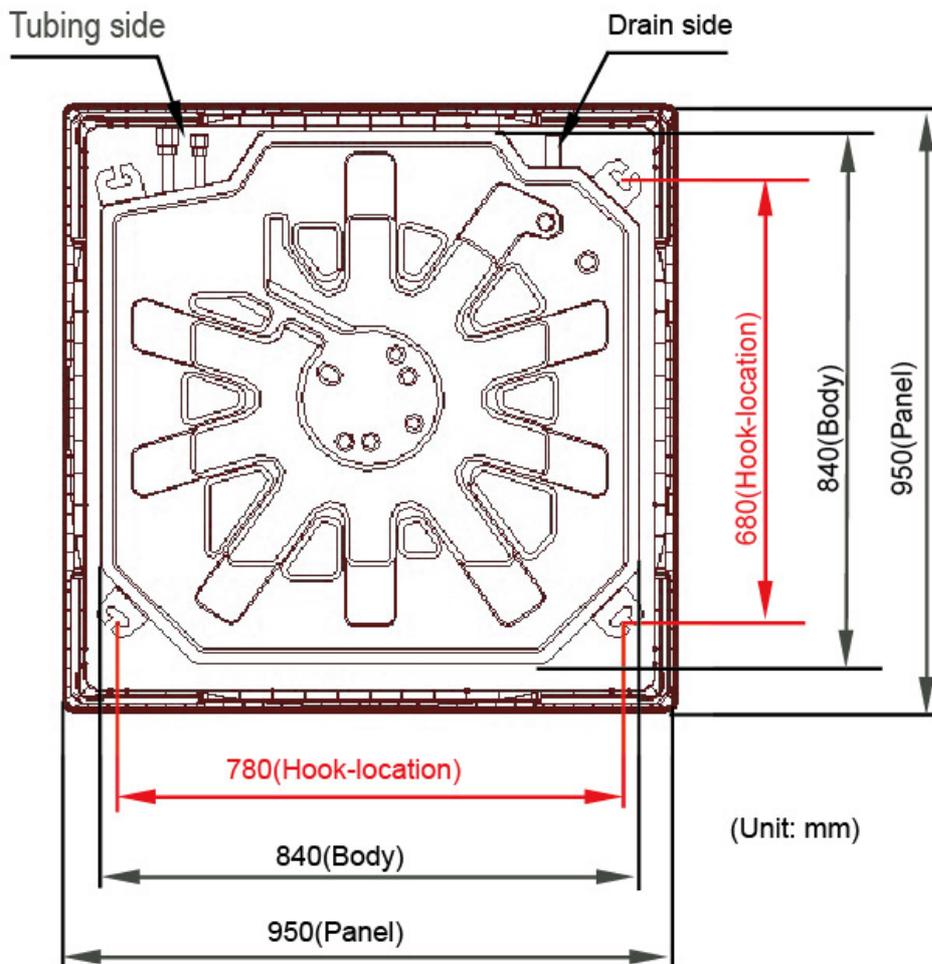

(Unit: mm)

3.2.3 Install the pendant bolt

Select the position of installation hooks according to the hook holes positions showed in upper picture. Drill four holes of $\text{Ø}12\text{mm}$, 45~50mm deep at the selected positions on the ceiling. Then embed the expansible hooks (fittings).

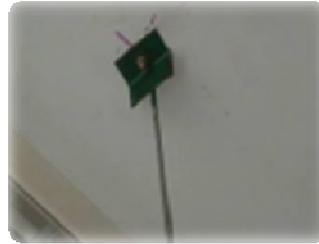


3.2.4 Install the main body


Make the 4 suspender through the 4 hanger of the main body to suspend it. Adjust the hexangular nuts on the four installation hooks evenly, to ensure the balance of the body. Use a leveling instrument to make sure the levelness of the main body is within $\pm 1^\circ$.



Adjust the position to ensure the gaps between the body and the four sides of ceiling are even. The body's lower part should sink into the ceiling for 10~12 mm. In general, L is half of the screw length of the installation hook.


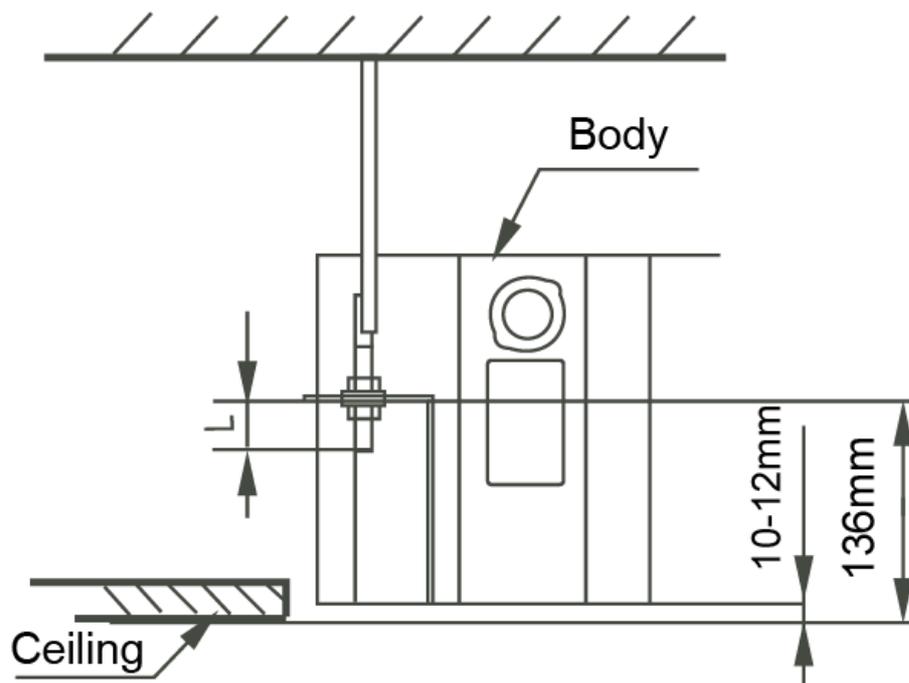


Locate the air conditioner firmly by wrenching the nuts after having adjusted the body's position well.

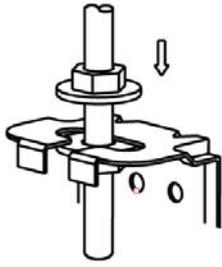


3.2.5 Install the panel


Remove the grille

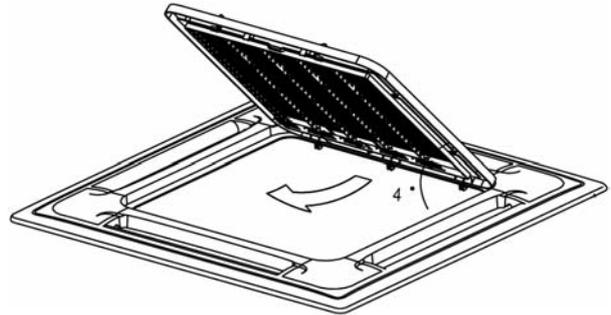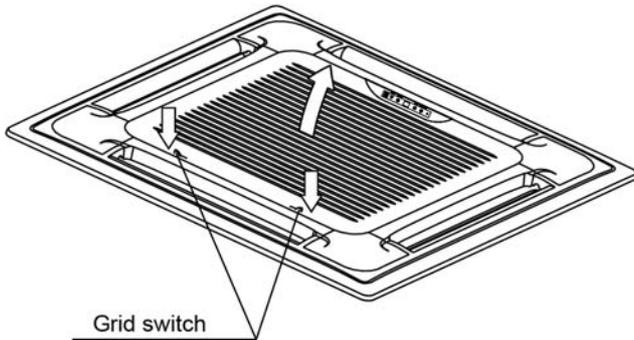


Remove the 4 corner covers.

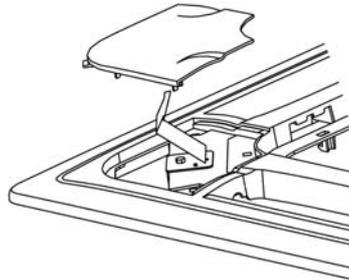


Hang the panel to the hooks on the mainbody. If the panel is with auto-lift grille, please watch the ropes lifting the grille, DO NOT make the ropes entwined or blocked.

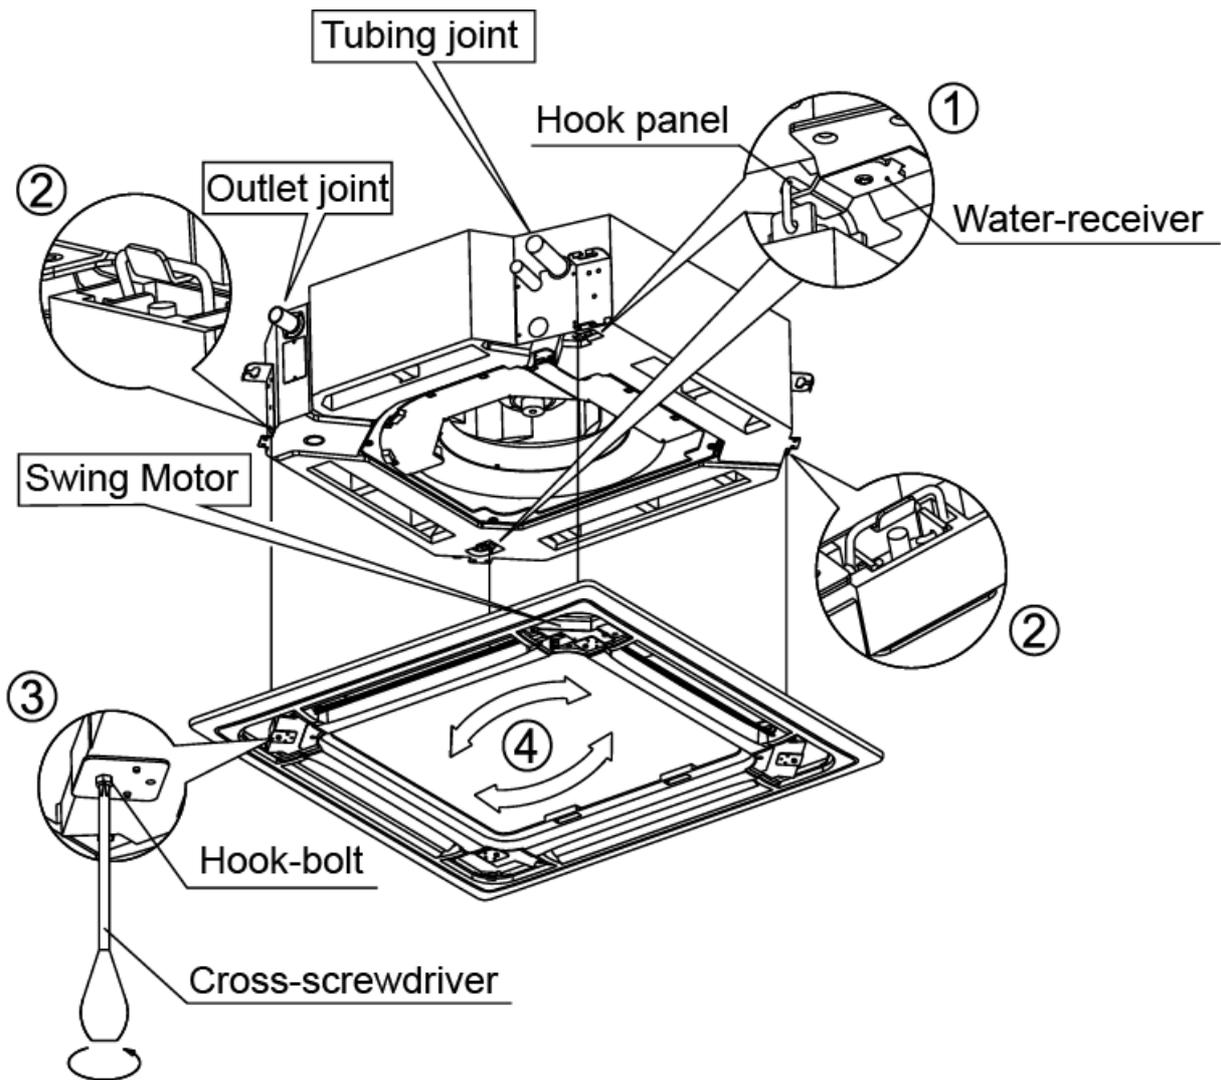


Tighten the screws under the panel hooks till the panel closely stick on the ceiling to avoid condensate water.

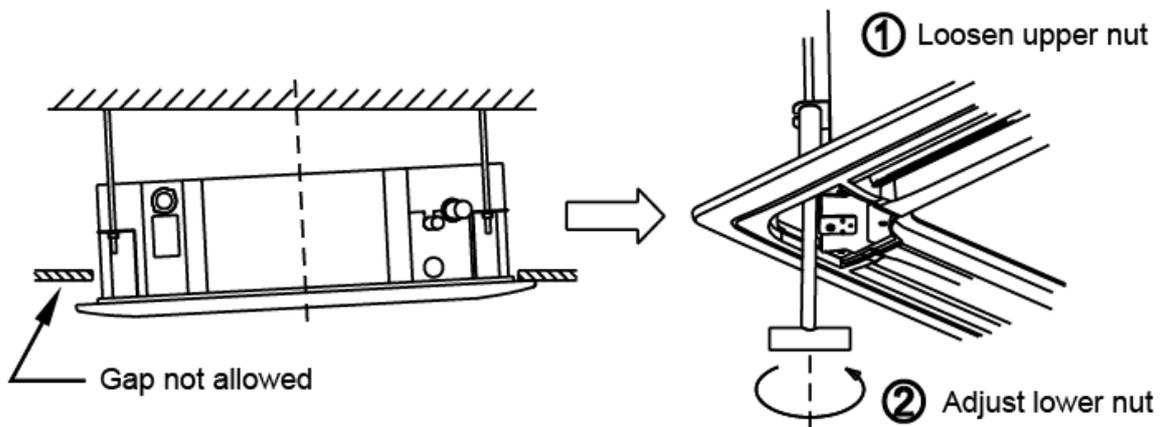

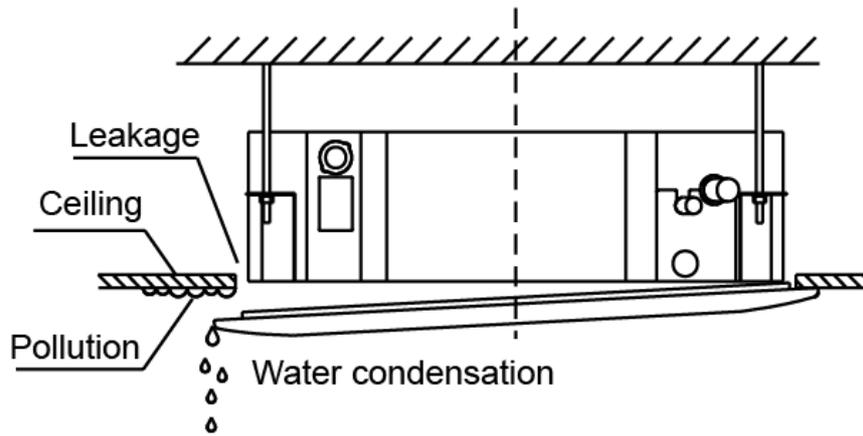

Hang the air-in grill to the panel, then connect the lead terminator of the swing motor and that of the control box with corresponding terminators on the body respectively.

Install the 4 corner covers back.

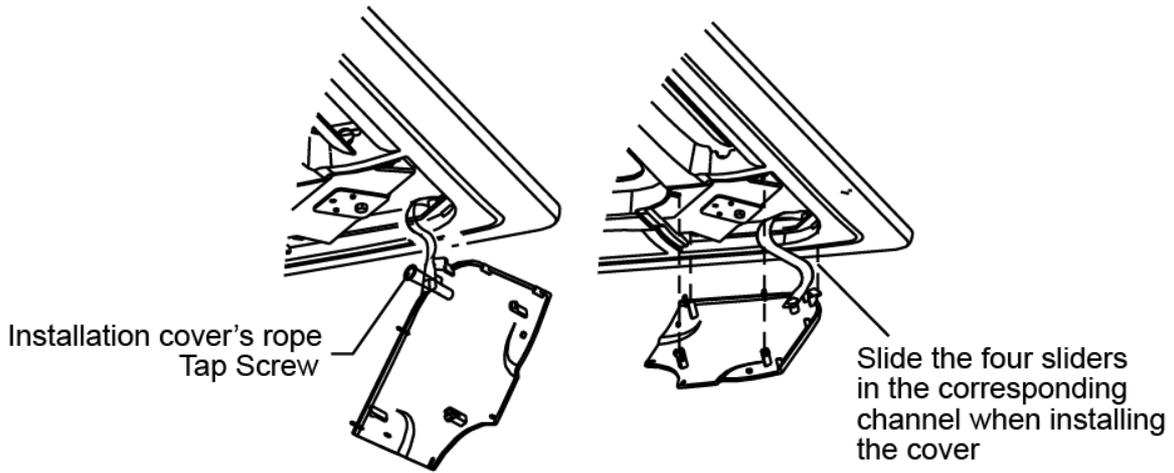

Note: The panel shall be installed after the wiring connected.

4. Refrigerant pipe installation

4.1 Maximum pipe length and height drop

Considering the allowable pipe length and height drop to decide the installation position. Make sure the distance and height drop between indoor and outdoor unit not exceeded the date in the following table.

Model	Max. Length	Max. Elevation
48 – 60 (Indoor DC, outdoor AC)	50m	25m

4.2 The procedure of connecting pipes


4.2.1 Choose the pipe size according to the specification table.

4.2.2 Confirm the cross way of the pipes.

4.2.3 Measure the necessary pipe length.

4.2.4 Cut the selected pipe with pipe cutter

- Make the section flat and smooth.

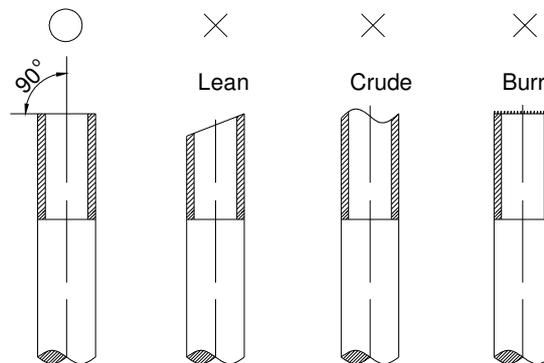

4.2.5 Insulate the copper pipe

- Before test operation, the joint parts should not be heat insulated.

4.2.6 Flare the pipe

- Insert a flare nut into the pipe before flaring the pipe
- According to the following table to flare the pipe

Pipe diameter	Flare dimension A (mm)		Flare shape
	Min	Max	
1/4" (6.35)	8.3	8.7	
3/8" (9.52)	12.0	12.4	
1/2" (12.7)	15.4	15.8	
5/8" (15.9)	18.6	19.1	
3/4" (19)	22.9	23.3	

- After flared the pipe, the opening part must be seal by end cover or adhesive tape to avoid duct or exogenous impurity come into the pipe.

4.2.7 Drill holes if the pipes need to pass the wall.

4.2.8 According to the field condition to bend the pipes so that it can pass the wall smoothly.

4.2.9 Bind and wrap the wire together with the insulated pipe if necessary.

4.2.10 Set the wall conduit


4.2.114 Set the supporter for the pipe.

4.2.12 Locate the pipe and fix it by supporter

- For horizontal refrigerant pipe, the distance between supporters should not be exceed 1m.
- For vertical refrigerant pipe, the distance between supporters should not be exceed 1.5m.

4.2.13 Connect the pipe to indoor unit and outdoor unit by using two spanners.

- Be sure to use two spanners and proper torque to fasten the nut, too large torque will damage the bellmouthing, and too small torque may cause leakage. Refer the following table for different pipe connection.

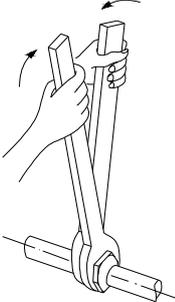Pipe Diameter	Torque		Sketch map
	(kgf.cm)	(N.cm)	
1/4" (6.35)	144~176	1420~1720	
3/8" (9.52)	333~407	3270~3990	
1/2" (12.7)	504~616	4950~6030	
5/8" (15.9)	630~770	6180~7540	
3/4" (19)	990~1210	9270~11860	

5. Drainage pipe installation

Install the drainage pipe as shown below and take measures against condensation. Improperly installation could lead to leakage and eventually wet furniture and belongings.

5.1 Installation principle

- Ensure at least 1/100 slope of the drainage pipe
- Adopt suitable pipe diameter
- Adopt nearby condensate water discharge

5.2 Key points of drainage water pipe installation

5.2.1 Considering the pipeline route and elevation

- Before installing condensate water pipeline, determine its route and elevation to avoid intersection with other pipelines and ensure slope is straight.

5.2.2 Drainage pipe selection

- The drainage pipe diameter shall not small than the drain hose of indoor unit
- According to the water flowrate and drainage pipe slope to choose the suitable pipe, the water flowrate is decided by the capacity of indoor unit.

Relationship between water flowrate and capacity of indoor unit

Capacity (x1000Btu)	Water flowrate (l/h)
12	2.4
18	4
24	6
30	7
36	8
42	10
48	12
60	14

According to the above table to calculate the total water flowrate for the confluence pipe selection.

For horizontal drainage pipe (The following table is for reference)

PVC pipe	Reference value of inner diameter of pipe (mm)	Allowable maximum water flowrate (l/h)		Remark
		Slope 1/50	Slope 1/100	
PVC25	20	39	27	For branch pipe
PVC32	25	70	50	
PVC40	31	125	88	
PVC50	40	247	175	Could be used for confluence pipe
PVC63	51	473	334	

Attention: Adopt PVC40 or bigger pipe to be the main pipe.

For Vertical drainage pipe (The following table is for reference)

PVC pipe	Reference value of inner diameter of pipe (mm)	Allowable maximum water flowrate (l/h)	Remark
PVC25	20	220	For branch pipe
PVC32	25	410	
PVC40	31	730	
PVC50	40	1440	Could be used for confluence pipe
PVC63	51	2760	
PVC75	67	5710	
PVC90	77	8280	


Attention: Adopt PVC40 or bigger pipe to be the main pipe.

5.2.3 Individual design of drainage pipe system



- The drainage pipe of air conditioner shall be installed separately with other sewage pipe, rainwater pipe and drainage pipe in building.
- The drainage pipe of the indoor unit with water pump should be apart from the one without water pump.

5.2.4 Supporter gap of drainage pipe

- In general, the supporter gap of the drainage pipe horizontal pipe and vertical pipe is respectively 1m~1.5m and 1.5m~2.0m.
- Each vertical pipe shall be equipped with not less than two hangers.
- Overlarge hanger gap for horizontal pipe shall create bending, thus leading to air block.

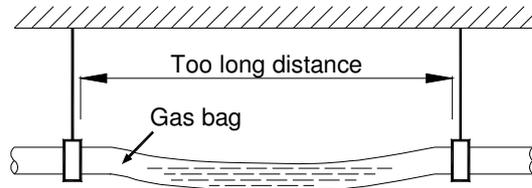


5.2.5 The horizontal pipe layout should avoid converse flow or bad flow

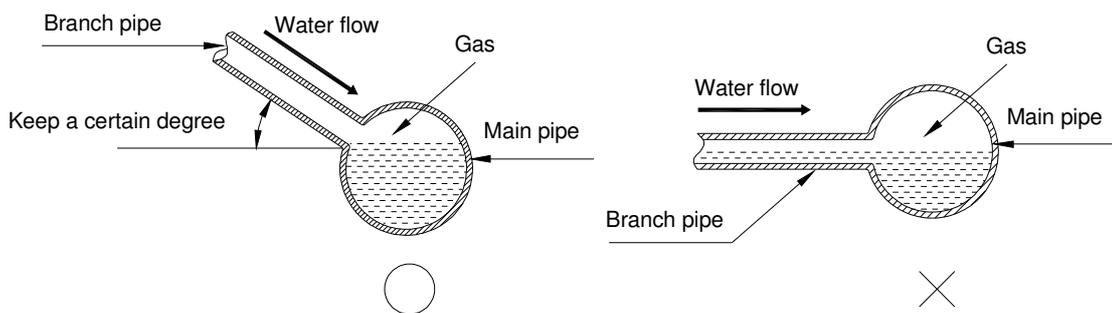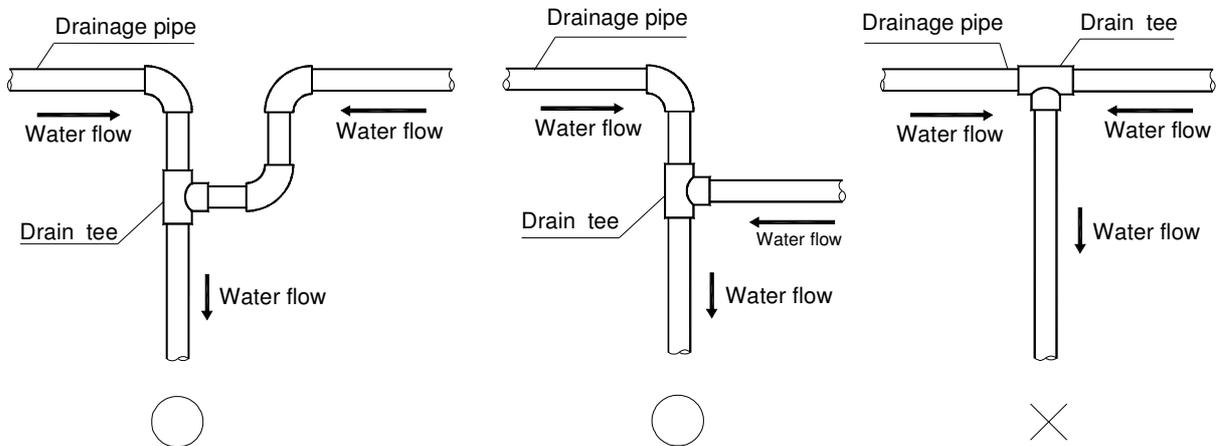

- The correct installation will not cause converse water flow and the slope of the branch pipes can be adjusted freely
- The false installation will cause converse water flow and the slope of the branch pipe can not be adjusted.


5.2.6 Water storage pipe setting

- If the indoor unit has high extra static pressure and without water pump to elevate the condensate water, such as high extra static pressure duct unit , the water storage pipe should be set to avoid converse flow or blow water phenomena.

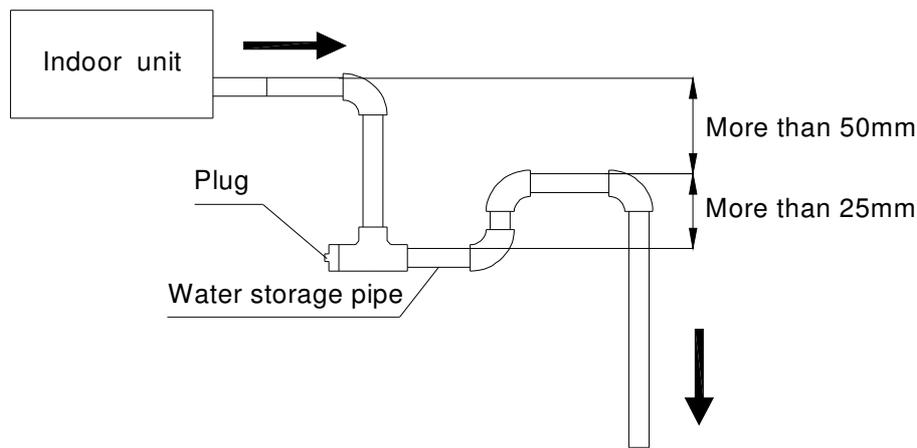


5.2.7 Lifting pipe setting of indoor unit with water pump

- The length of lifting pipe should not exceed the pump head of indoor unit water pump.
Pump head of big four way cassette: 750mm
Pump head of compact four way cassette: 500mm
- The drainage pipe should be set down inclined after the lifting pipe immediately to avoid wrong operation of water level switch.
- Refer the following picture for installation reference.

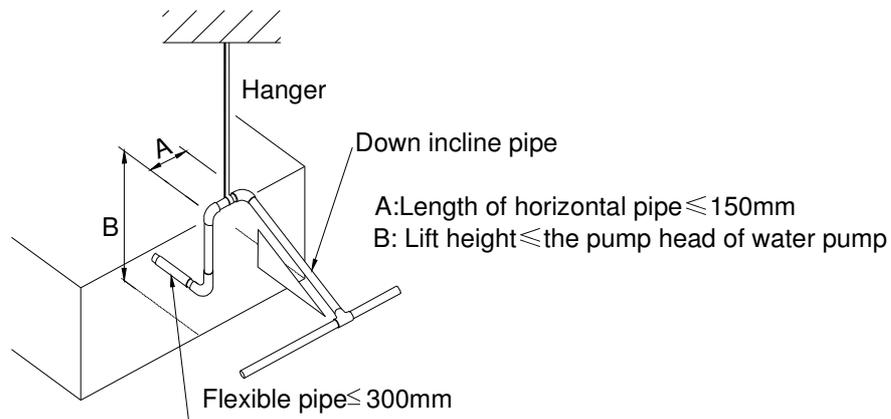

5.2.8 Blowhole setting

- For the concentrated drainage pipe system, there should design a blowhole at the highest point of main pipe to ensure the condensate water discharge smoothly.
- The air outlet shall face down to prevent dirt entering pipe.
- Each indoor unit of the system should be installed it.
- The installation should be considering the convenience for future cleaning.

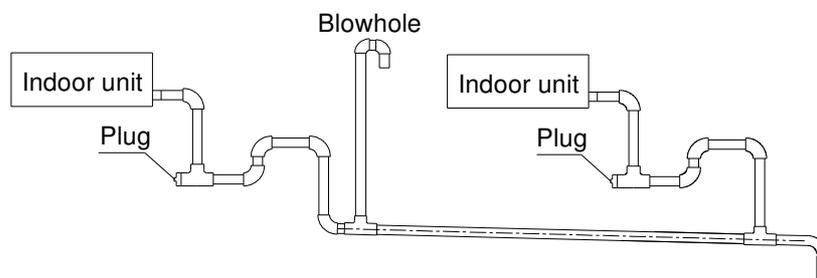

5.2.9 The end of drainage pipe shall not contact with ground directly.

5.3 Drainage test


5.3.1 Water leakage test

After finishing the construction of drainage pipe system, fill the pipe with water and keep it for 24 hours to check whether there is leakage at joint section.

5.3.2 Water discharge test

1. Natural drainage mode(the indoor unit with outdoor drainage pump)

Infuse above 600ml water through water test hole slowly into the water collector, observe whether the water can discharge through the transparent hard pipe at drainage outlet.
2. Pump drainage mode
 - 2.1 Disconnect the plug of water level switch, remove the cover of water test hole and slowly infuse about 2000ml water through the water test hole, be sure that the water will not touch the motor of drainage pump.

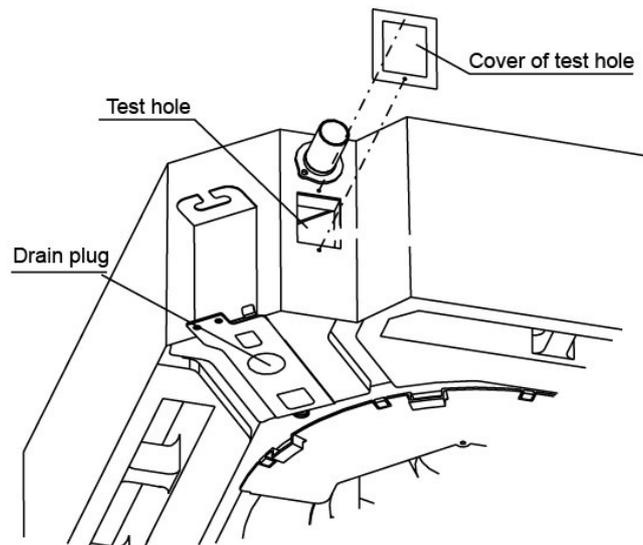

- 2.2 Power on and let the air conditioner operate for cooling. Check operation status of drainage pump, and then connect the plug of water level switch, check the operation sound of water pump and observe whether the water can discharge through the transparent hard pipe at drainage outlet. (In light of the length of drainage pipe, water shall be discharged about 1 minute delayed)
- 2.3 Stop the operation of air conditioner, power off the power supply and put the cover of water test hole back to the original place.
 - a. After stopped the air conditioner 3 minutes, check whether there is anything abnormal. If drainage pipes have not been distributed properly, over back-flow water shall cause the flashing of alarm indicator at remote-controlled receiving board and even water shall run over the water collector.
 - b. Continuously infusing water until water level alarmed, check whether the drainage pump could discharge water at once. If water level does not decline under warning water level 3 minutes later, it shall cause shutdown of unit. When this situation happens, the normal startup only can be recovered by turning down power supply and eliminating accumulated water.

Note: Drain plug at the main water-containing plate is used for eliminating accumulated water in water-containing plate when maintaining air conditioner fault. During normal operation, the plug shall be filled in to prevent leakage.

5.4 Insulation work of drainage pipe

Refer the introduction to the insulation engineering parts.

6. Vacuum Drying and Leakage Checking

6.1 Purpose of vacuum drying

- Eliminating moisture in system to prevent the phenomena of ice-blockage and copper oxidation. Ice-blockage shall cause abnormal operation of system, while copper oxide shall damage compressor.
- Eliminating the non-condensable gas (air) in system to prevent the components oxidizing, pressure fluctuation and bad heat exchange during the operation of system.

6.2 Selection of vacuum pump

- The ultimate vacuum degree of vacuum pump shall be -756mmHg or above.
- Precision of vacuum pump shall reach 0.02mmHg or above.

6.3 Operation procedure for vacuum drying

Due to different construction environment, two kinds of vacuum drying ways could be chosen, namely ordinary vacuum drying and special vacuum drying.

6.3.1 Ordinary vacuum drying

1. When conduct first vacuum drying, connect pressure gauge to the infusing mouth of gas pipe and liquid pipe, and keep vacuum pump running for 1 hour (vacuum degree of vacuum pump shall be reached -755mmHg).
2. If the vacuum degree of vacuum pump could not reach -755mmHg after 1 hour of drying, it indicates that there is moisture or leakage in pipeline system and need to go on with drying for half an hour.
3. If the vacuum degree of vacuum pump still could not reach -755mmHg after 1.5 hours of drying, check whether there is leakage source.
4. Leakage test: After the vacuum degree reaches -755mmHg, stop vacuum drying and keep the pressure for 1 hour. If the indicator of vacuum gauge does not go up, it is qualified. If going up, it indicates that there is moisture or leak source.

6.3.2 Special vacuum drying

The special vacuum drying method shall be adopted when:

1. Finding moisture during flushing refrigerant pipe.
2. Conducting construction on rainy day, because rain water might penetrated into pipeline.
3. Construction period is long, and rain water might penetrated into pipeline.
4. Rain water might penetrate into pipeline during construction.

Procedures of special vacuum drying are as follows:

1. Vacuum drying for 1 hour.
2. Vacuum damage, filling nitrogen to reach 0.5Kgf/cm² .
Because nitrogen is dry gas, vacuum damage could achieve the effect of vacuum drying, but this method could not achieve drying thoroughly when there is too much moisture. Therefore, special attention shall be drawn to prevent the entering of water and the formation of condensate water.
3. Vacuum drying again for half an hour.
If the pressure reached -755mmHg, start to pressure leakage test. If it can not reached the value, repeat vacuum damage and vacuum drying again for 1 hour.
4. Leakage test: After the vacuum degree reaches -755mmHg, stop vacuum drying and keep the pressure for 1 hour. If the indicator of vacuum gauge does not go up, it is qualified. If going up, it indicates that there is moisture or leak source.

7. Additional refrigerant charge

- After the vacuum drying process is carried out, the additional refrigerant charge process need to be performed.
- The outdoor unit is factory charged with refrigerant. The additional refrigerant charge volume is decided by the diameter and length of the liquid pipe between indoor and outdoor unit. Refer the following formula to calculate the charge volume.

Diameter of liquid pipe (mm)	Φ6.35 (1/4")	Φ9.52 (3/8")	Φ12.7 (1/2")
Formula	$V=11g/m \times (L-5)$	$V=30g/m \times (L-5)$	$V=60g/m \times (L-5)$

V: Additional refrigerant charge volume (g).

L : The length of the liquid pipe (m).

Note:

- Refrigerant may only be charged after performed the vacuum drying process.
- Always use gloves and glasses to protect your hands and eyes during the charge work.
- Use electronic scale or fluid infusion apparatus to weight refrigerant to be recharged. Be sure to avoid extra refrigerant charged, it may cause liquid hammer of the compressor or protections.
- Use supplementing flexible pipe to connect refrigerant cylinder, pressure gauge and outdoor unit. And The refrigerant should be charged in liquid state. Before recharging, The air in the flexible pipe and manifold gauge should be exhausted.
- After finished refrigerant recharge process, check whether there is refrigerant leakage at the connection joint part.(Using gas leakage detector or soap water to detect).

8. Engineering of insulation

8.1 Insulation of refrigerant pipe

8.1.1 Operational procedure of refrigerant pipe insulation

Cut the suitable pipe → insulation (except joint section) → flare the pipe → piping layout and connection → vacuum drying → insulate the joint parts

8.1.2 Purpose of refrigerant pipe insulation


- During operation, temperature of gas pipe and liquid pipe shall be over-heating or over-cooling extremely. Therefore, it is necessary to carry out insulation; otherwise it shall debase the performance of unit and burn compressor.
- Gas pipe temperature is very low during cooling. If insulation is not enough, it shall form dew and cause leakage.
- Temperature of gas pipe is very high (generally 50-100°C) during heating. Insulation work must be carried out to prevent hurt by carelessness touching.

8.1.3 Insulation material selection for refrigerant pipe

- The burning performance should over 120°C
- According to the local law to choose insulation materials
- The thickness of insulation layer shall be above 10mm. If in hot or wet environment place, the layer of insulation should be thicker accordingly.

8.1.4 Installation highlights of insulation construction

- Gas pipe and liquid pipe shall be insulated separately, if the gas pipe and liquid pipe were insulated together; it will decrease the performance of air conditioner.

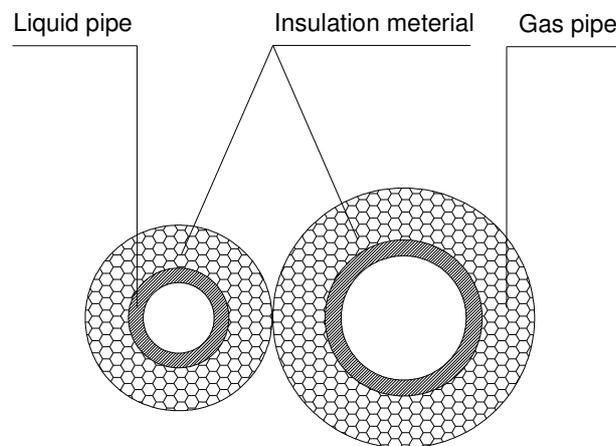

- The insulation material at the joint pipe shall be 5~10cm longer than the gap of the insulation material.
- The insulation material at the joint pipe shall be inserted into the gap of the insulation material.
- The insulation material at the joint pipe shall be banded to the gap pipe and liquid pipe tightly.
- The linking part should be use glue to paste together
- Be sure not bind the insulation material over-tight, it may extrude out the air in the material to cause bad insulation and cause easy aging of the material.

8.2 Insulation of drainage pipe

8.2.1 Operational procedure of refrigerant pipe insulation

Select the suitable pipe → insulation (except joint section) → piping layout and connection → drainage test → insulate the joint parts

8.2.2 Purpose of drainage pipe insulation

The temperature of condensate drainage water is very low. If insulation is not enough, it shall form dew and cause leakage to damage the house decoration.

Insulation material selection for drainage pipe

- The insulation material should be flame retardant material, the flame retardancy of the material should be selected according to the local law.
- Thickness of insulation layer is usually above 10mm.
- Use specific glue to paste the seam of insulation material, and then bind with adhesive tape. The width of tape shall not be less than 5cm. Make sure it is firm and avoid dew.

8.2.3 Installation and highlights of insulation construction

- The single pipe should be insulated before connecting to another pipe, the joint part should be insulated after the drainage test.
- There should be no insulation gap between the insulation material.

9. Engineering of electrical wiring**9.1 Highlights of electrical wiring installation**

- All field wiring construction should be finished by qualified electrician.
- Air conditioning equipment should be grounded according to the local electrical regulations.
- Current leakage protection switch should be installed.
- Do not connect the power wire to the terminal of signal wire.
- When power wire is parallel with signal wire, put wires to their own wire tube and remain at least 300mm gap.
- According to table in indoor part named “the specification of the power” to choose the wiring, make sure the selected wiring not small than the date showing in the table.
- Select different colors for different wire according to relevant regulations.
- Do not use metal wire tube at the place with acid or alkali corrosion, adopt plastic wire tube to replace it.
- There must be not wire connect joint in the wire tube If joint is a must, set a connection box at the place.
- The wiring with different voltage should not be in one wire tube.
- Ensure that the color of the wires of outdoor and the terminal No. are same as those of indoor unit respectively.

10. Test operation

10.1 The test operation must be carried out after the entire installation has been completed.

10.2 Please confirm the following points before the test operation.

- The indoor unit and outdoor unit are installed properly.
- Tubing and wiring are correctly completed.
- The refrigerant pipe system is leakage-checked.
- The drainage is unimpeded.
- The ground wiring is connected correctly.
- The length of the tubing and the added stow capacity of the refrigerant have been recorded.
- The power voltage fits the rated voltage of the air conditioner.
- There is no obstacle at the outlet and inlet of the outdoor and indoor units.
- The gas-side and liquid-side stop valves are both opened.
- The air conditioner is pre-heated by turning on the power.

10.3 Test operation

Set the air conditioner under the mode of "COOLING" by remote controller, and check the following points.

Indoor unit

- Whether the switch on the remote controller works well.
- Whether the buttons on the remote controller works well.
- Whether the air flow louver moves normally.
- Whether the room temperature is adjusted well.
- Whether the indicator lights normally.
- Whether the temporary buttons works well.
- Whether the drainage is normal.
- Whether there is vibration or abnormal noise during operation.

Outdoor unit

- Whether there is vibration or abnormal noise during operation.
- Whether the generated wind, noise, or condensed of by the air conditioner have influenced your neighborhood.
- Whether any of the refrigerant is leaked.

Part 5


Troubleshooting

1. Troubleshooting 65


1 Troubleshooting

1.1 Display board

1.1.1 Icon explanation on indoor display board (Cassette).

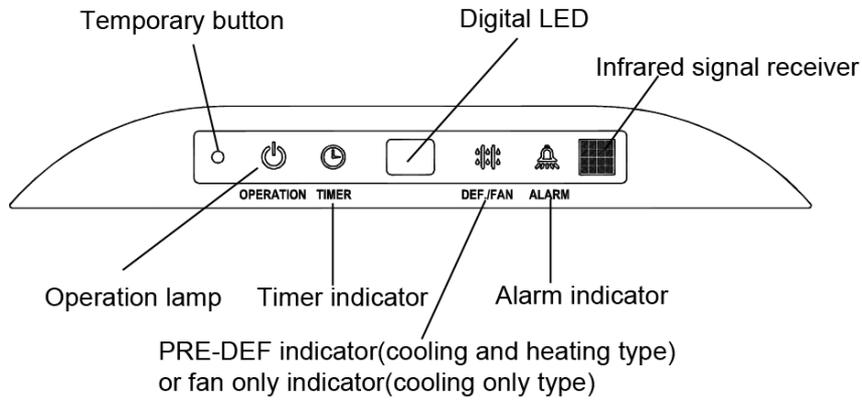

1.1.2 Icon explanation on indoor display board (Duct)

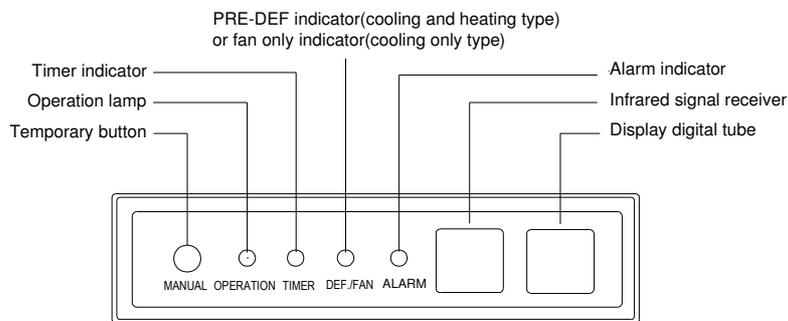


1.2 Indoor unit malfunction

NO.	Malfunction	Defrosting lamp	Alarm lamp	Running lamp	Timer lamp	Display(digital tube)
1	Communication malfunction between indoor and outdoor units.	X	X	X	☆	E1
2	Open or short circuit of T1 temperature sensor	X	X	☆	X	E2
3	Open or short circuit of T2 temperature sensor	X	X	☆	X	E3
4	Open or short circuit of T2B temperature sensor	X	X	☆	X	E4
5	Full-water malfunction	X	☆	X	X	EE
6	Indoor EEPROM malfunction	☆	X	X	X	E7
7	Outdoor unit malfunction	X	◎	X	X	Ed
8	Indoor fan speed is out of control	☆	☆	X	X	E8
9	Communication malfunction between main PCB and up-down panel PCB <i>Control remoto cableado mal conectado.</i>	☆	☆	☆	X	F0
10	Up-down panel malfunction	☆	☆	X	☆	F1
11	Up-down panel is not closed	☆	☆	X	O	F2
12	Communication malfunction between master unit and slave unit	X	☆	X	☆	F3
13	Other malfunction of master unit or slave unit	X	☆	☆	X	F4

O (on) X(off) ☆(flash at 5Hz) ◎(flash at 0.5Hz)


1.2.1 Open or short circuit of temperature sensor

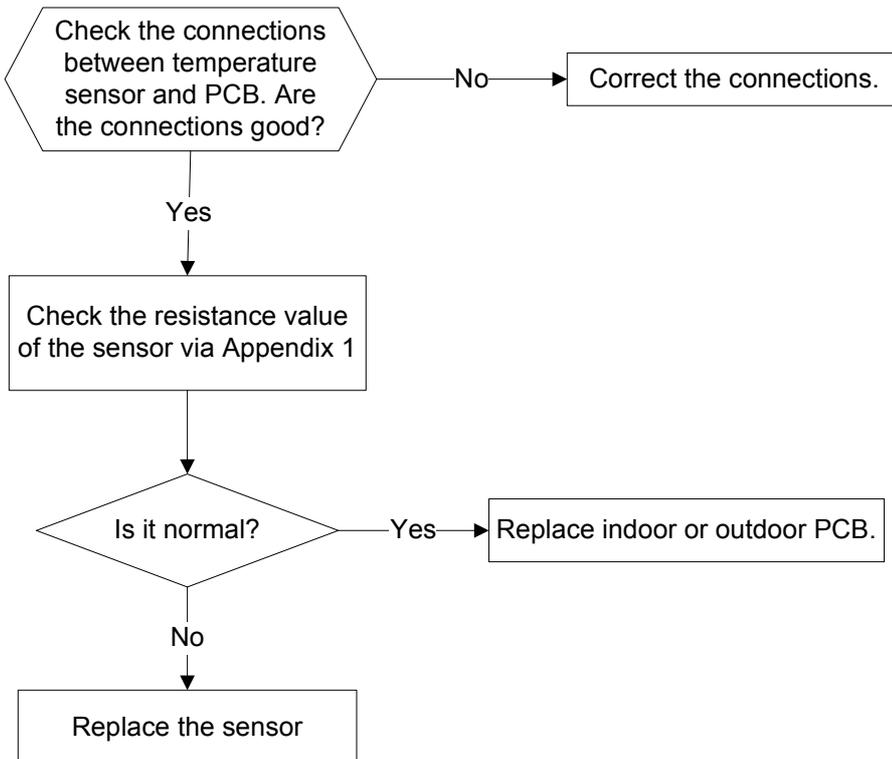


1.3 Outdoor unit malfunction

Display	Malfunction or Protection
E0	Outdoor EEPROM malfunction
E2	Indoor / outdoor units communication error
E3	Communication malfunction between IPM board and outdoor main board
E4	Open or short circuit of T3, T4, TP (Sonda Descarga) o TH (Sonda Disipador)
E5	Voltage protection of compressor
P0	Top temperature protection of compressor
P1	High pressure protection(Only for 48K~60K)
P2	Low pressure protection(Only for 48K~60K)
P3	Current protection of compressor
P4	Discharge temperature protection of compressor
P5	High temperature protection of condenser
P6	IPM module protection
P7	High temperature protection of evaporator


1. E0 malfunction

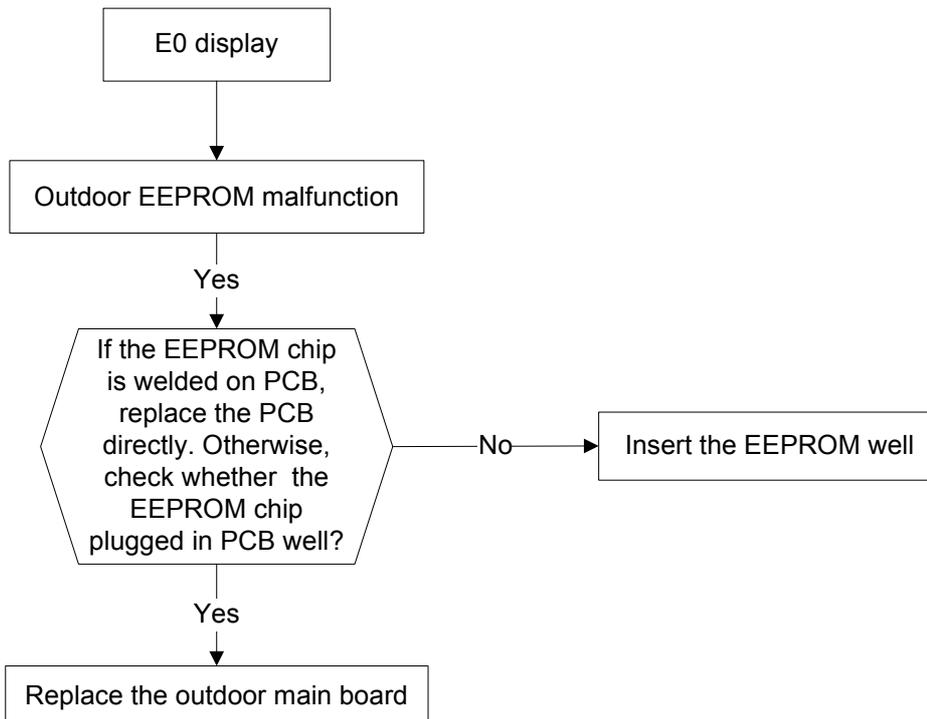

2. E2 malfunction

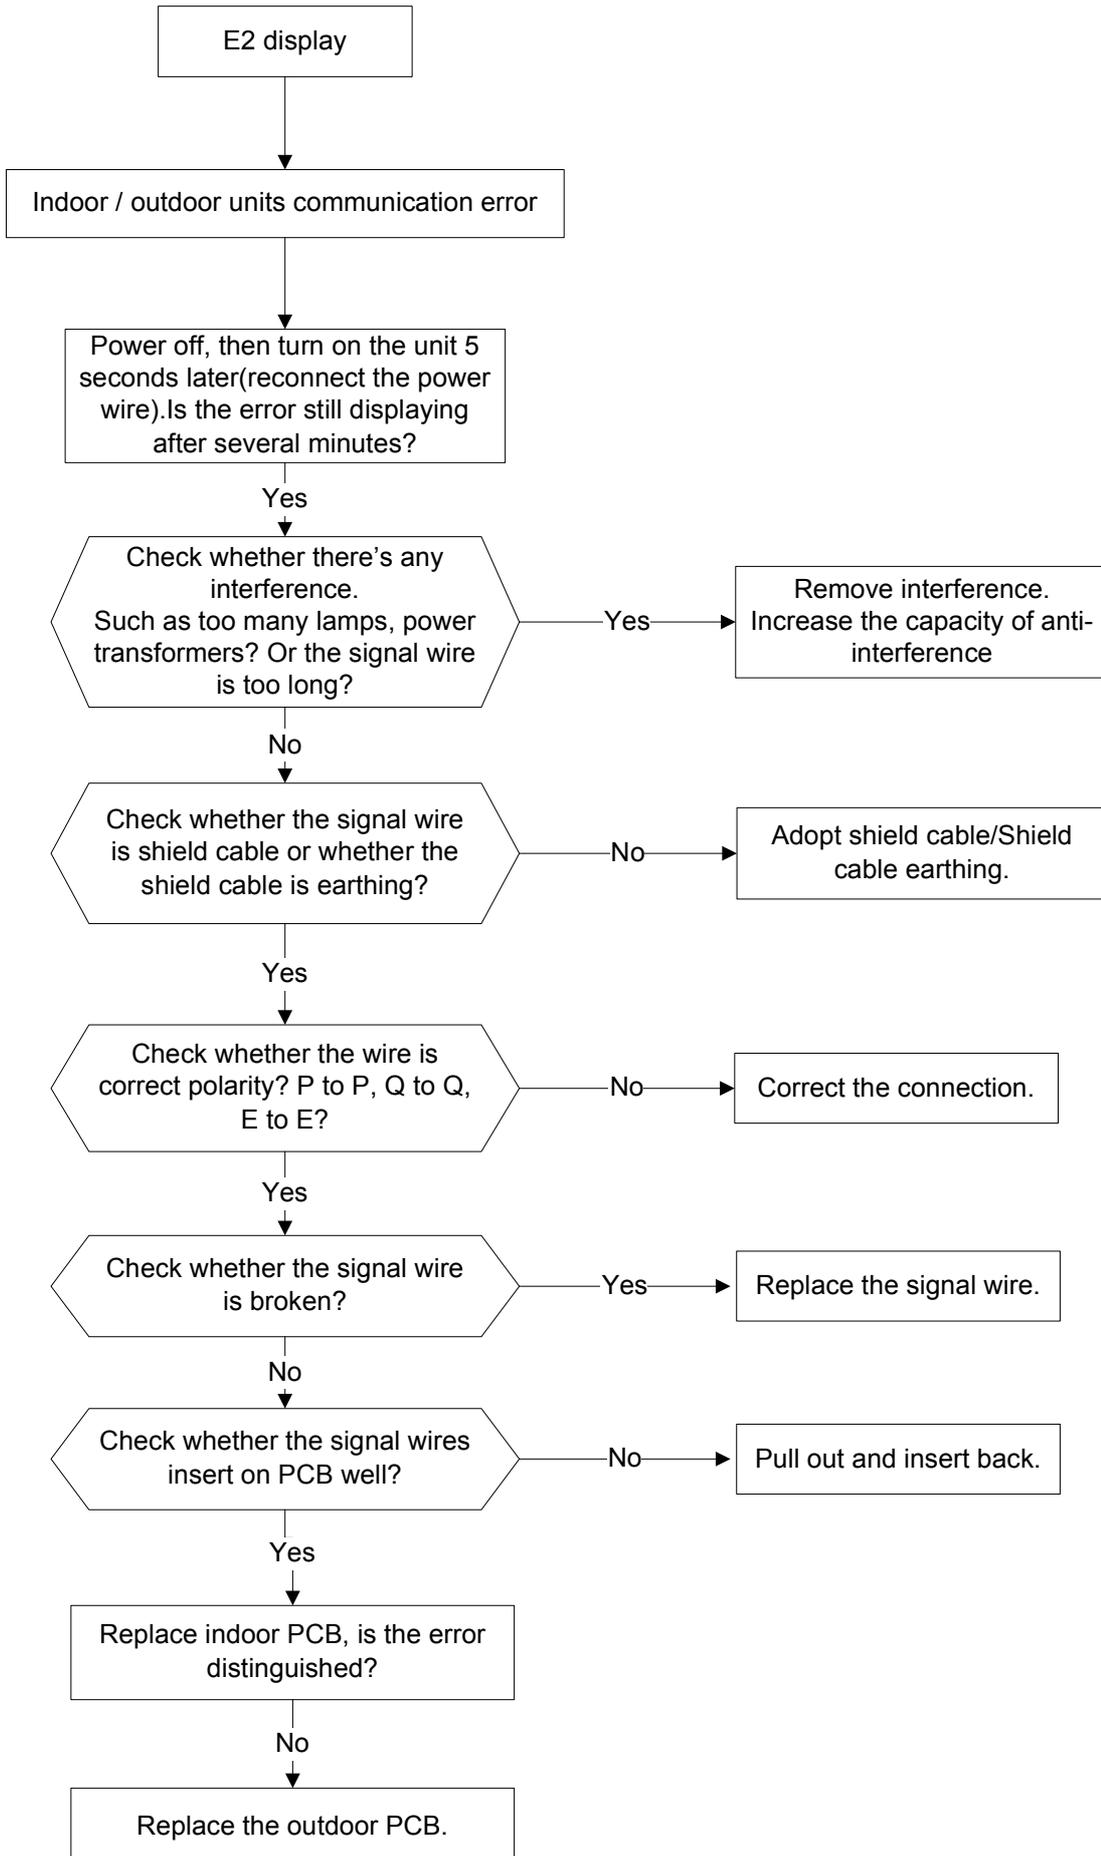


3. E3 malfunction

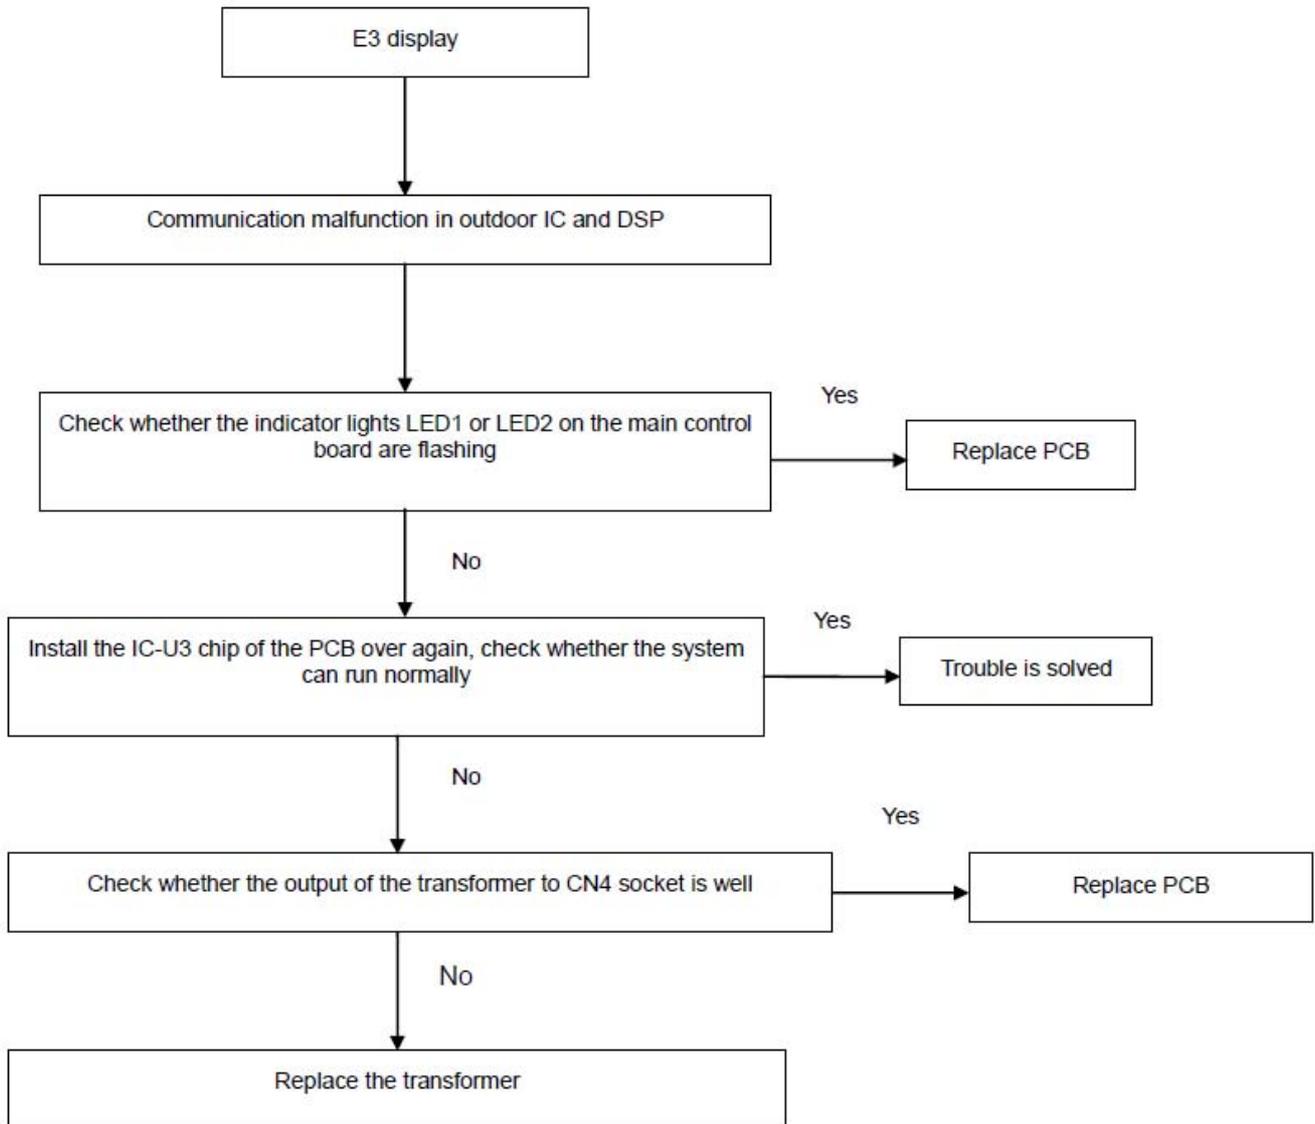


4. E4 malfunction


NOTA: Revisar todas las sondas

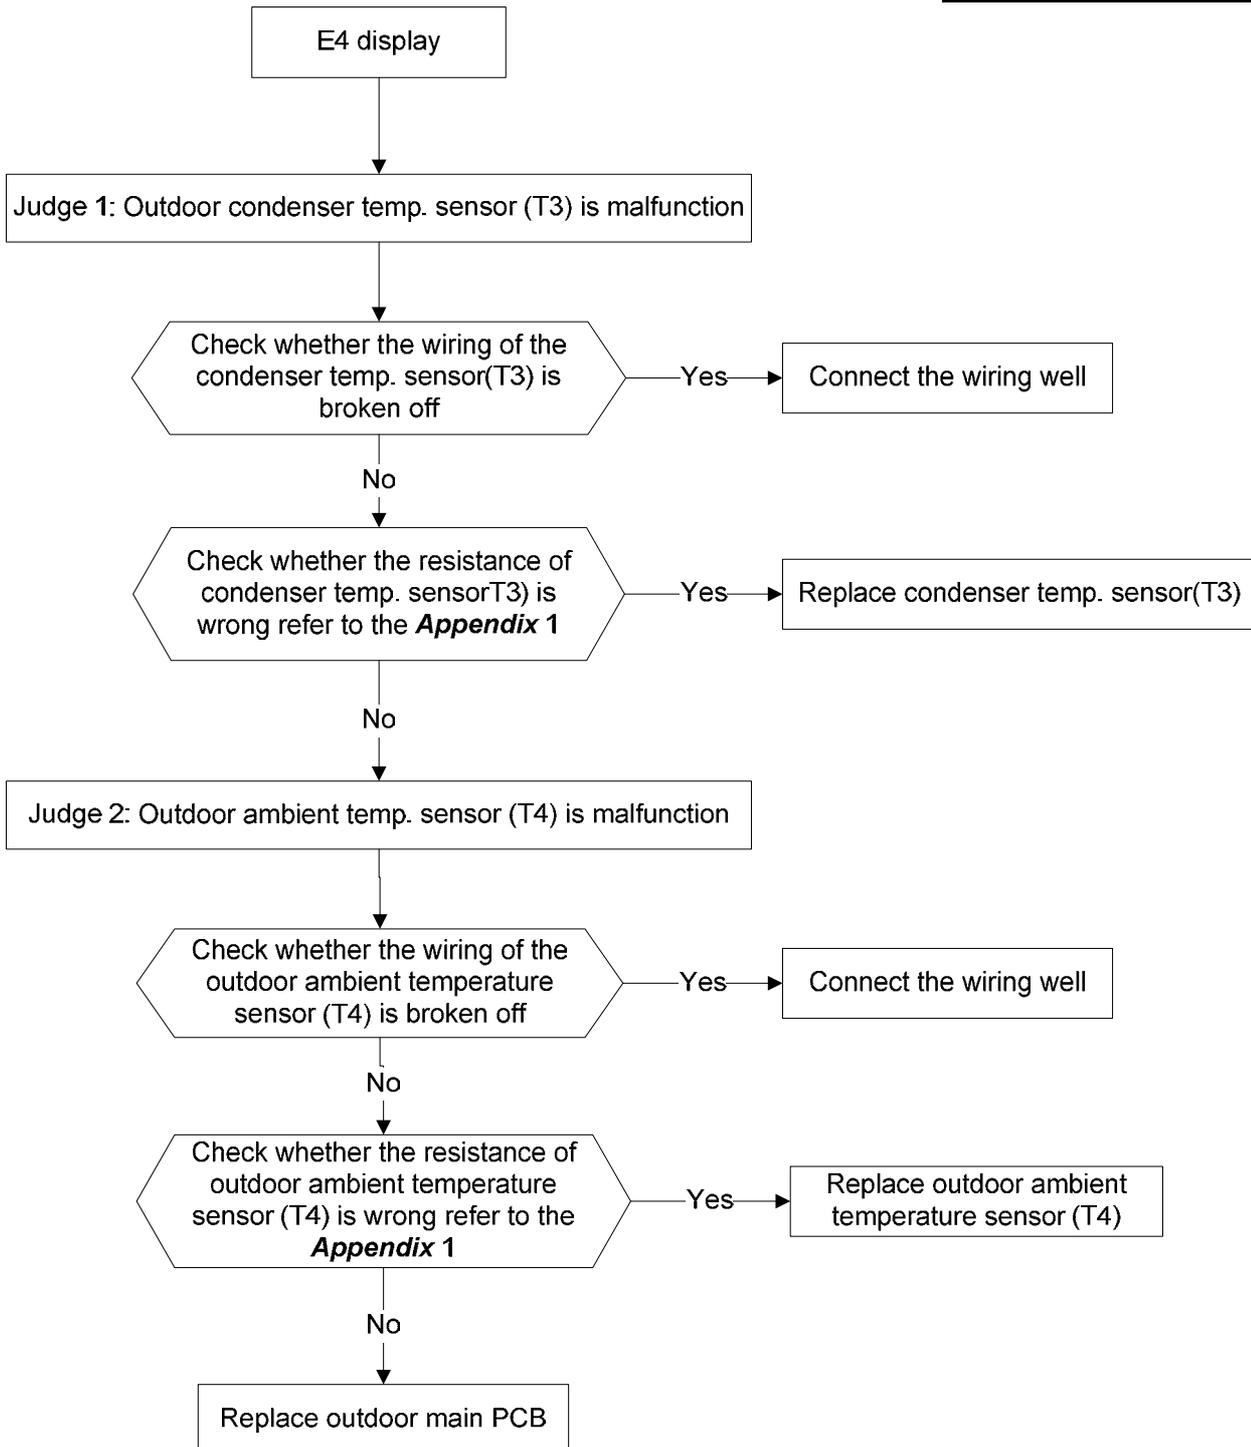


5. E5 malfunction (For three phases units)

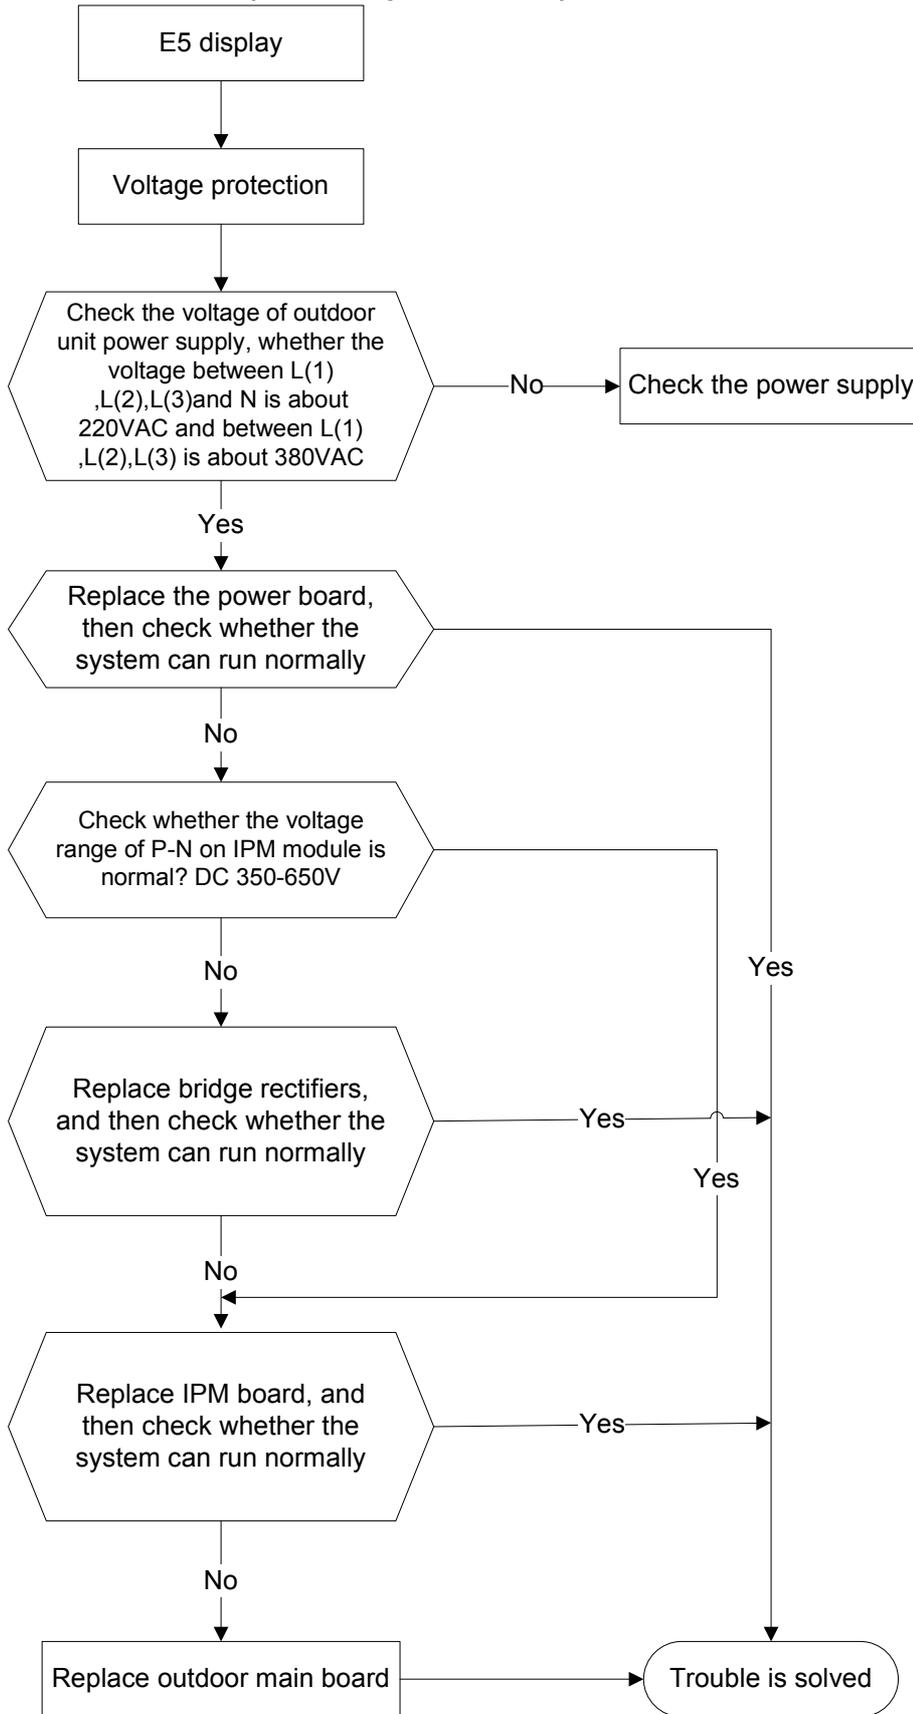


6. P0 malfunction

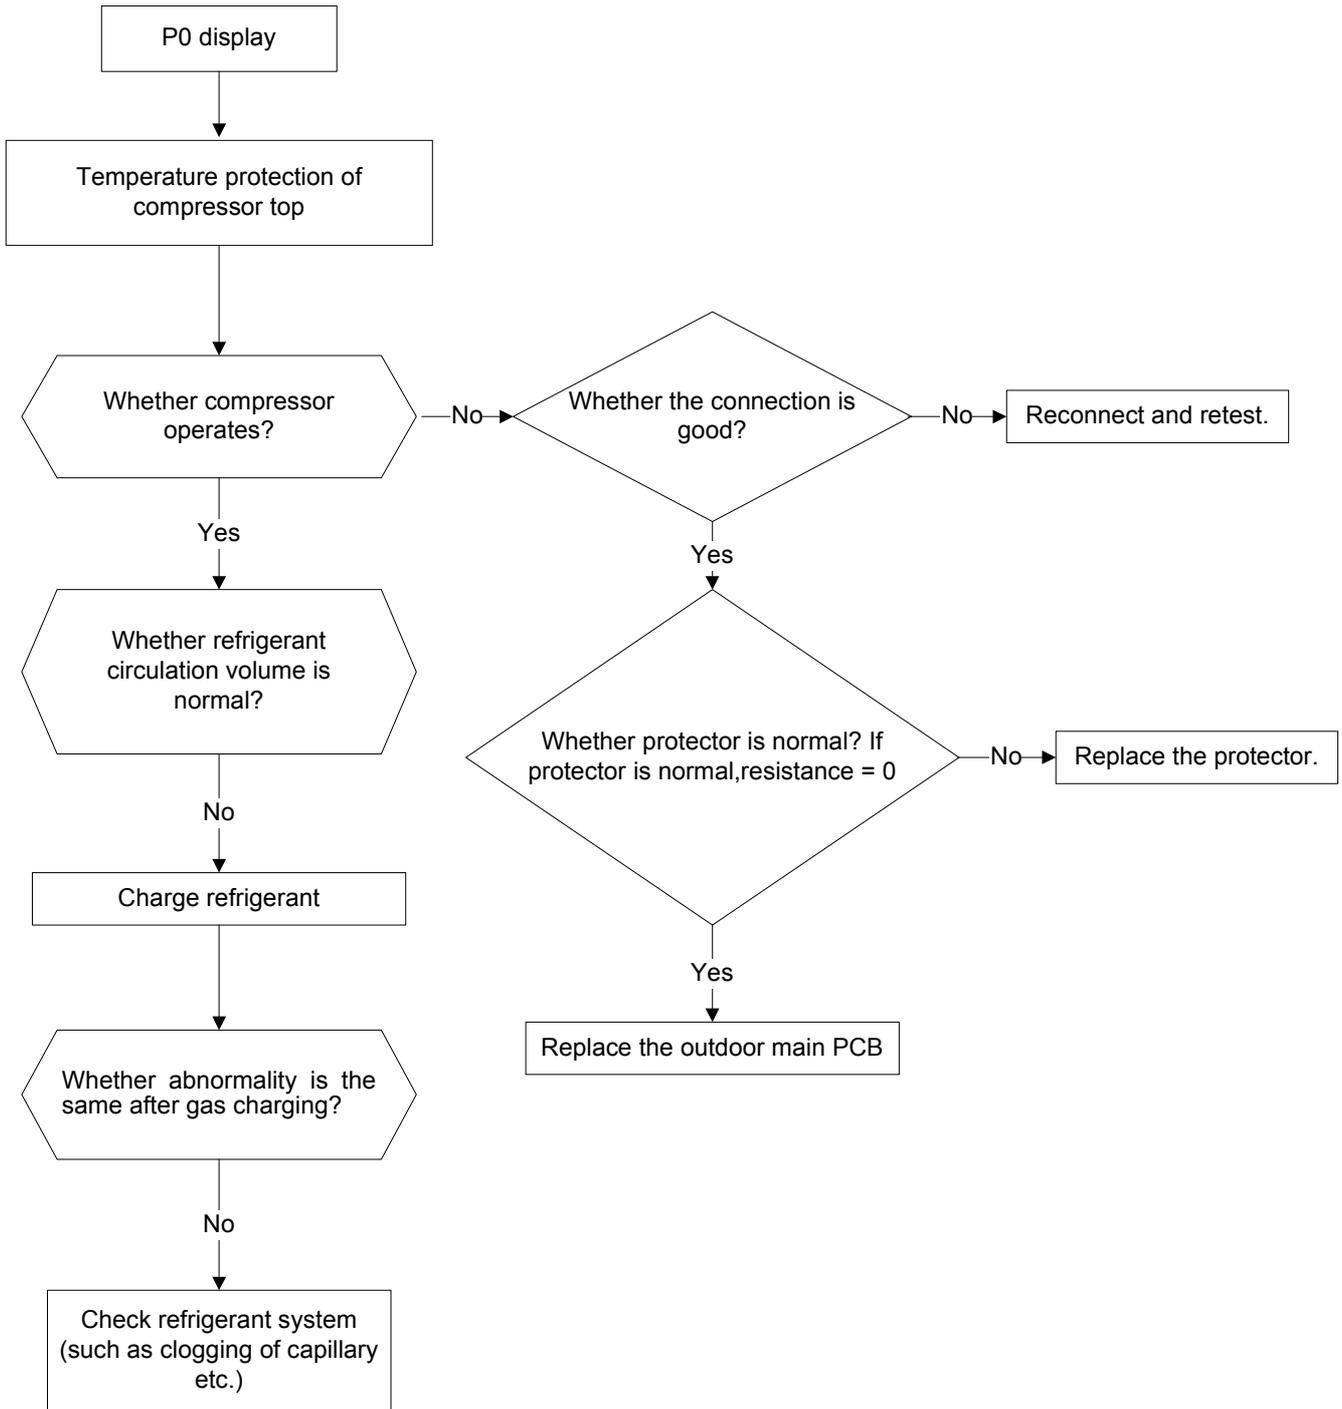


7. P1 malfunction

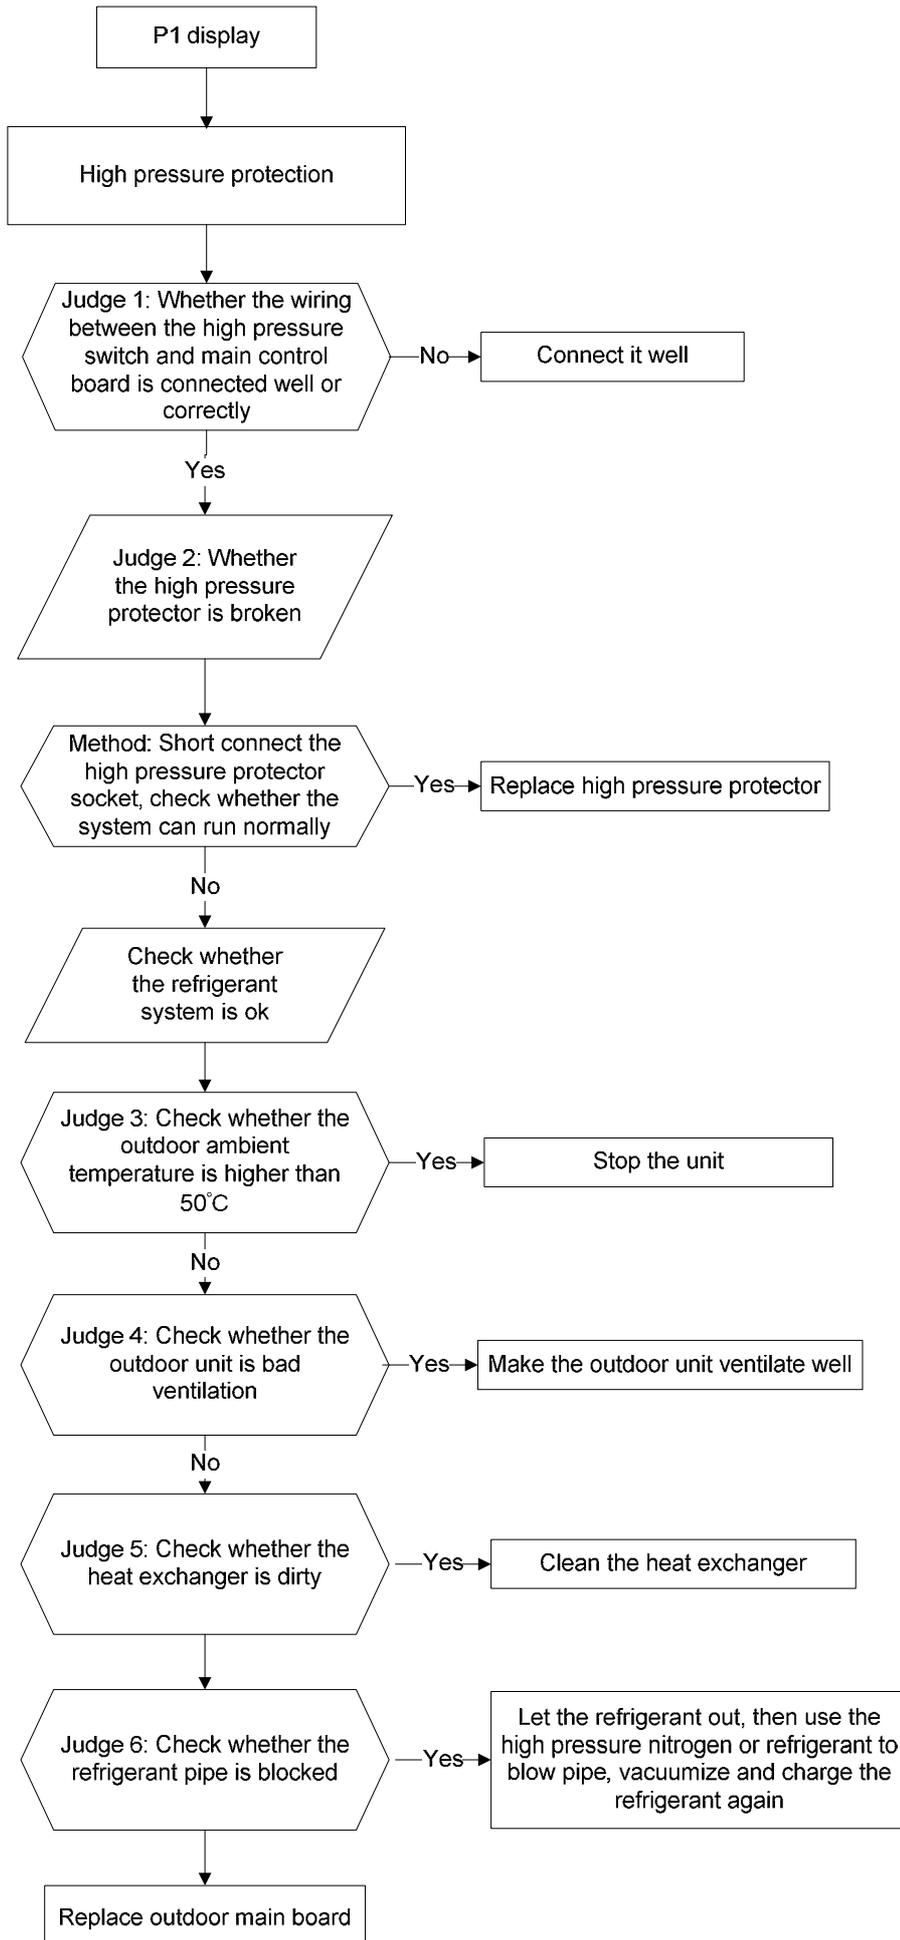

8. P2 malfunction

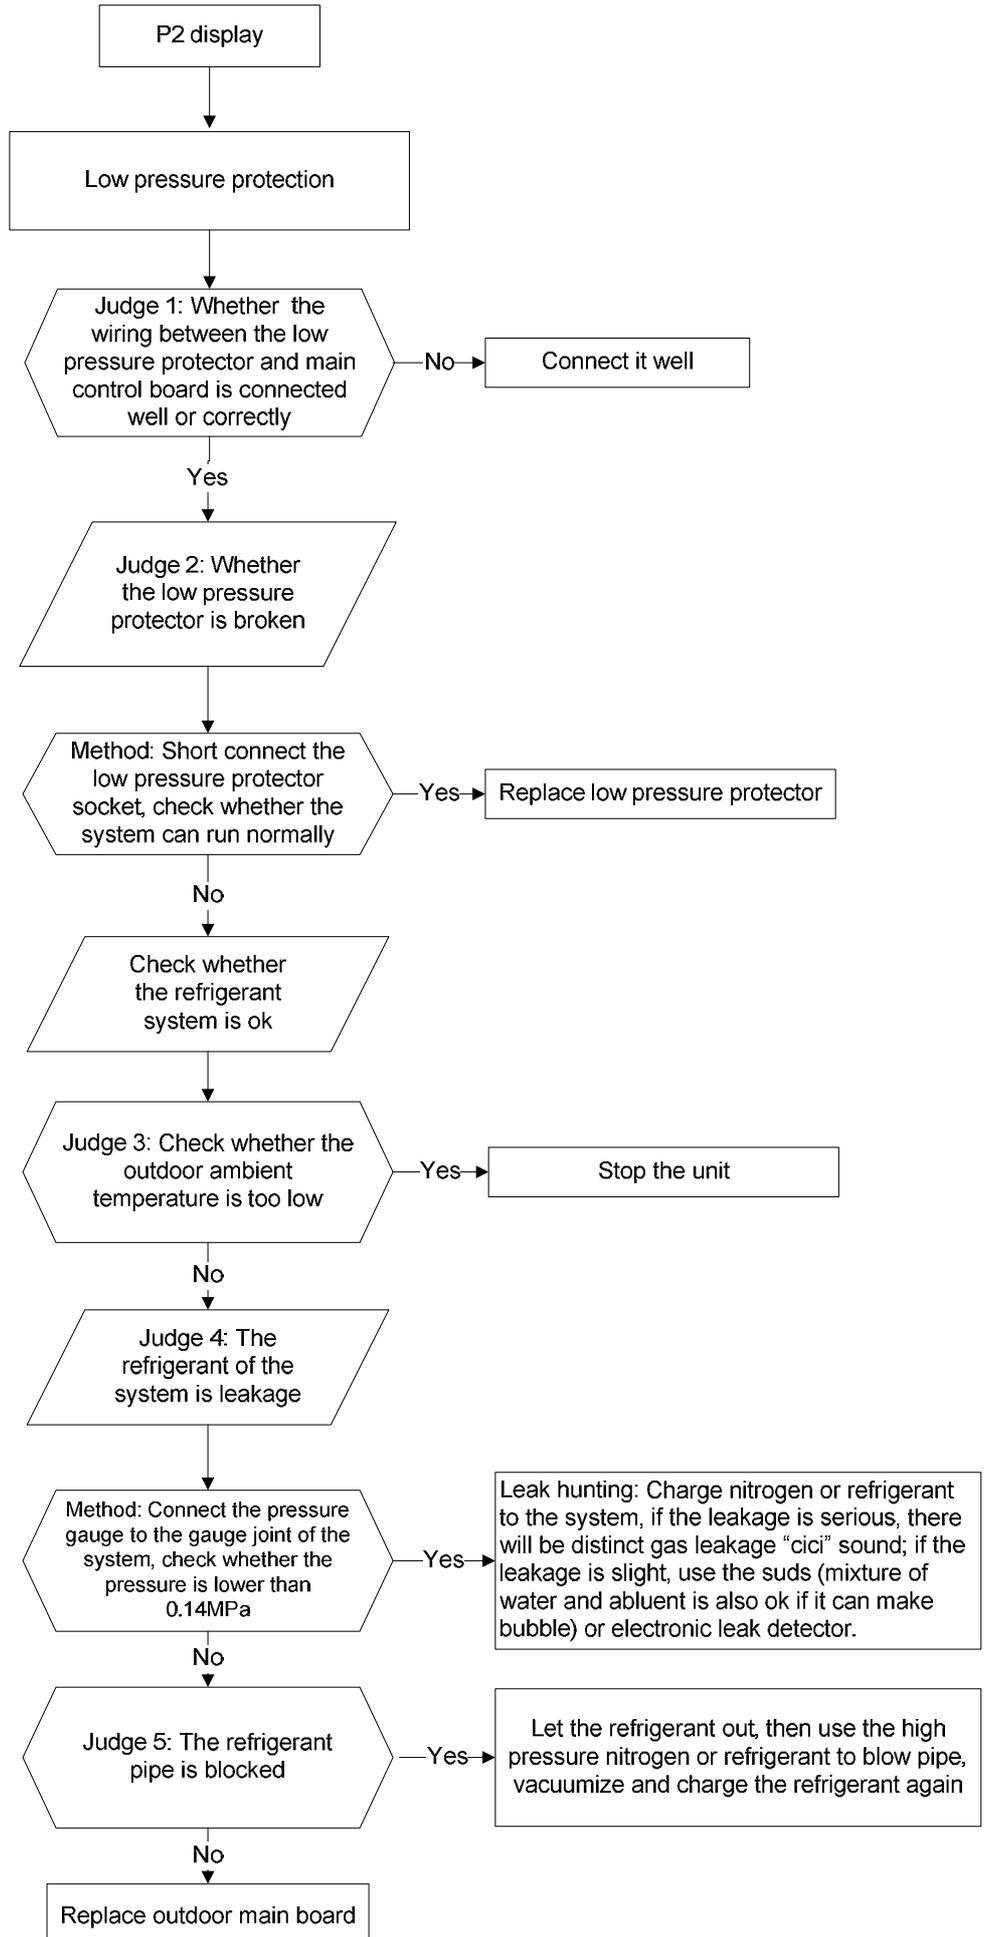


9. P3 malfunction

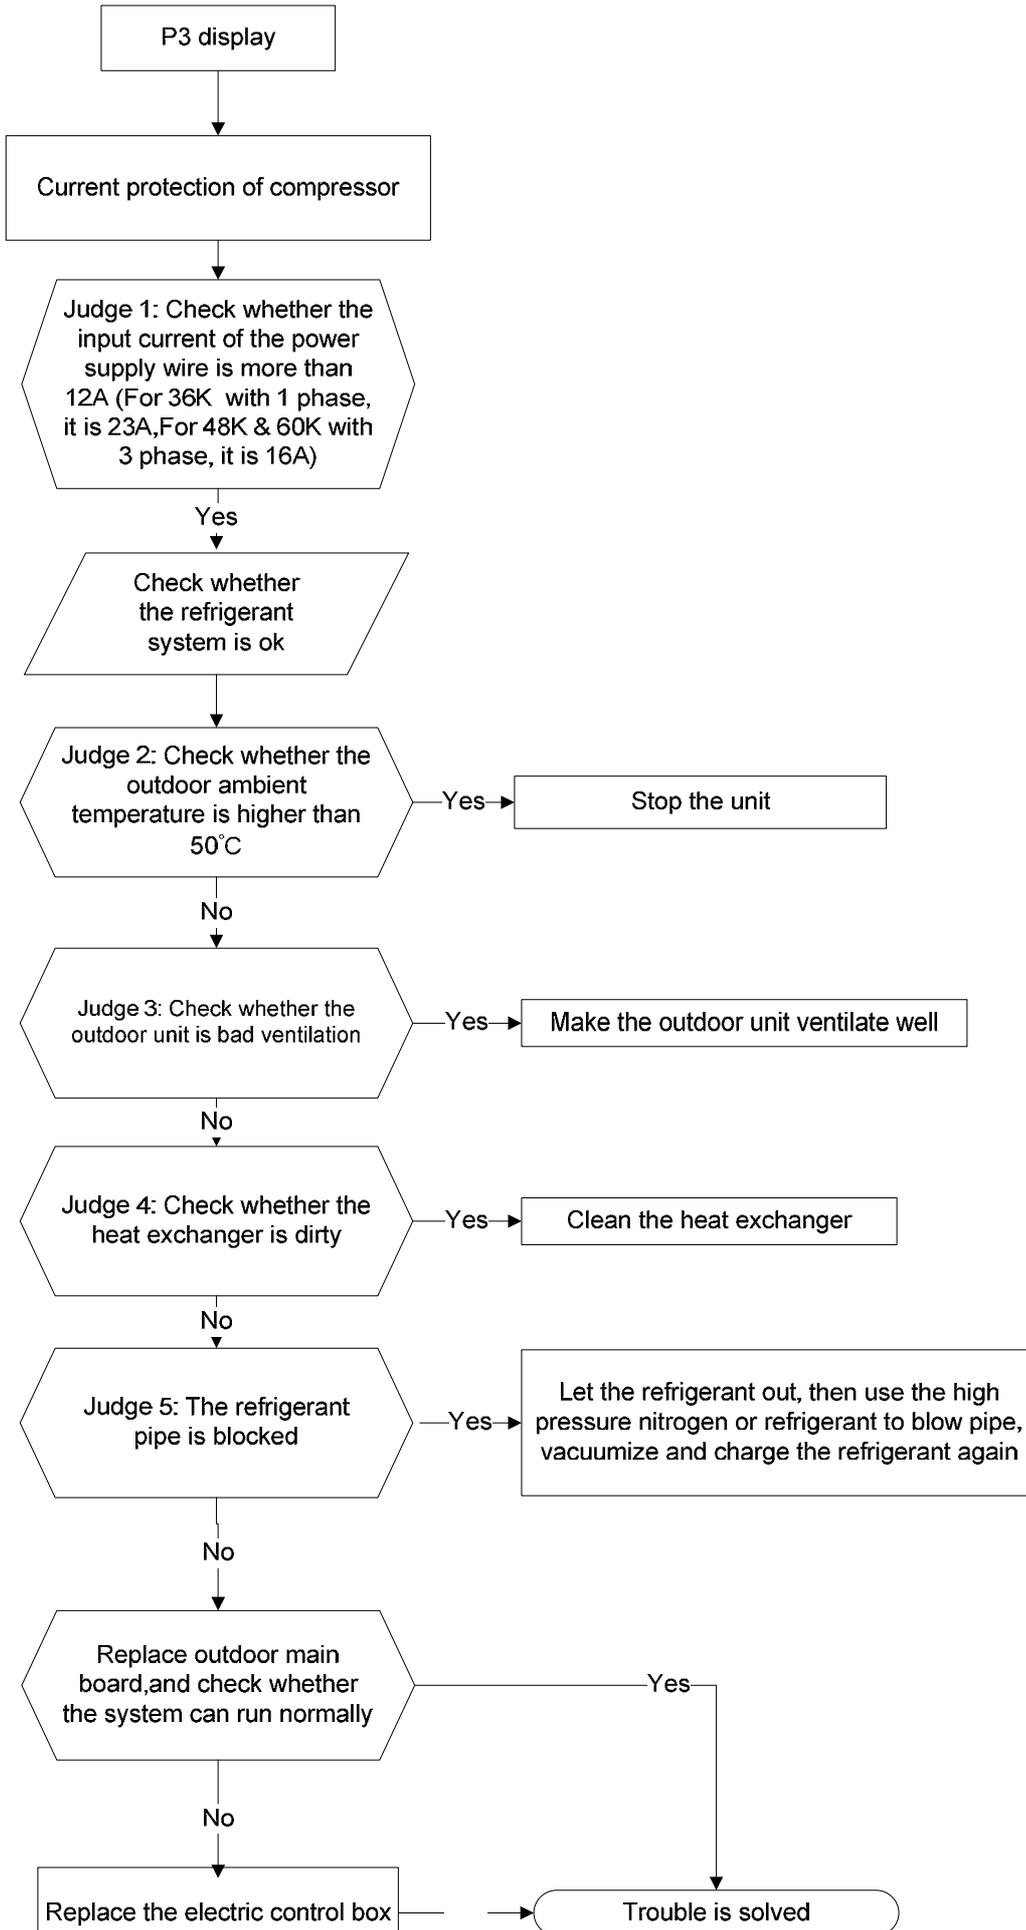


10. P4 malfunction

When compressor discharge temperature is higher than 115°C, the unit will stop, and unit runs again when compressor discharge temperature is lower than 90°C.

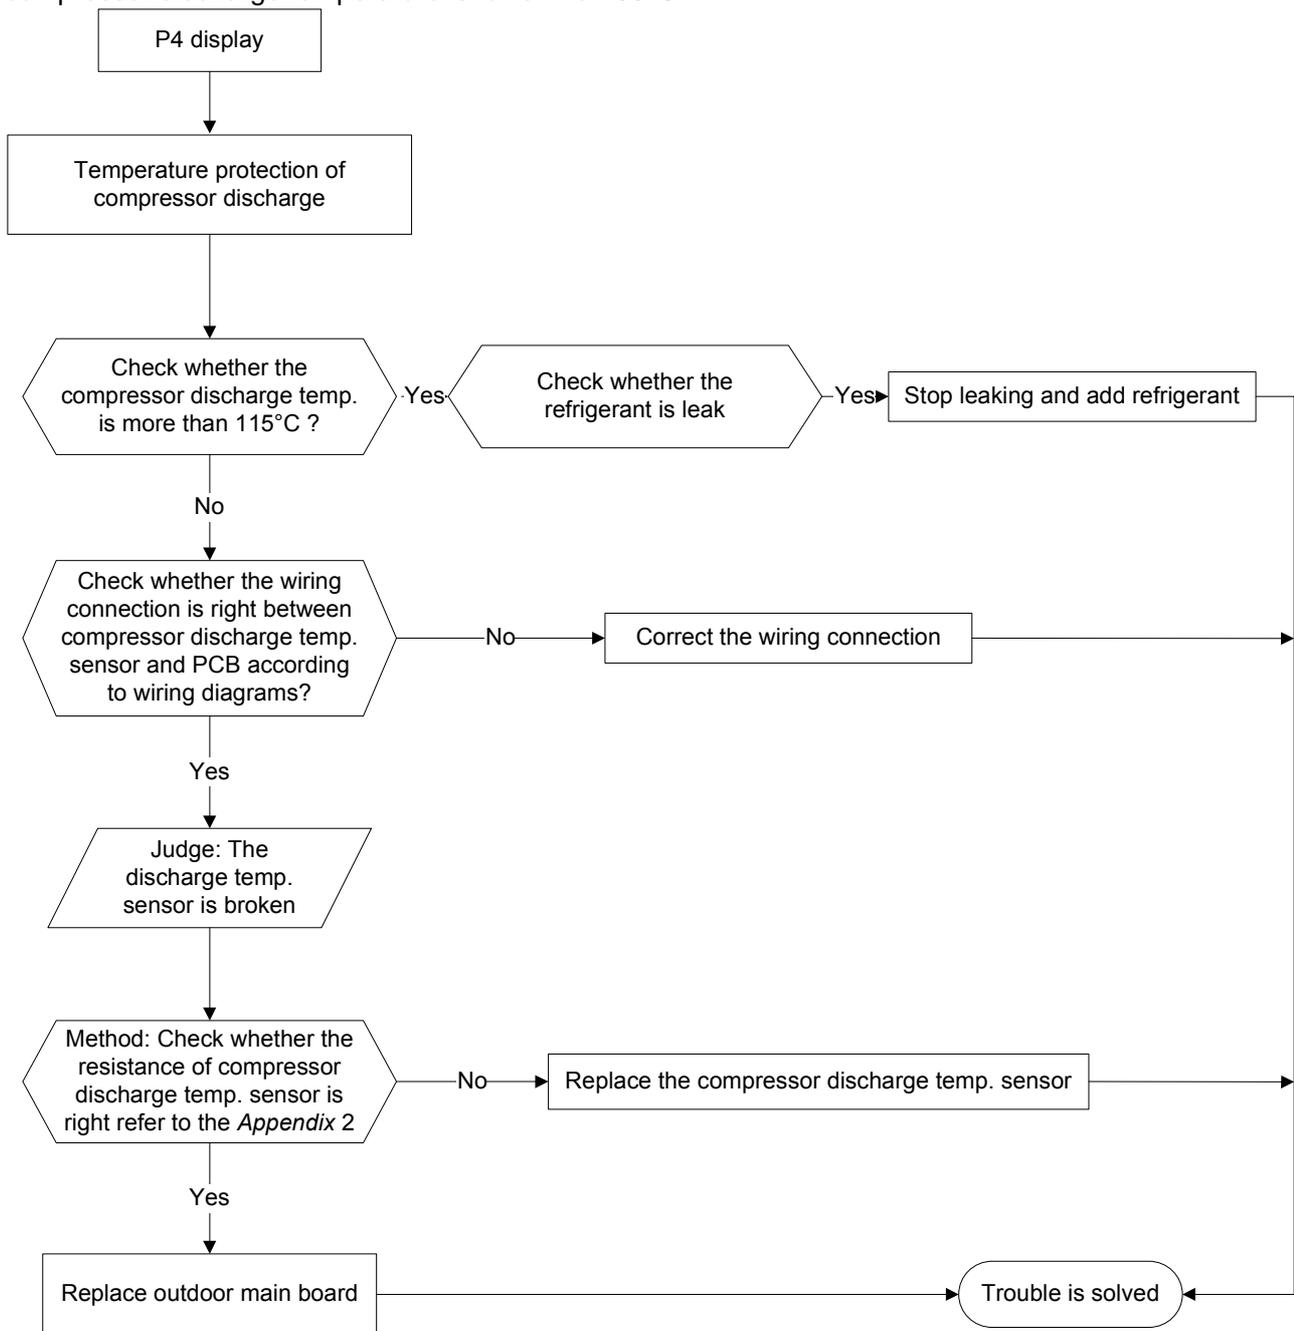


11. P5 malfunction


When condenser high temp. is more than 65°C, the unit will stop, and unit runs again when outdoor pipe temp. less than 52°C.

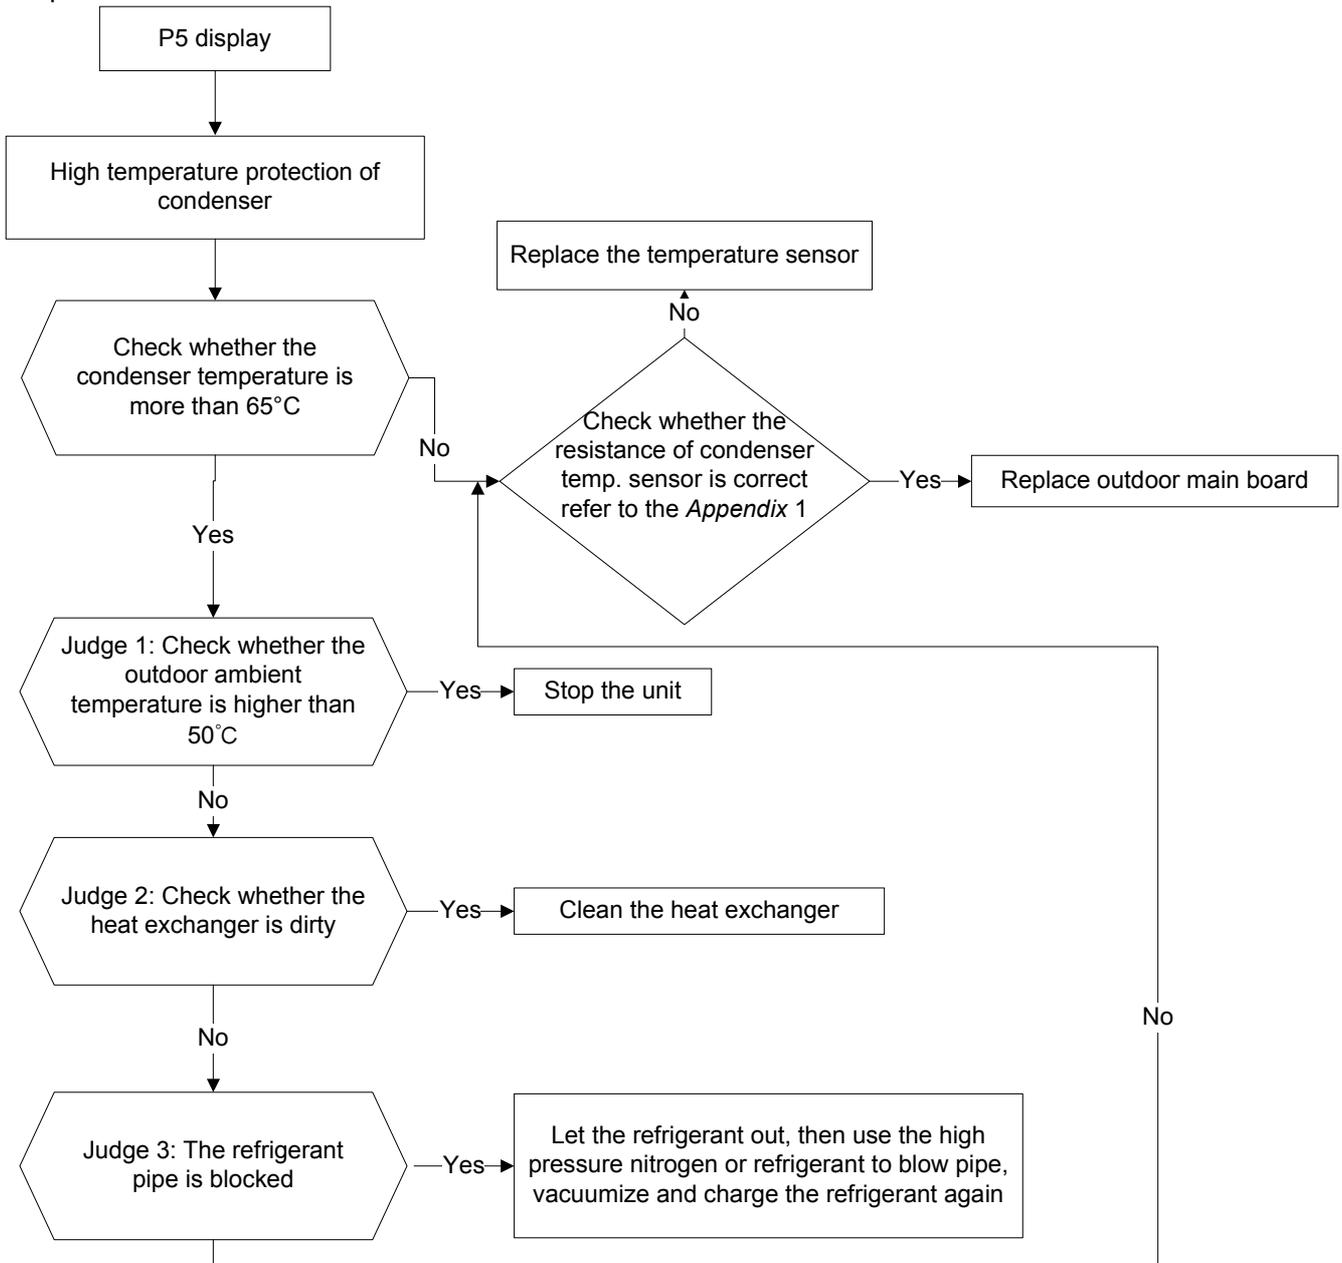

12. P6 malfunction (For three phases units)

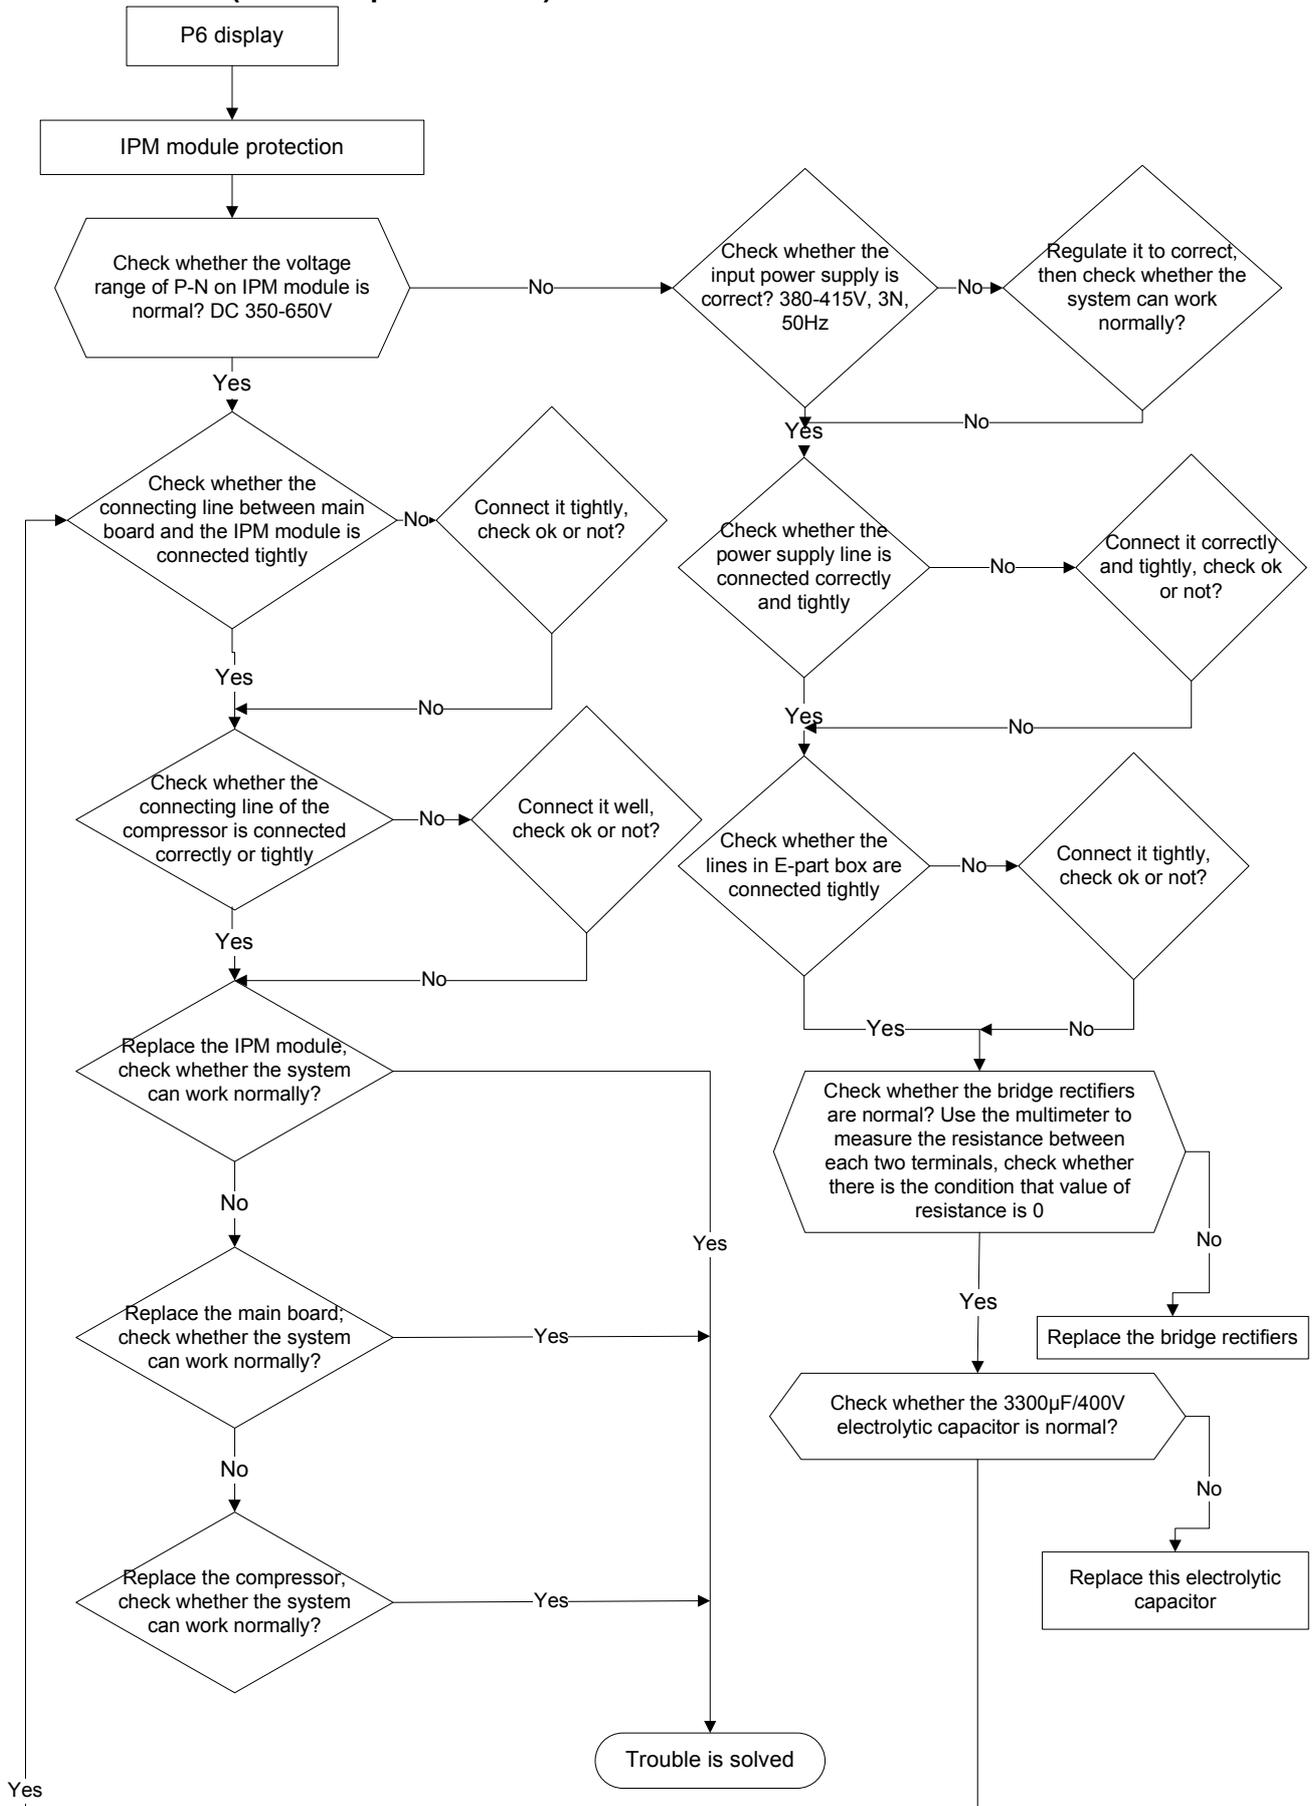

13. P7 malfunction

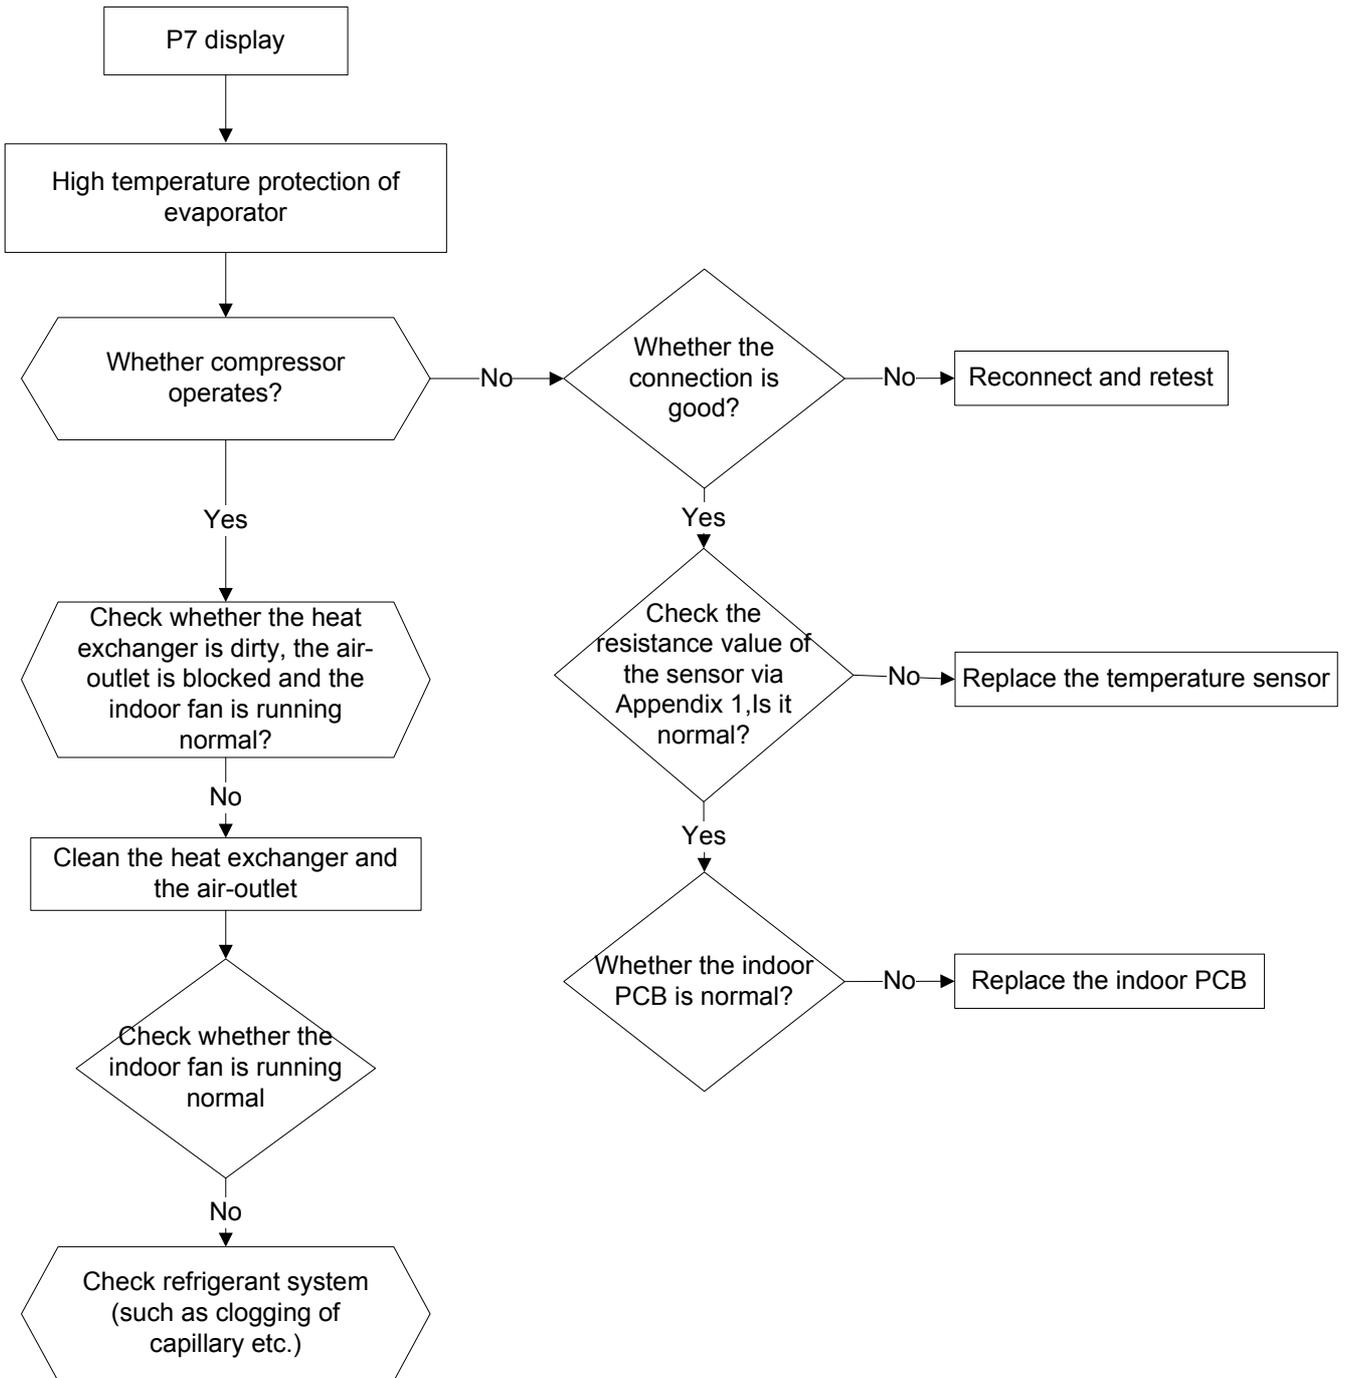

Appendix 1 Temperature Sensor Resistance Value Table (°C--K)

°C	K Ohm	°C	K Ohm	°C	K Ohm	°C	K Ohm
-20	115.266	20	12.6431	60	2.35774	100	0.62973
-19	108.146	21	12.0561	61	2.27249	101	0.61148
-18	101.517	22	11.5000	62	2.19073	102	0.59386
-17	96.3423	23	10.9731	63	2.11241	103	0.57683
-16	89.5865	24	10.4736	64	2.03732	104	0.56038
-15	84.2190	25	10.0000	65	1.96532	105	0.54448
-14	79.3110	26	9.55074	66	1.89627	106	0.52912
-13	74.5360	27	9.12445	67	1.83003	107	0.51426
-12	70.1698	28	8.71983	68	1.76647	108	0.49989
-11	66.0898	29	8.33566	69	1.70547	109	0.48600
-10	62.2756	30	7.97078	70	1.64691	110	0.47256
-9	58.7079	31	7.62411	71	1.59068	111	0.45957
-8	56.3694	32	7.29464	72	1.53668	112	0.44699
-7	52.2438	33	6.98142	73	1.48481	113	0.43482
-6	49.3161	34	6.68355	74	1.43498	114	0.42304
-5	46.5725	35	6.40021	75	1.38703	115	0.41164
-4	44.0000	36	6.13059	76	1.34105	116	0.40060
-3	41.5878	37	5.87359	77	1.29078	117	0.38991
-2	39.8239	38	5.62961	78	1.25423	118	0.37956
-1	37.1988	39	5.39689	79	1.21330	119	0.36954
0	35.2024	40	5.17519	80	1.17393	120	0.35982
1	33.3269	41	4.96392	81	1.13604	121	0.35042
2	31.5635	42	4.76253	82	1.09958	122	0.3413
3	29.9058	43	4.57050	83	1.06448	123	0.33246
4	28.3459	44	4.38736	84	1.03069	124	0.32390
5	26.8778	45	4.21263	85	0.99815	125	0.31559
6	25.4954	46	4.04589	86	0.96681	126	0.30754
7	24.1932	47	3.88673	87	0.93662	127	0.29974
8	22.5662	48	3.73476	88	0.90753	128	0.29216
9	21.8094	49	3.58962	89	0.87950	129	0.28482
10	20.7184	50	3.45097	90	0.85248	130	0.27770
11	19.6891	51	3.31847	91	0.82643	131	0.27078
12	18.7177	52	3.19183	92	0.80132	132	0.26408
13	17.8005	53	3.07075	93	0.77709	133	0.25757
14	16.9341	54	2.95896	94	0.75373	134	0.25125
15	16.1156	55	2.84421	95	0.73119	135	0.24512
16	15.3418	56	2.73823	96	0.70944	136	0.23916
17	14.6181	57	2.63682	97	0.68844	137	0.23338
18	13.9180	58	2.53973	98	0.66818	138	0.22776
19	13.2631	59	2.44677	99	0.64862	139	0.22231

Appendix 2

Unit: □---K		Discharge temp. sensor table					
-20	542.7	20	68.66	60	13.59	100	3.702
-19	511.9	21	65.62	61	13.11	101	3.595
-18	483	22	62.73	62	12.65	102	3.492
-17	455.9	23	59.98	63	12.21	103	3.392
-16	430.5	24	57.37	64	11.79	104	3.296
-15	406.7	25	54.89	65	11.38	105	3.203
-14	384.3	26	52.53	66	10.99	106	3.113
-13	363.3	27	50.28	67	10.61	107	3.025
-12	343.6	28	48.14	68	10.25	108	2.941
-11	325.1	29	46.11	69	9.902	109	2.86
-10	307.7	30	44.17	70	9.569	110	2.781
-9	291.3	31	42.33	71	9.248	111	2.704
-8	275.9	32	40.57	72	8.94	112	2.63
-7	261.4	33	38.89	73	8.643	113	2.559
-6	247.8	34	37.3	74	8.358	114	2.489
-5	234.9	35	35.78	75	8.084	115	2.422
-4	222.8	36	34.32	76	7.82	116	2.357
-3	211.4	37	32.94	77	7.566	117	2.294
-2	200.7	38	31.62	78	7.321	118	2.233
-1	190.5	39	30.36	79	7.086	119	2.174
0	180.9	40	29.15	80	6.859	120	2.117
1	171.9	41	28	81	6.641	121	2.061
2	163.3	42	26.9	82	6.43	122	2.007
3	155.2	43	25.86	83	6.228	123	1.955
4	147.6	44	24.85	84	6.033	124	1.905
5	140.4	45	23.89	85	5.844	125	1.856
6	133.5	46	22.89	86	5.663	126	1.808
7	127.1	47	22.1	87	5.488	127	1.762
8	121	48	21.26	88	5.32	128	1.717
9	115.2	49	20.46	89	5.157	129	1.674
10	109.8	50	19.69	90	5	130	1.632
11	104.6	51	18.96	91	4.849		
12	99.69	52	18.26	92	4.703		
13	95.05	53	17.58	93	4.562		
14	90.66	54	16.94	94	4.426		
15	86.49	55	16.32	95	4.294	B(25/50)=3950K	
16	82.54	56	15.73	96	4.167		
17	78.79	57	15.16	97	4.045	R(90°C)=5KΩ±3%	
18	75.24	58	14.62	98	3.927		
19	71.86	59	14.09	99	3.812		

Appendix 3. Check button

There is a check switch in outdoor PCB.

Press the switch SW1 to check the states of unit when the unit is running.

Press the switch N times it will display the content corresponding to No. N. After getting into the check function, it will display No. N with 1.5s, meanwhile the low bit decimal of digit display flashing, indicated to get into the check function display. After 1.5s, it will display the content corresponding to No. N. the digital display tube will display the follow procedure when push SW1 each time.

N	Display	Remark		
00	Normal display	Display running frequency, running state or malfunction code		
01	Indoor unit capacity demand code	Actual data*HP*10 If capacity demand code is higher than 99, the digital display tube will show single digit and tens digit. (For example, the digital display tube show "5.0",it means the capacity demand is 15. the digital display tube show "60",it means the capacity demand is 6.0)		
02	Amendatory capacity demand code			
03	The frequency after the capacity requirement transfer			
04	The frequency after the frequency limit			
05	The frequency of sending to 341			
06	Indoor unit evaporator outlet temp.(heating T2, cooling T2B)	If the temp. is lower than 0 degree, the digital display tube will show "0".If the temp. is higher than 70 degree, the digital display tube will show "70".		
07	Condenser pipe temp.(T3)	If the temp. is lower than -9 degree, the digital display tube will show "-9".If the temp. is higher than 70 degree, the digital display tube will show "70". If the indoor unit is not connected, the digital display tube will show: "—"		
08	Outdoor ambient temp.(T4)			
09	Compressor discharge temp.(Tp)	The display value is between 13~129 degree. If the temp. is lower than 13 degree, the digital display tube will show "13".If the temp. is higher than 99 degree, the digital display tube will show single digit and tens digit. (For example, the digital display tube show "0.5",it means the compressor discharge temp. is 105 degree. the digital display tube show "1.6",it means the compressor discharge temp. is 116 degree)		
10	AD value of current	The display value is hex number.		
11	AD value of voltage			
12	Indoor unit running mode code	Off:0, Fan only 1,Cooling:2, Heating:3		
13	Outdoor unit running mode code	Off:0, Fan only 1,Cooling:2, Heating:3, Forced cooling:4		
14	EXV open angle	Actual data/4. If the value is higher than 99, the digital display tube will show single digit and tens digit. For example ,the digital display tube show "2.0",it means the EXV open angle is 120×4=480p.)		
15	Frequency limit symbol	Bit7	Frequency limit caused by IGBT radiator	The display value is hex number. For example, the digital display tube show 2A,then Bit5=1, Bit3=1, Bit1=1. It means frequency limit caused by T4,T3 and current.
		Bit6	Frequency limit caused by PFC	
		Bit5	Frequency limit caused by T4.	
		Bit4	Frequency limit caused by T2.	

		Bit3	Frequency limit caused by T3.	
		Bit2	Frequency limit caused by Tp.	
		Bit1	Frequency limit caused by current	
		Bit0	Frequency limit caused by voltage	
16	DC fan motor speed			
17	IGBT radiator temp.	The display value is between 30~120 degree. If the temp. is lower than 30 degree, the digital display tube will show "30". If the temp. is higher than 99 degree, the digital display tube will show single digit and tens digit. (For example, the digital display tube show "0.5", it means the IGBT radiator temp. is 105 degree. the digital display tube show "1.6", it means the IGBT radiator temp. is 116 degree)		
18	Indoor unit number	The indoor unit can communicate with outdoor unit well.		
19	Condenser pipe temp. of 1# indoor unit	If the temp. is lower than 0 degree, the digital display tube will show "0". If the temp. is higher than 70 degree, the digital display tube will show "70". If the capacity demand is 0, , the digital display tube will show "0. If the indoor unit is not connected, the digital display tube will show: "——"(heating T2, cooling T2B)		
20	Condenser pipe temp. of 2# indoor unit			
21	Condenser pipe temp. of 3# indoor unit			
22	1# Indoor unit capacity demand code	Actual data*HP*10 If capacity demand code is higher than 99, the digital display tube will show single digit and tens digit. (For example, the digital display tube show "5.0", it means the capacity demand is 15. the digital display tube show "60", it means the capacity demand is 6.0). If the indoor unit is not connected, the digital display tube will show: "——"		
23	2# Indoor unit capacity demand code			
24	3# Indoor unit capacity demand code			



ASK FOR MORE INFORMATION:

Phone: 93 446 27 80 - Fax: 93 456 90 32

eMail: mundoclima@salvadorescoda.com

TECHNICAL ASSISTANCE:

Phone: 93 652 53 57 - Fax: 93 635 45 08